



# Sony Action Cam HDR-AS15 Memory Card Replacement

Here, you will learn how to swap out the memory card in the Sony HDR-AS15.

Written By: Justin Calean



## INTRODUCTION

Are the videos in your device corrupted? Maybe you need more space for your spectacular videos? Here is a simple guide on how to remove or replace a memory card in the Sony HDR-AS15.

## Step 1 — Getting to the Memory Card



- To access the memory card, push left on the rear of the Action Cam. The rear panel should easily slide to the side.

## Step 2 — Removing the card



- After sliding the rear panel to the side, open the door outward to reveal the memory card slot and battery tray.
- Push in on the back of the memory card with the tip of your finger until you feel a click.
- Pinch the rear of the memory card that is protruding from the slot and pull on it until the memory card is removed.

To reassemble your device, follow these instructions in reverse order.