



# Sony Action Cam HDR-AS15 O-Ring Replacement

If the your waterproof case is leaking due to a faulty O-ring, you should replace it. You will learn how to replace the O-ring so your camera remains a little less wet underwater.

Written By: Justin Calean



This document was generated on 2019-09-19 01:28:20 PM (MST).

## INTRODUCTION

If you find your waterproof case not as watertight as you had hoped, you might want to replace the O-ring. You will need a tool to pry the O-ring from the case.

### **TOOLS:**

- [iFixit Opening Tools \(1\)](#)

### **PARTS:**

- [O-rings \(1\)](#)

## Step 1 — Open the Waterproof Case



- To open the case, push the yellow "Open" tab located at the bottom of the case.
- Pull out on the yellow tabs as indicated by the circles in the photo to unlock the lid. This may be a little tricky!
- Then, remove the lid.

## Step 2 — Pry the O-ring from the Groove



- Take the plastic opening tool and wedge it between the O-ring and the groove.
- Then, pry the O-ring until it is out of the groove.

## Step 3 — Remove the O-ring



- Now that the O-ring is out of the groove, remove the O-ring from the lid.

To reassemble your device, follow these instructions in reverse order.