



Sony Alpha 5100 Front Plate Replacement

This guide will help you open the front plate of your Sony Alpha 5100 camera.

Written By: Kevin Raggiani



INTRODUCTION

This guide can help you open the front plate of your Sony Alpha A5100. For this guide, you will need a plastic opening tool and a Phillips PH00 screwdriver head. You will need to be gentle while opening up the plate.

Step 1 — Battery



- Slide the power switch on the top of the camera to "off."
- Turn the camera over to the bottom, and push the latch towards the side marked "open" to release the battery cover.

Step 2



- Push the blue spring-loaded lever to release the battery.
- Remove the battery from the camera.

Step 3 — Front Plate




- Remove one 2mm Phillips #00 screw from the flash plate cover.
- Use the spudger to pop the plate off.
- Remove two 2mm Phillips #00 screws on the side of the camera.

Step 4



- Pop the memory card door open by gently lifting the door up.
- Remove two 2mm Phillips #00 screws from the side of the camera.
- Remove three 2mm Phillips #00 screws on the bottom of the camera.

Step 5

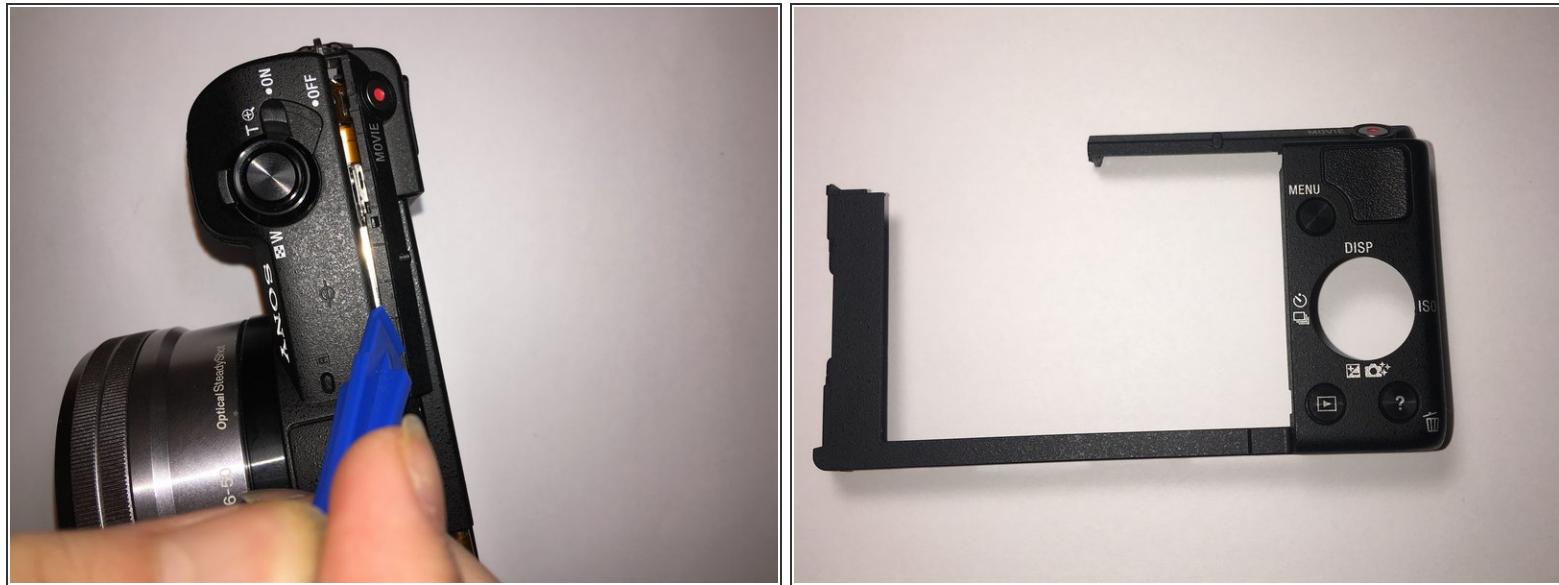

- Use the opening tool to gently pop the front plate apart from the body.

To reassemble your device, follow these instructions in reverse order.