


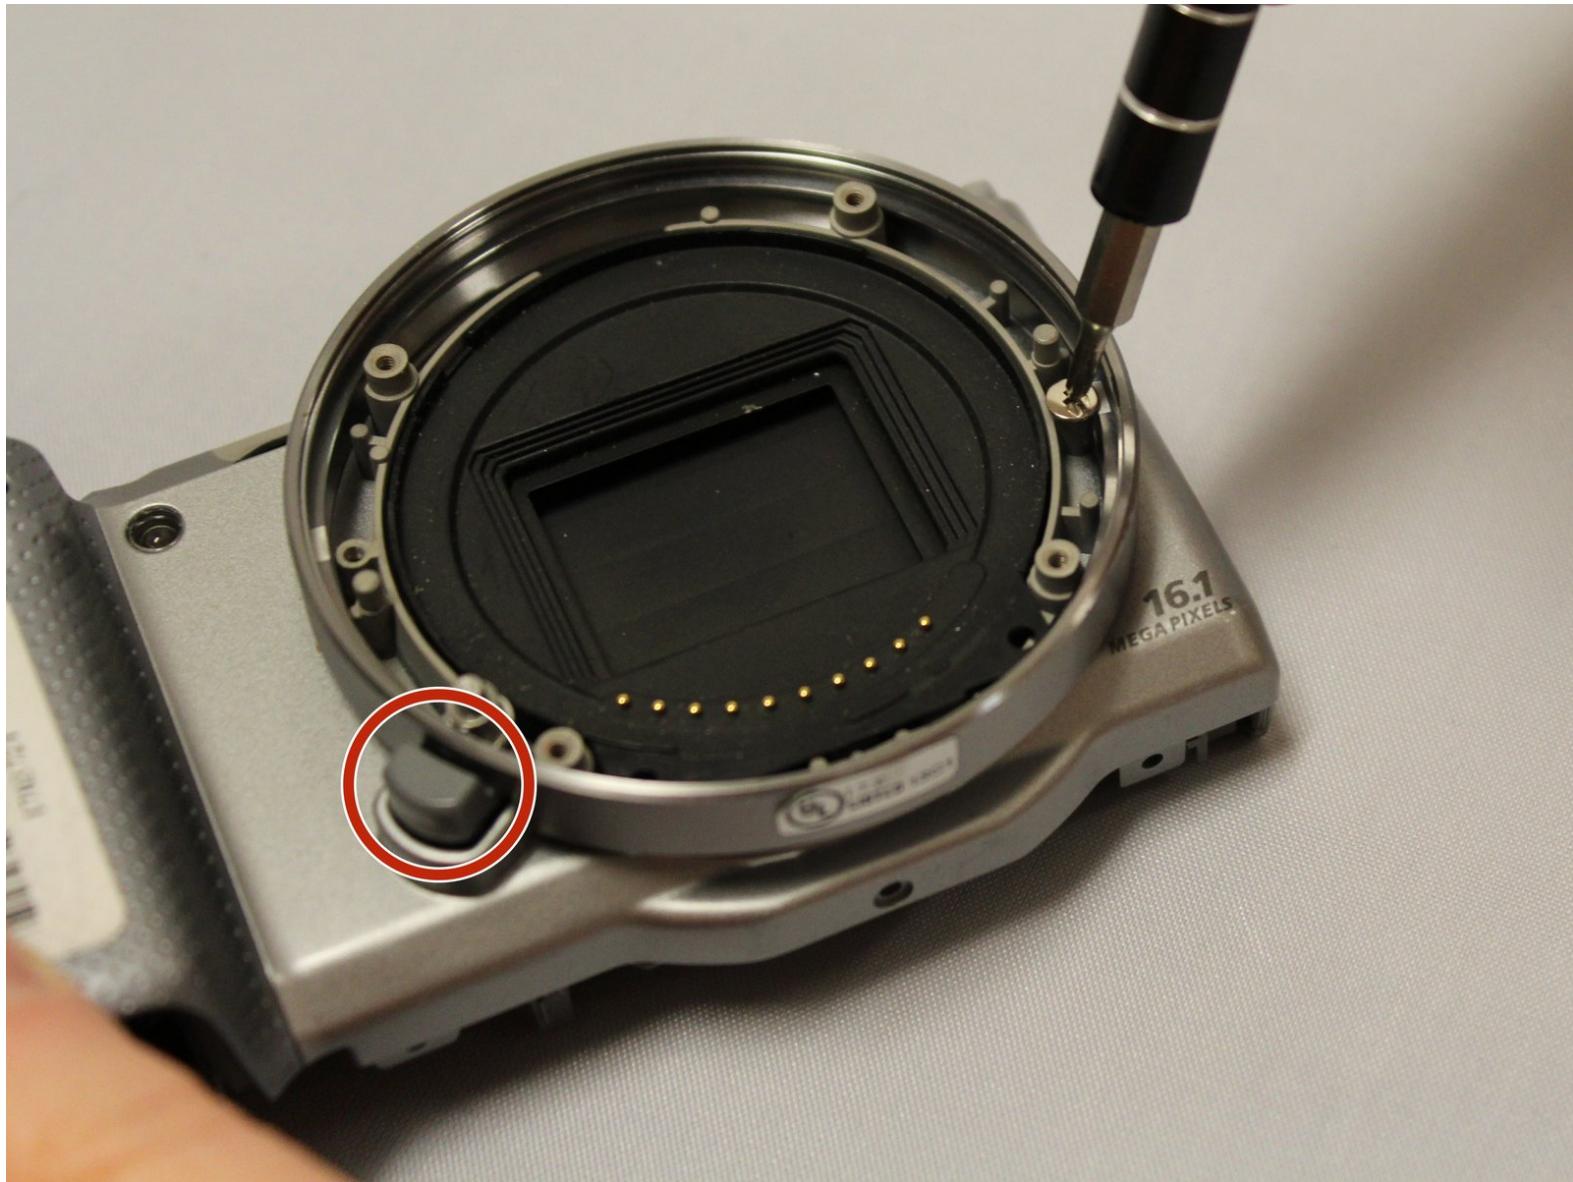

# Sony Alpha NEX-5N Lens Release Button Replacement

This guide will provide you with clear steps to replacing the Lens Release Button on a Sony Alpha NEX-5N camera.

Written By: Anna Tole



This document was generated on 2019-09-19 02:02:53 PM (MST).


## INTRODUCTION

The lens release button is a component of the camera body, and is used to release the lens from the camera body. This button can become stuck, stopping one from removing or switching lenses.

### TOOLS:

- [Phillips #000 Screwdriver \(1\)](#)


## Step 1 — E-mount

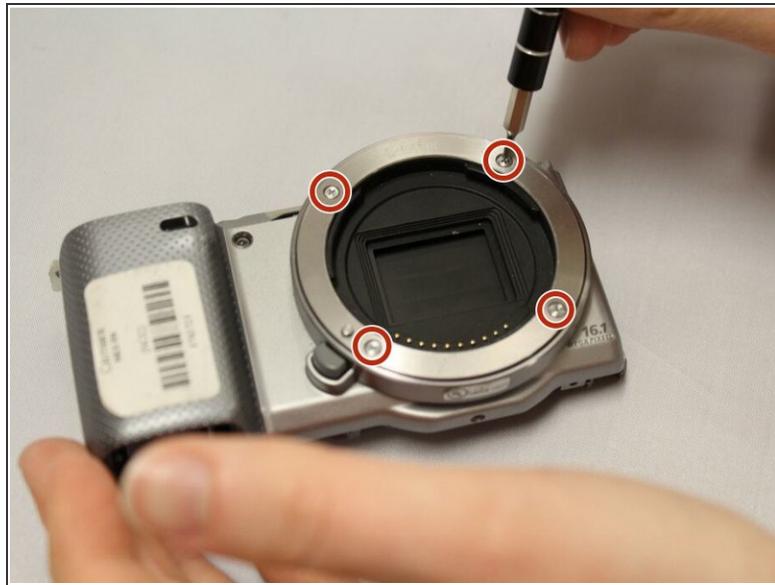

**⚠** While completing this guide, **do not** touch the **image sensor** (the center rectangle encircled by the lens mount).

- Unscrew the 4 silver 1.2 mm Phillips #000 screws along the front outer lens mount.
- Applying extra force to unscrew these 4 screws may be necessary.
- Detach the outer lens mount ring.

## Step 2

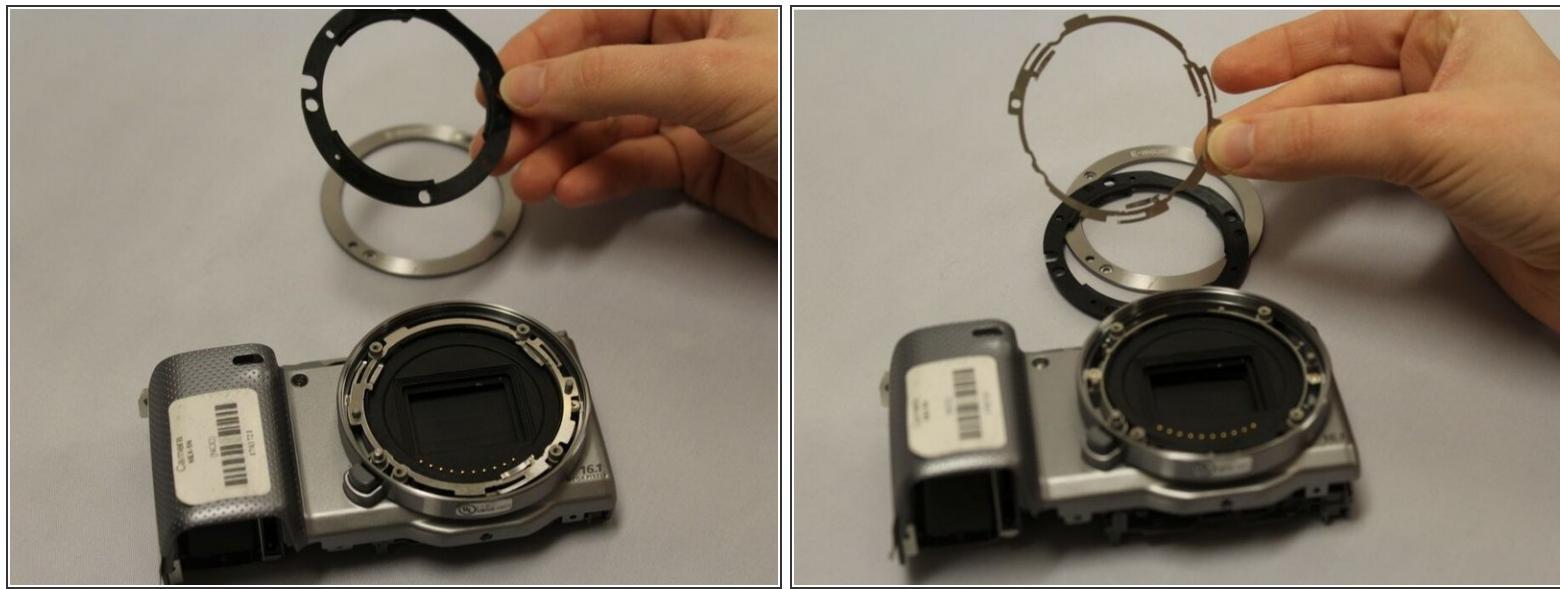

*(i)* Pay attention to the positioning and order of the spacing rings for reassembly.


- Using your fingers, pull out the first black spacer ring.
- Repeat the previous step for the second silver spacer ring.

## Step 3




- Unscrew the 2 silver 1.2 mm Phillips #000 screws on opposing sides in the lens ring area.
  - Using your fingers, easily pull off lens housing. This will complete the removal of the E-mount.
- (i)* The lens release button and the small spring underneath will be loose.

## Step 4 — Lens Release Button

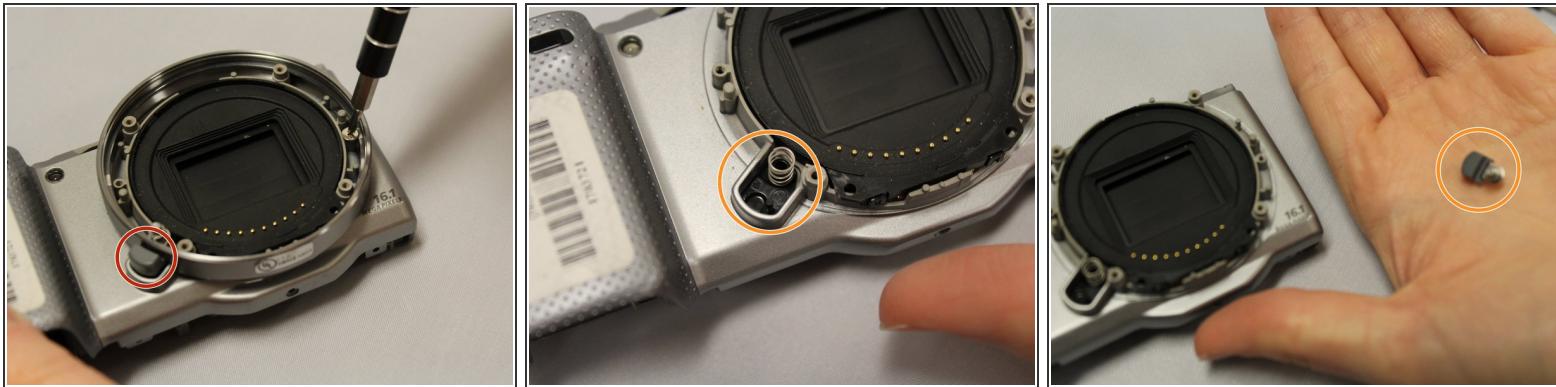

- Find the lens release button.
- The button should be easily removed by hand.

## Step 5

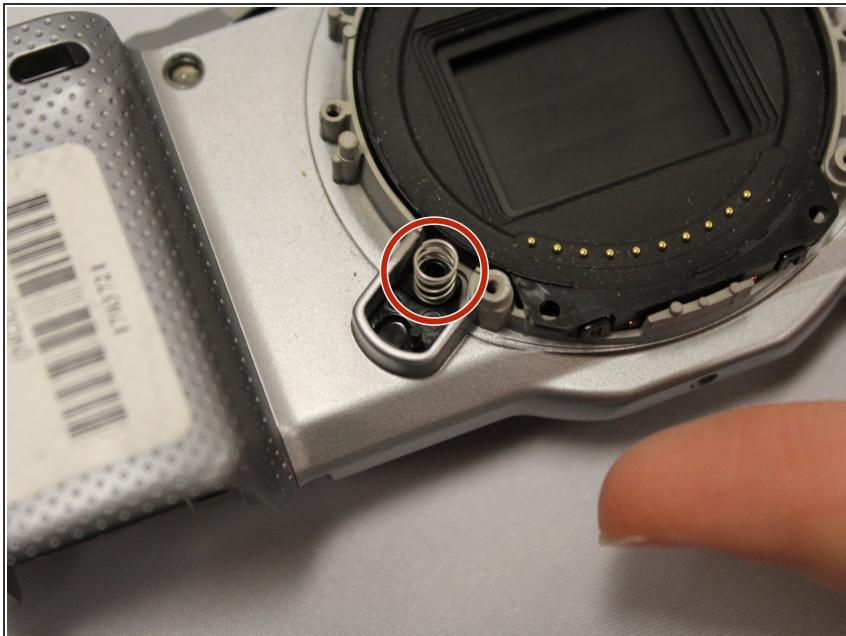

- After removing the button, the spring underneath it is uncovered and can be replaced.
- This completes the removal of the lens release button.

To reassemble your device, follow these instructions in reverse order.