



# Sony Alpha NEX-C3 Battery Replacement

How to replace the battery in the Sony Alpha NEX-C3.

Written By: Jonathan Chen



## INTRODUCTION

The battery can wear over time and no longer hold a charge, and then requires to be replaced.

## Step 1 — Battery




- Slide the power switch to off.

## Step 2



- Slide the switch on the bottom of the battery flap to unlock it.

## Step 3

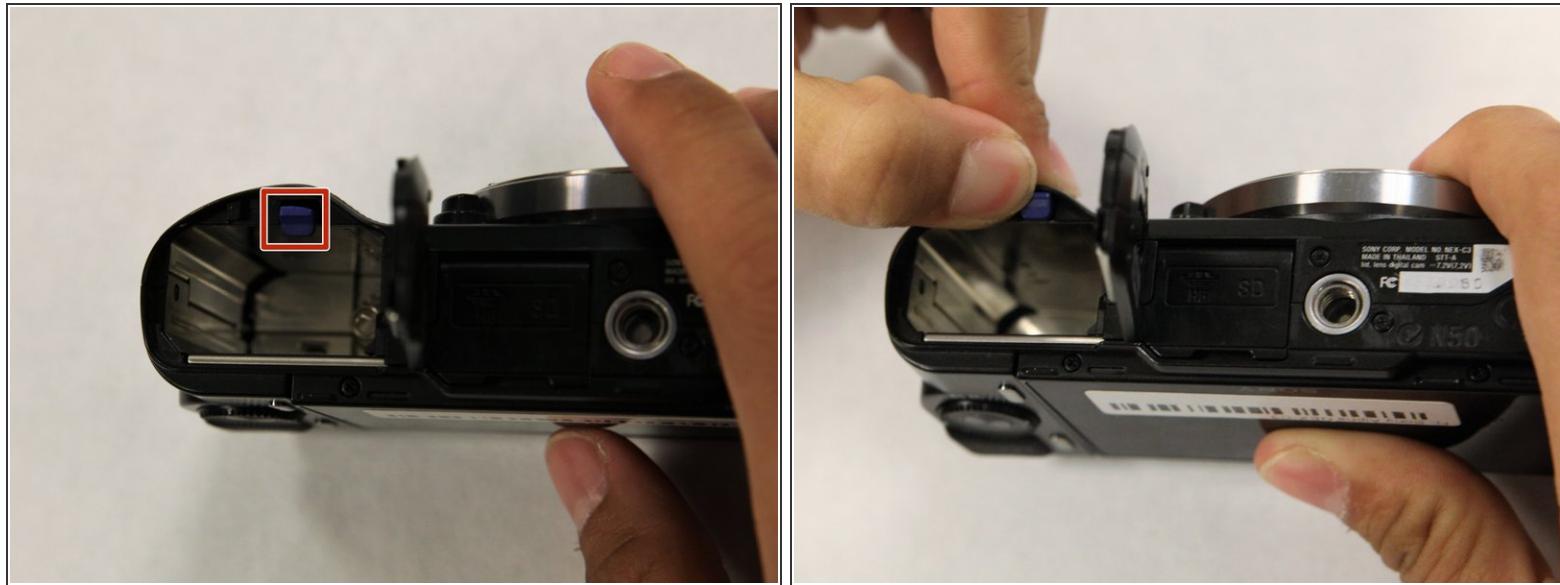

- Push back the blue tab in the battery port.
- Afterwards, the battery should pop up. Remove it with your hands.

To reassemble your device, follow these instructions in reverse order.