



# Sony Alpha NEX-C3 LCD Screen Replacement

How to replace the LCD screen of the Sony Alpha NEX-C3.

Written By: Jonathan Chen



## INTRODUCTION

The LCD screen is a helpful display when taking photos. A cracked or damaged screen needs replacement.

### TOOLS:

- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — LCD Screen



- Turn off the camera by sliding the power switch.

## Step 2



- Tilt up the LCD screen.

## Step 3



- Use a Phillips head 000 screwdriver to remove the two 2.0mm screws on the bottom of the LCD screen.

## Step 4




- Use a Phillips head 000 screwdriver to remove the two 1.0mm screws on the smaller backplate of the LCD screen that covers the ribbon cable.
- The smaller backplate should easily come off. Put it to the side.

## Step 5



- Use a Phillips head 000 screwdriver to remove the two 1.0mm screws on the bigger backplate of the LCD.

## Step 6

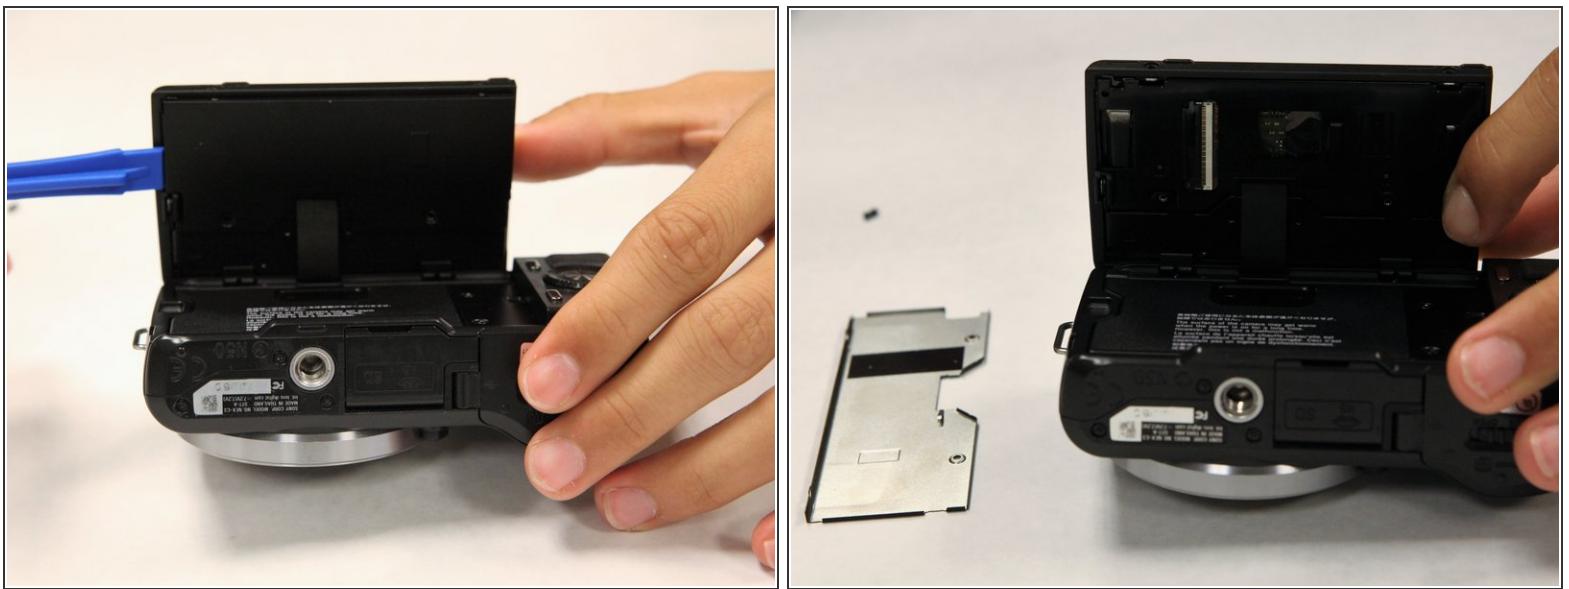


- Using the plastic opening tool, remove the larger backplate from the LCD screen.

## Step 7



- With your hands, gently remove the black plastic piece on the backside of the LCD screen.

## Step 8

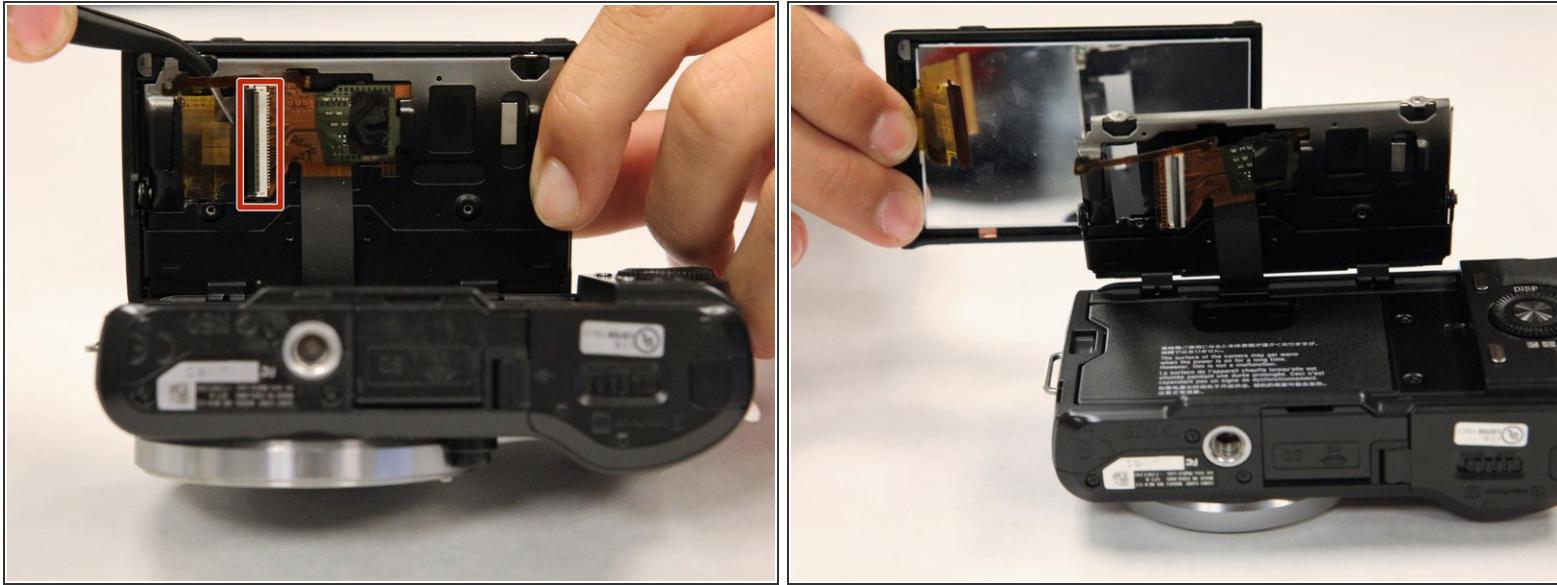

- Using tweezers, gently pull up and away on the ribbon cable connected to the motherboard, after which, the LCD screen should come off.

*(i)* The motherboard ribbon cable has a specific connector.

To reassemble your device, follow these instructions in reverse order. However, when installing the ribbon cable, the connector has a specific step. The connector has a tiny flap that clamps down onto the ribbon cable in order to make it secure.