



# Sony Alpha NEX-C3 Lens Mount Replacement

How to replace the lens mount in the Sony Alpha NEX-C3.

Written By: Jonathan Chen



## INTRODUCTION

The lens mount can wear over time and improper installation of the lens could break the inner plastic ring of the lens mount.

### TOOLS:

- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — Lens Mount



- Turn the camera off by sliding the power switch.

## Step 2



- Use a Phillips head 000 screwdriver to remove the four 5.0mm screws on the E-mount.

## Step 3



- Press on the lens mount button with one hand.
- With the other hand, grab and gently wiggle off the E-mount metal ring until its free.
- Remove the plastic ring located under the metal ring.

 Do not remove the thin metal piece behind the plastic ring.

To reassemble your device, follow these instructions in reverse order.