



Sony Alpha a7S II Viewfinder Plate Replacement

How to replace a Sony Alpha a7s II viewfinder plate.

Written By: Brittany Pourciau



INTRODUCTION

If your viewfinder is cracked and hard to remove, please follow the guide as closely as possible to avoid damaging the camera and yourself.

TOOLS:

- [JIS #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Diopter



- Orient your camera so that you are looking at the posterior portion.

Step 2



- Place each of your thumbs on the interior portions of the eyepiece cup, pressing down and pushing up.

Step 3



- Slide the eyepiece off by carefully pulling it upward.

⚠ Be careful not to come into contact with the viewfinder lens as the lens can be easily scratched.

Step 4



- Remove the screw from the middle of the diopter with the JIS #00 screwdriver.


Step 5



- Remove the diopter with your hands. If the diopter is at all stuck you can use the pointed tweezers to help aid in the removal process.

⚠ Be careful not to let fingers or tweezers come into contact with the viewfinder lens as the lens can be easily scratched.

Step 6 — Viewfinder Plate

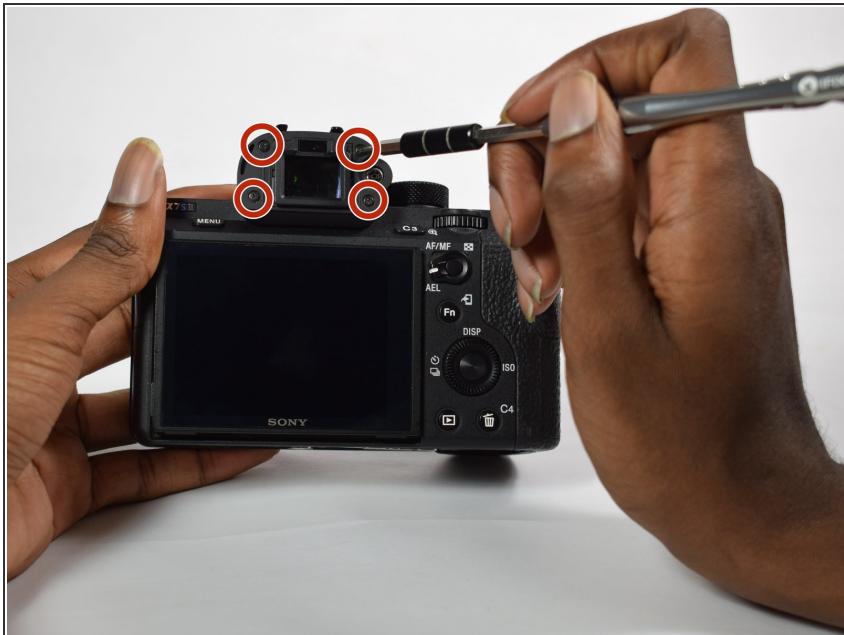

- Remove the 4 screws on the viewfinder plate with a JIS #00 screwdriver.

Step 7



- Carefully remove the plastic viewfinder plate from the camera.

To reassemble your device, follow these instructions in reverse order.