



# Sony BDP-BX520 Disc Tray Cover Replacement

This guide will show you the easiest way to remove the Sony BDP-BX520 plastic disc-tray cover.

Written By: Collier



## INTRODUCTION

If you are unable to power on the blu-ray player, or the eject button does not work, feel free to skip this guide.

## Step 1 — Disc Tray Cover



- Plug in the Blu-Ray player, then press the power button, making sure the Blu-Ray player is powered on.
- Press the eject button on either the top of the Blu-Ray player or on the remote to open the disc tray.

## Step 2



- Grab the sides of the disc tray cover and carefully pull each side upwards, starting with the left side. This will unhook the cover from the tray.

## Step 3



- Close the disc tray, then power off and unplug the Blu-Ray player.

To reassemble your device, follow these instructions in reverse order.