



Sony BDP-BX520 Top Case Replacement

Before removing anything, we must remove the metal top case from the Blu-Ray player.

Written By: Collier



INTRODUCTION

This guide requires only a Phillips #2 screwdriver.

TOOLS:

- [Phillips #2 Screwdriver \(1\)](#)

Step 1 — Top Case



- Locate the three 8 mm screws on the back of the Blu-Ray player.
- Using the Phillips #2 screwdriver, unscrew each of the screws and set them aside.

Step 2



- Gently pull the top case back to remove it from the Blu-Ray player.

To reassemble your device, follow these instructions in reverse order.