



Sony BDP-BX620 Disk Drive Replacement

This repair guide will demonstrate how to remove the disk drive of this device.

Written By: Axel Cruz Jimenez





INTRODUCTION

In this guide you will learn how to remove the disk drive from a Sony BDP-BX620.

TOOLS:

- **Phillips #0 Screwdriver** (1)
- **Tweezers** (1)

Step 1 — Outer Cover

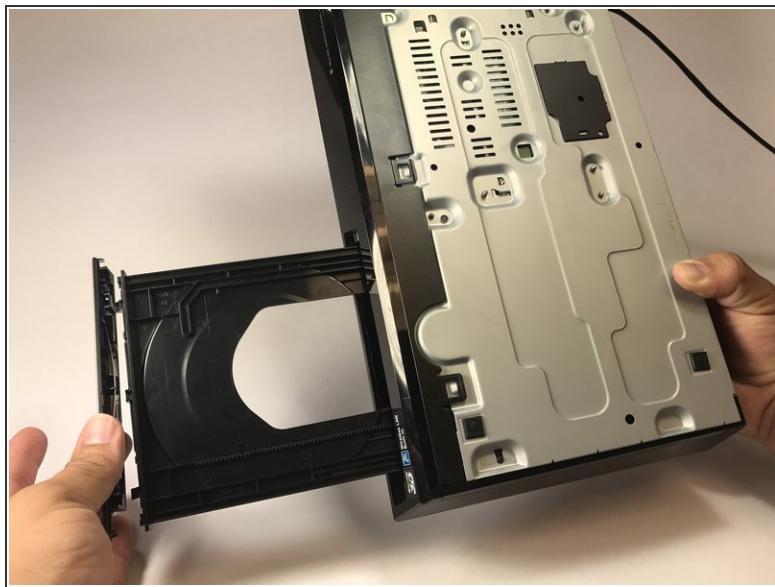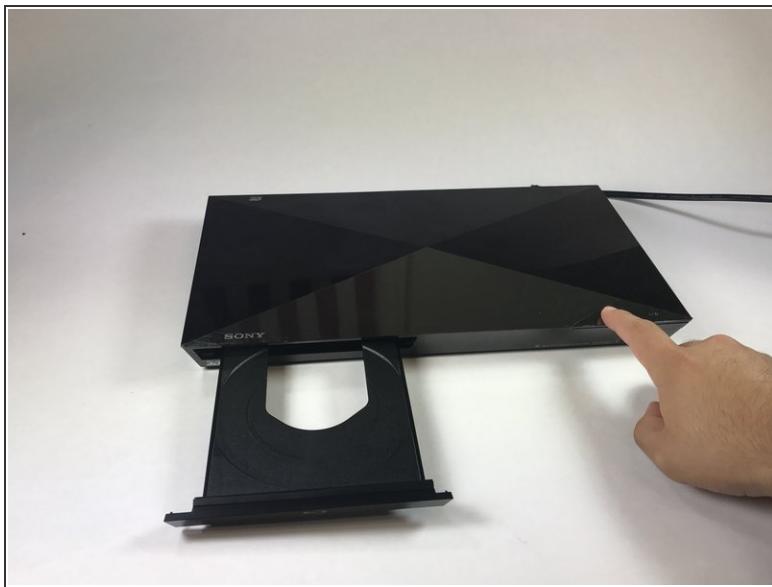

- Power on the device, eject the disk tray, and power off the device.
- Turn the device over.
- Lightly apply downward pressure on the black covering on the disk tray until it snaps off.

 Caution, applying too much pressure can break the black covering.

Step 2



- Turn the device around.
- Using a Phillips screw driver, remove the screws on both ends of the device circled red in the image.
- Slide the side covers on either side towards the back of the device.

(i) There is a back cover on either side of the device.

Step 3




(i) This step might require someone to help unclasping the plastic clips.

- Turn the device so that the bottom is facing up.
- In the bottom, unclip the three plastic clips circled in red.
- On either side, unclip the plastic clip circled in red
- Slide the black covering forwards to remove.

(i) All five clips have to be unclasped for the covering to be removed.

⚠ Careful not to break the plastic clips when putting it back on.


Step 4 — Disk Drive

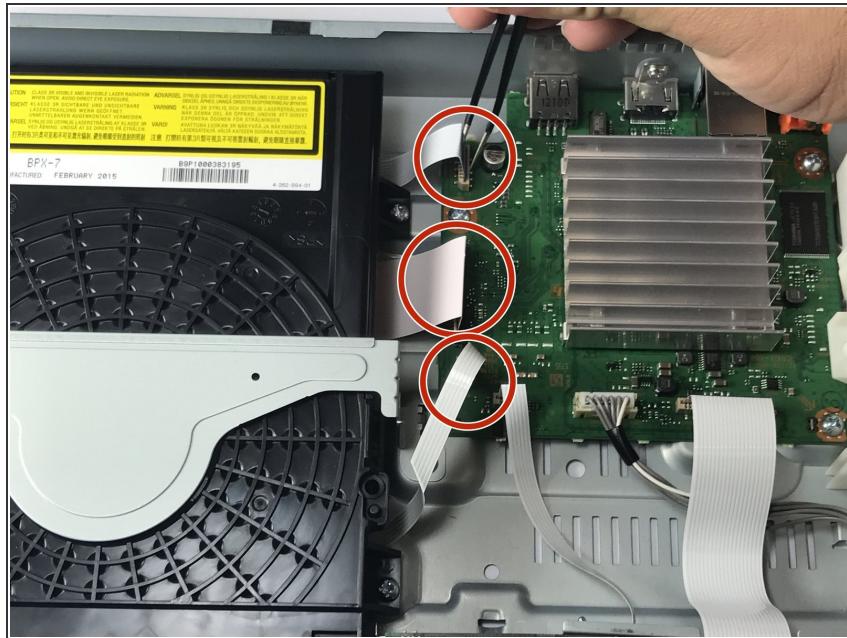

- Remove the no-fuss ribbon cable connectors by gently pulling on them.



 Pulling harshly may break the flat cables.

Step 5

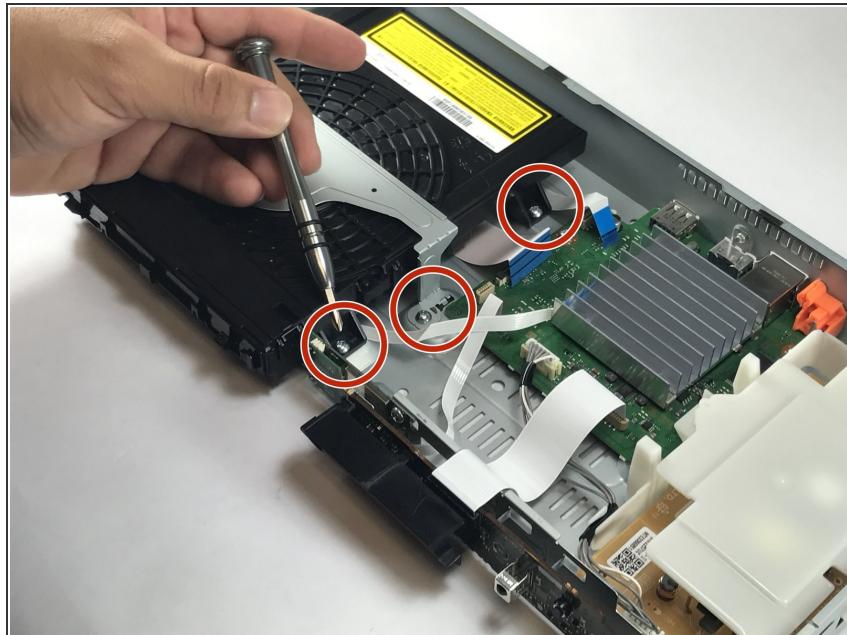

- Using the Phillips screw driver, remove the three screws.

Step 6

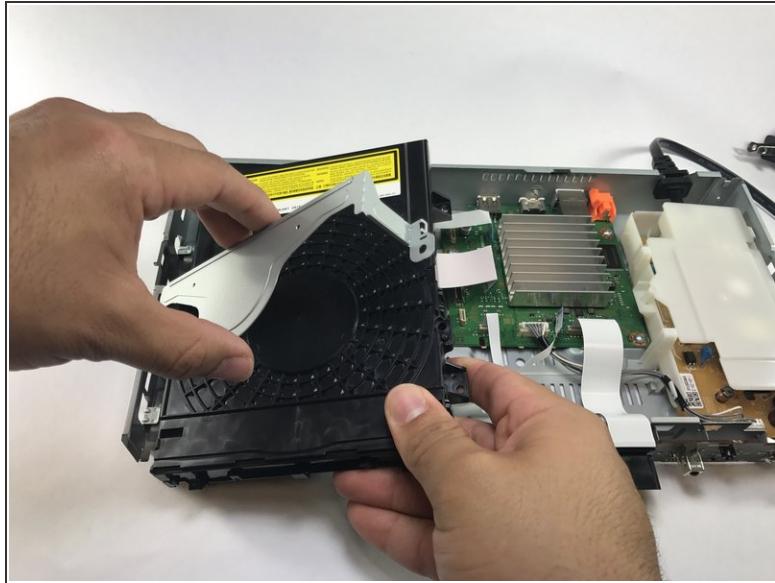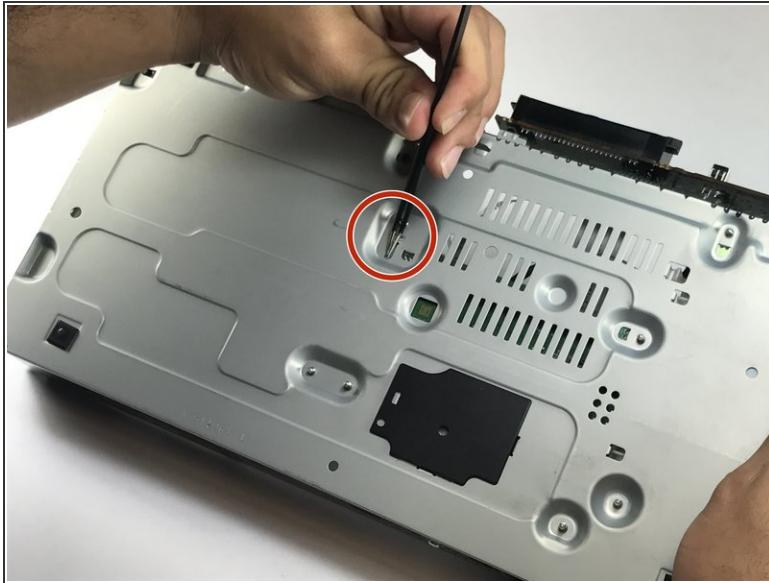

- Turn the device over and use tweezers to push the metal clasp until it comes off.
- Lift the metal brace located over the disk drive and remove the disk drive and the metal brace.

To reassemble your device, follow these instructions in reverse order.