



Sony CFD-8 Battery Replacement

This guide provides the steps to remove and replace the batteries in the Sony CFD-8.

Written By: Tess



INTRODUCTION

If your device is not turning on and you're using batteries as a power source, you can use this guide to remove or replace the batteries. Be sure to remove the batteries and unplug the device before taking it apart to avoid electric shock.

Step 1 — Battery



- Remove the battery cover on the back of the boombox by applying downward pressure to the two clamps.

 Be sure to unplug the boombox from the wall before attempting to open it for repair.

Step 2



- Push against the positive end of each battery. Once it is loose, lift the battery out. Repeat for all six batteries.

 The top row of batteries have the positive side pointing right. The bottom row of batteries have the positive side pointing left.

To reassemble your device, follow these instructions in reverse order.