



# Sony CFS-204 Radio Cassette-Corder Antenna Replacement

Replacing the antenna will allow the device user to reconcile reception issues and enjoy clear AM/FM channels.

Written By: Brittany Patterson



This document was generated on 2019-09-20 01:37:37 PM (MST).

## INTRODUCTION

This guide will demonstrate how to disconnect the antenna from the radio.

### TOOLS:

- Phillips #2 Screwdriver (1)

## Step 1 — Antenna



- Place the Phillips #2 screwdriver in the Phillips screw at the base of the antenna connection.
- Loosen and remove the 8 mm screw using the #2 Phillips screw driver.

## Step 2



- Straighten the antenna to a vertical position and pull straight up (with a little force!) to remove the antenna.

To reassemble your device, follow these instructions in reverse order.