



# Sony CPF-IP001 Remote Battery Replacement

Replace a dying battery to bring back the power of your remote.

Written By: Marlena Perez



## INTRODUCTION


Use this guide if your remote stops functioning. Be sure to have a replacement battery available. The type of battery you will need is a 3 Volt CR2032.

## Step 1 — Remote Battery



- Open battery tray by pushing right on the boxed tab and pulling the battery tray out.

## Step 2

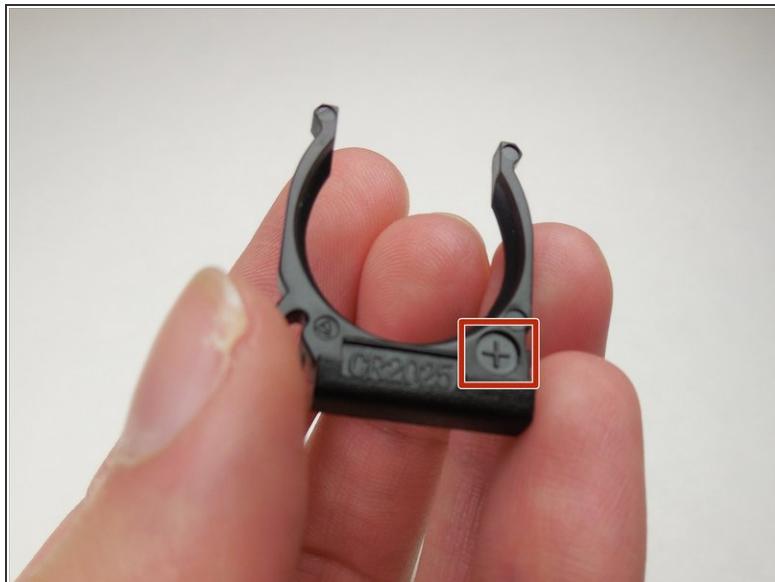

- Replace battery.
- When placing your new battery in the tray, make sure the positive side on the battery and the positive side on the tray are both facing up.

To reassemble your device, follow these instructions in reverse order.