



Sony Cassete Deck TC KE200 Fix

Fix problem cant play cassette. Replace internal belts.

Written By: Cafony





Step 1 — Motor belt





- Remove screws from down
- Remove screws from sides
- Gently take out the front of deck from metal base.

Step 2

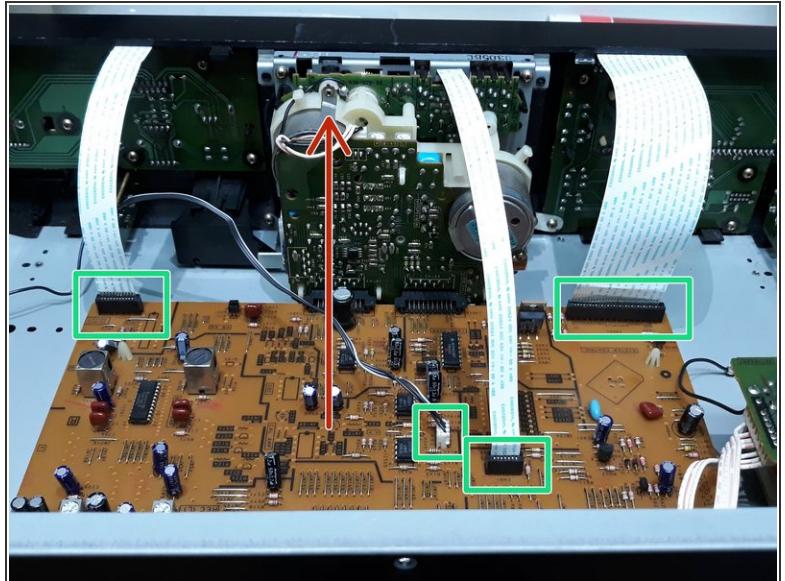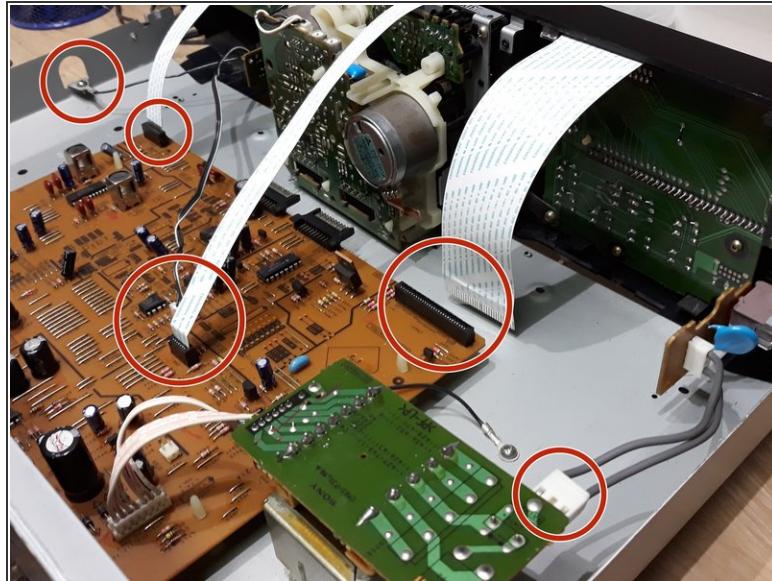



- Remove left side black wire
- Remove white contact strips
- Remove little screw to change ruble inside deck mechanisms
- Remove power supply grey wires

Step 3

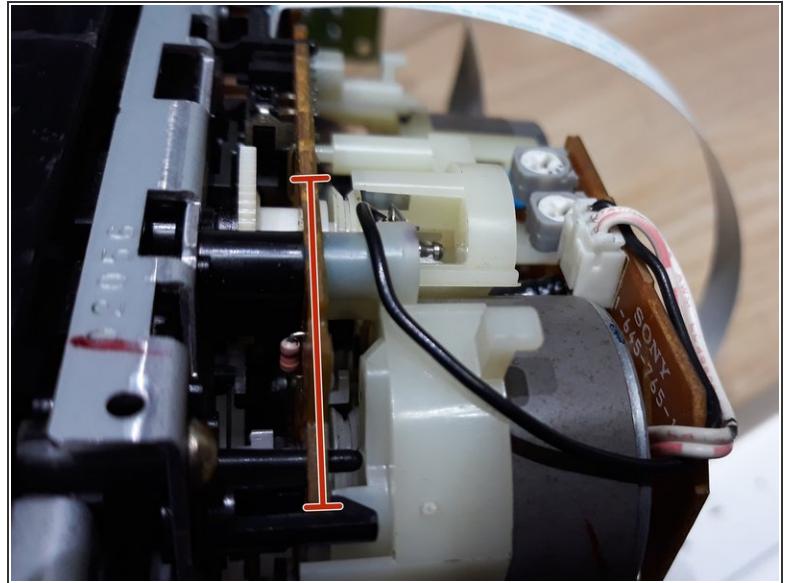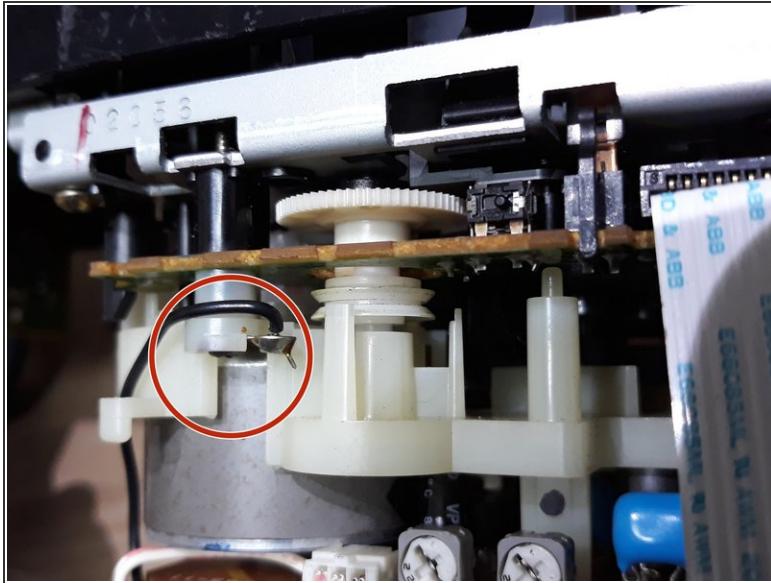


- Remove the small screw
- Then you can see the place of the weel. Change the ruble.

Step 4

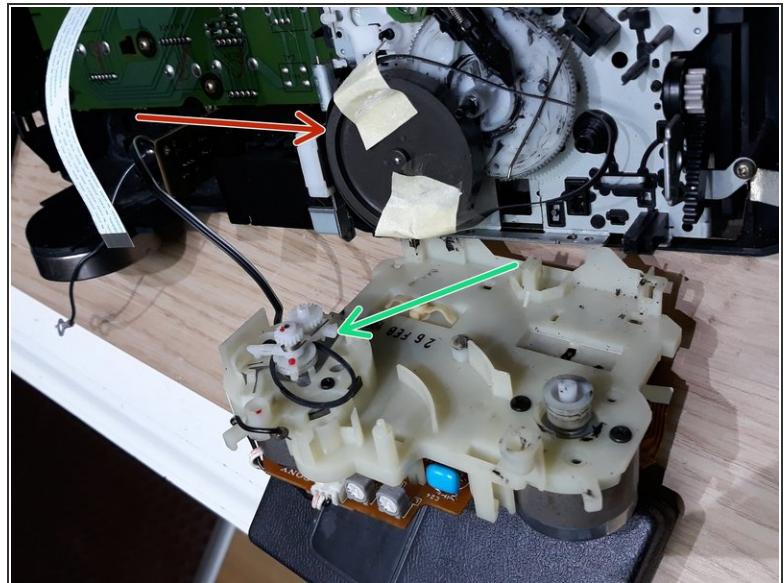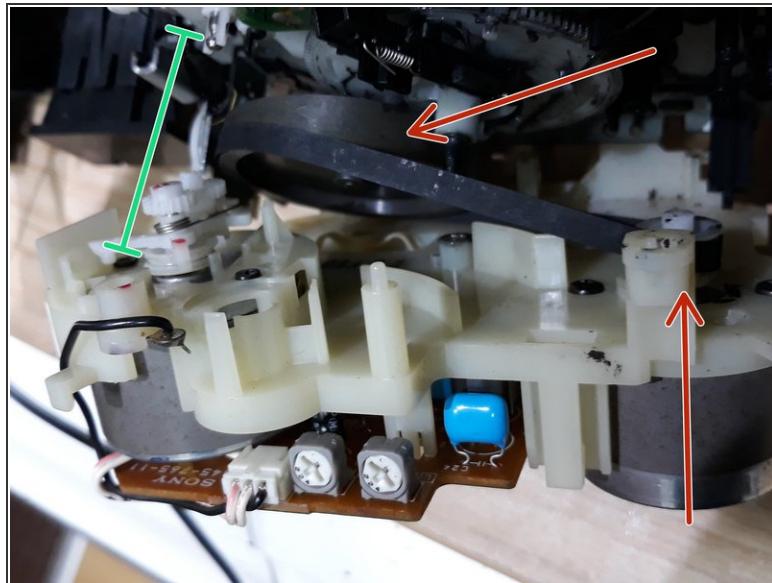

- Replace the big belt.
- Replace the small (green) belt.
- Use a little tape to old the belt. When closing remove the tape.

Step 5

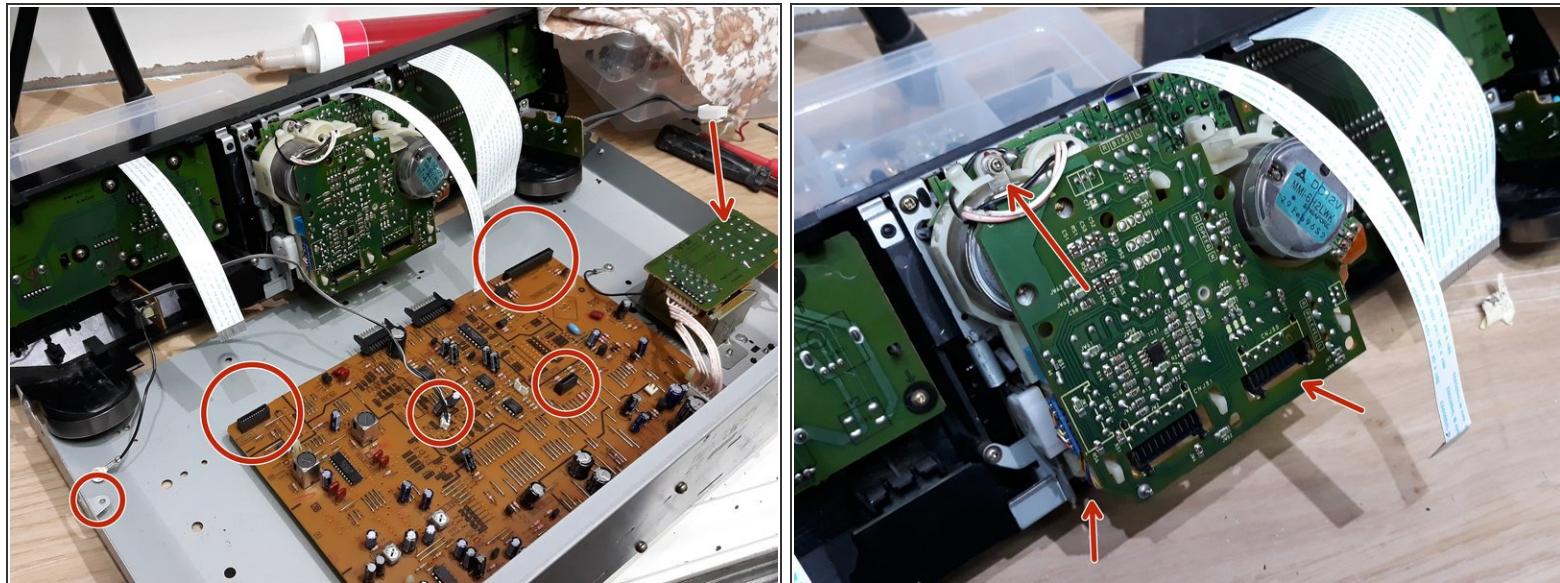

- Insert little screw and close the deck with new belts.
- Plug all the wires and strips.
- Close everything, and your done
- Hope it help, please leave a comment.

To reassemble your device, follow these instructions in reverse order