


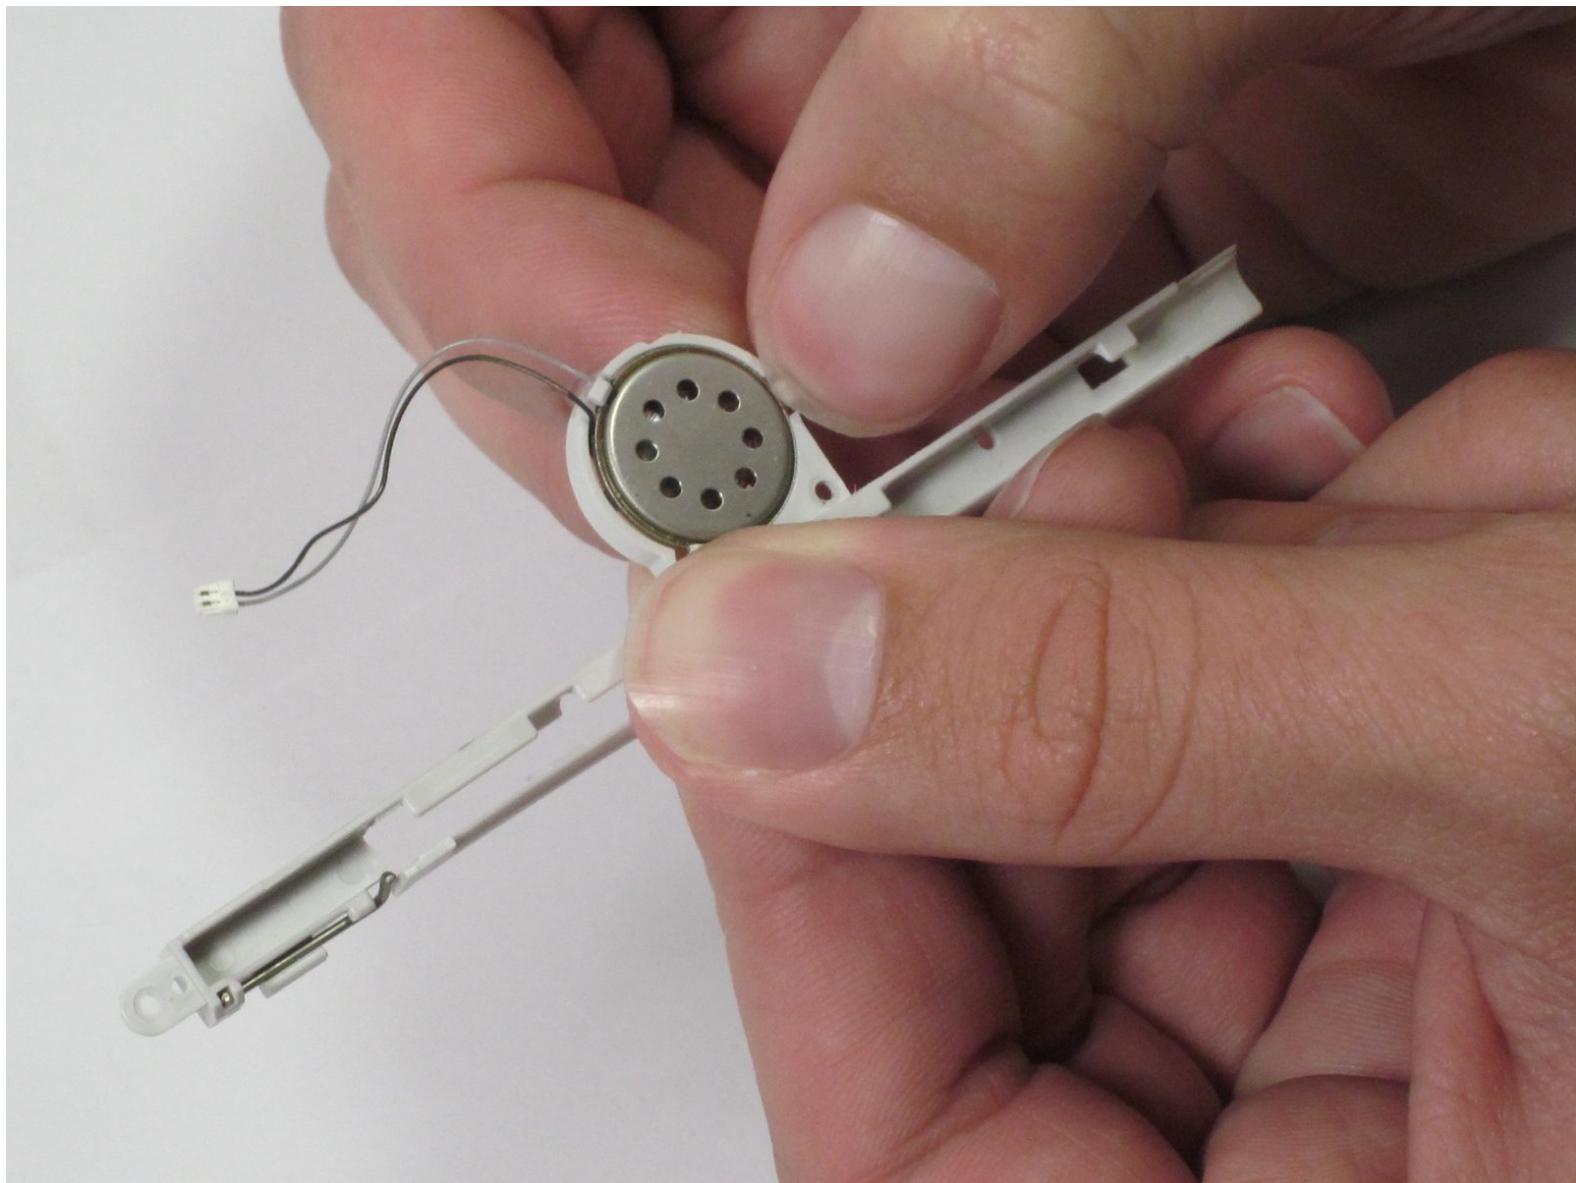

Sony Clie PEG-NR70 Speaker Replacement

Install a new speaker in your Sony Clie.

Written By: Daniel Soski



INTRODUCTION

Installing a new speaker fairly simple as it only involves opening the device casing and then removing the broken speaker.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — The Case



- Unscrew the 1.9mm screw located at the top of the device with a Phillips #00 screwdriver.


(i) It may be helpful to set up a piece of paper to keep track of where removed screws came from.

Step 2




- Unscrew the 2.5mm screw located on the left side of the device with a Phillips #00 screwdriver.

Step 3

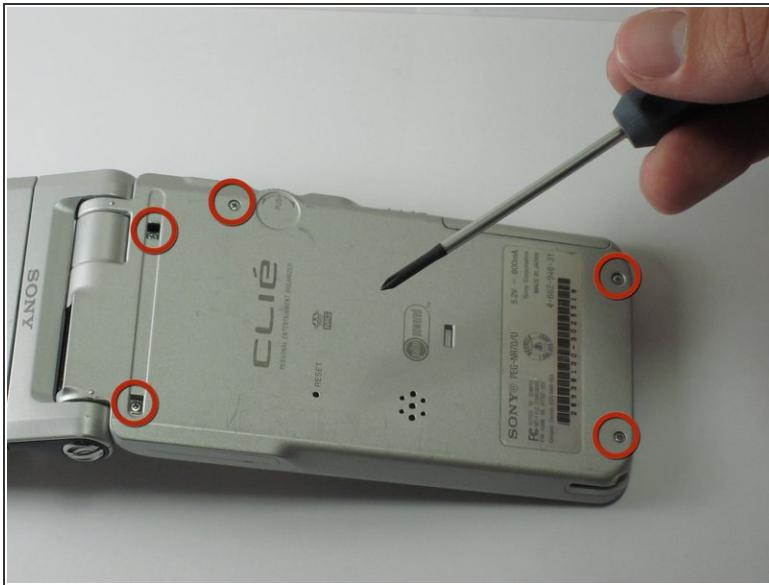

- Unscrew the five 2.5mm screws on the back panel with a Phillips #00 screwdriver.
- Remove the back panel by lifting it away with your hands.

Step 4 — Speaker Rail

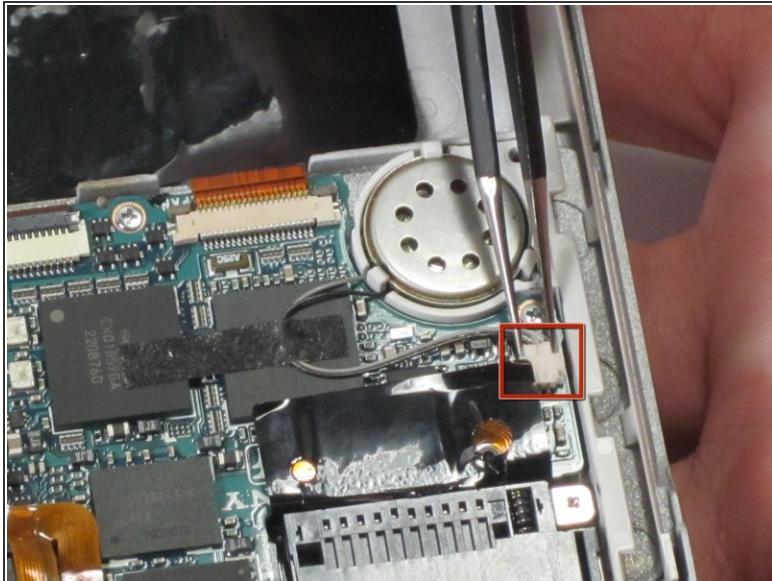


- Use tweezers to unplug the speaker wire from the motherboard by pulling the plug (not the wires) down towards the speaker.

 Be careful not to tear the speaker wires! They are very thin.


- Remove the tape holding speaker wire by peeling it away.

Step 5

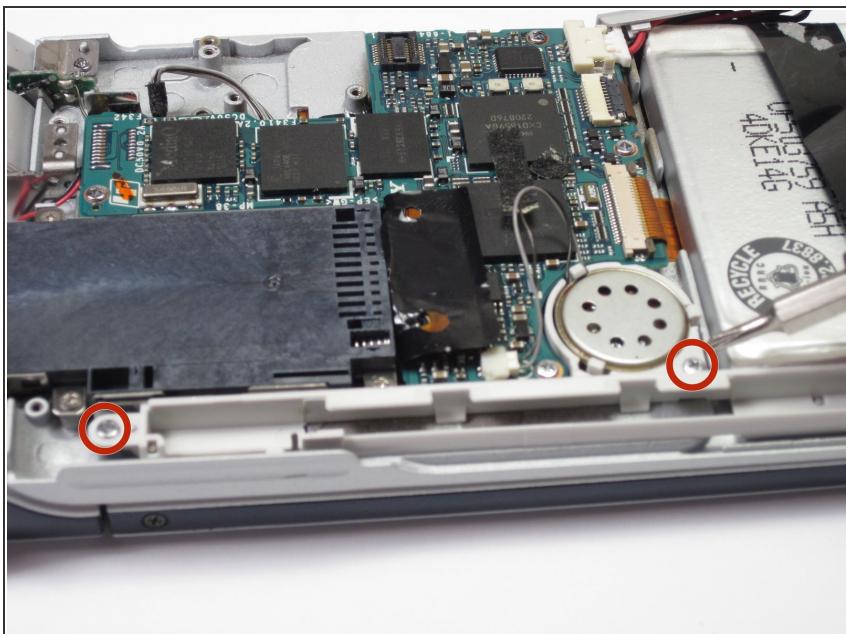

- Holding down the speaker rail unscrew the two 2.5mm screws with a Phillips #00 screwdriver.
- Remove the speaker rail vertically from the device.

Step 6 — Speaker

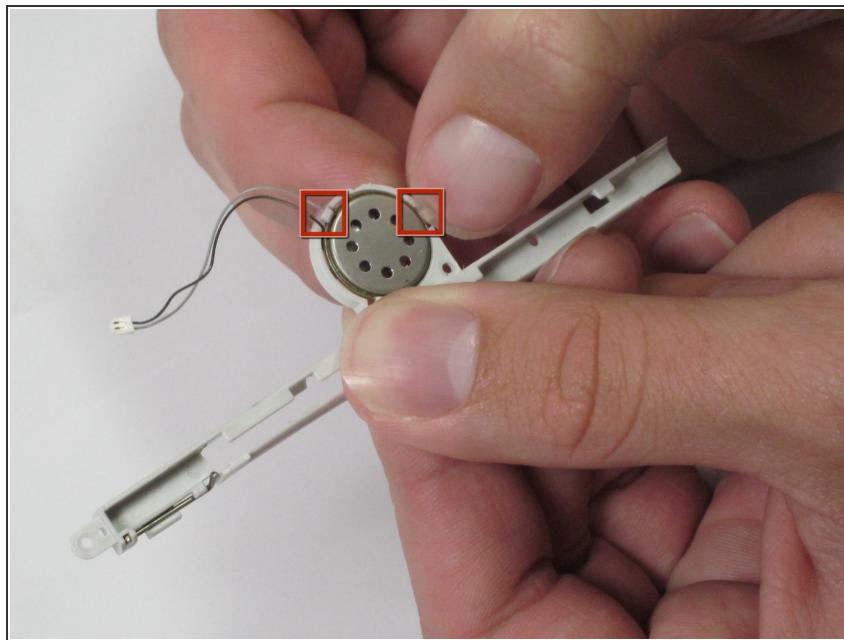

- Hold back the plastic tabs to pop the speaker out of the rail.

To reassemble your device, follow these instructions in reverse order.