



# Sony Cyber-Shot DSC-H1 Back Panel Replacement

This guide will walk you through replacing the back panel of your Sony Cyber-Shot DSC-H1 camera.

Written By: Trystan Jasperson



This document was generated on 2019-09-22 03:43:07 AM (MST).


## INTRODUCTION

Keeping the back panel in good condition is key to extending the lifetime of the camera.

### TOOLS:

- Phillips #0 Screwdriver (1)

## Step 1 — Back Panel

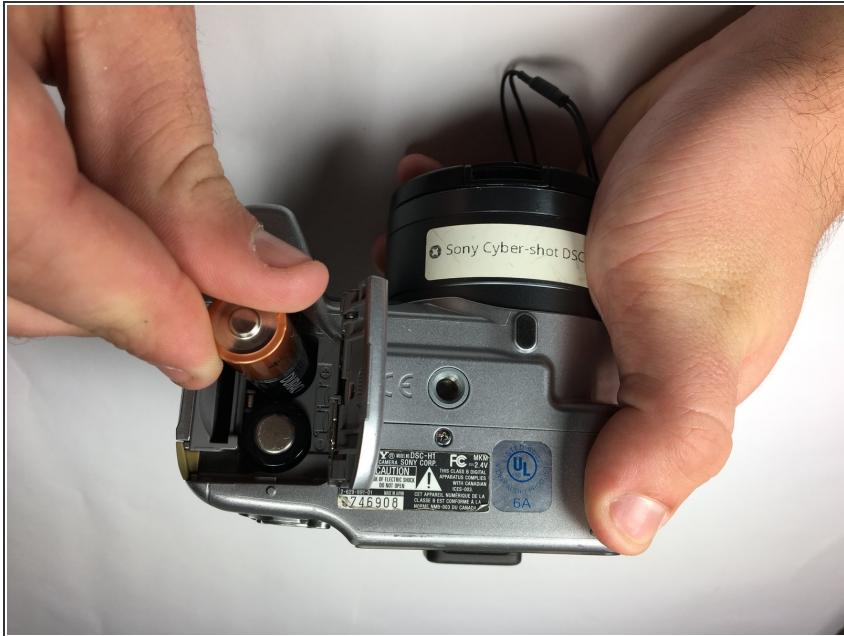

- Power down the camera and remove the batteries.

## Step 2




- Using a Phillips #0 screwdriver, remove all of the screws from the back panel casing.

*(i)* There are six 5.22mm long, 3.00mm head diameter screws total.

*(i)* The left side is not shown but there should be 1 screw on that side.

## Step 3

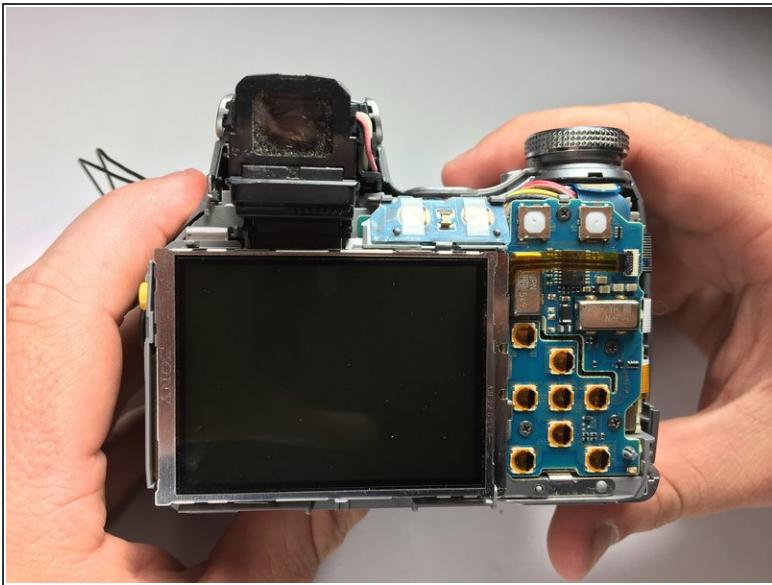

- Remove the back casing.

*(i)* The casing itself is sturdy so don't be afraid to remove it forcefully.

To reassemble your device, follow these instructions in reverse order.