



# Sony Cyber-Shot DSC-H1 Battery Replacement

This guide will instruct you how to switch the batteries of a Sony Cyber-shot DSC-H1.


Written By: Charlie Pugeda



## INTRODUCTION


If the camera is not charging or not working despite everything looking in order, then the batteries just need to be replaced.

## Step 1 — Battery

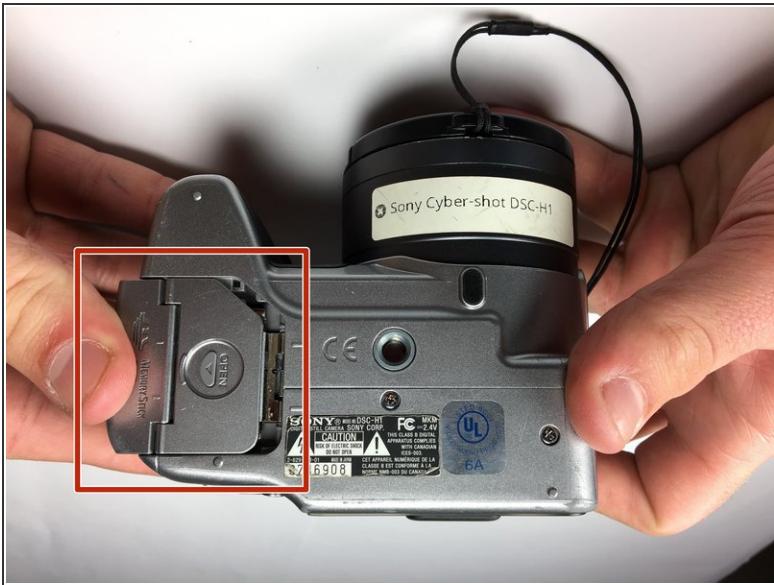

- Push down on the grey arrow (pointing left) and slide left (while holding the grey arrow down).

## Step 2

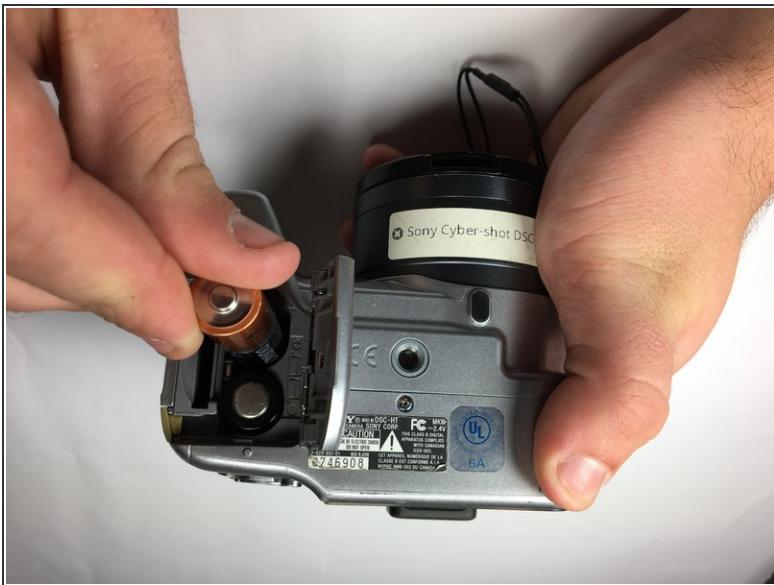

- The battery and memory slot flap spring will open (from left to right).
- Remove the batteries.

To reassemble your device, follow these instructions in reverse order.