




Sony Cyber-Shot DSC-H1 LCD Screen Replacement

Replace broken or cracked screen to view images better.

Written By: Trystan Jasperson

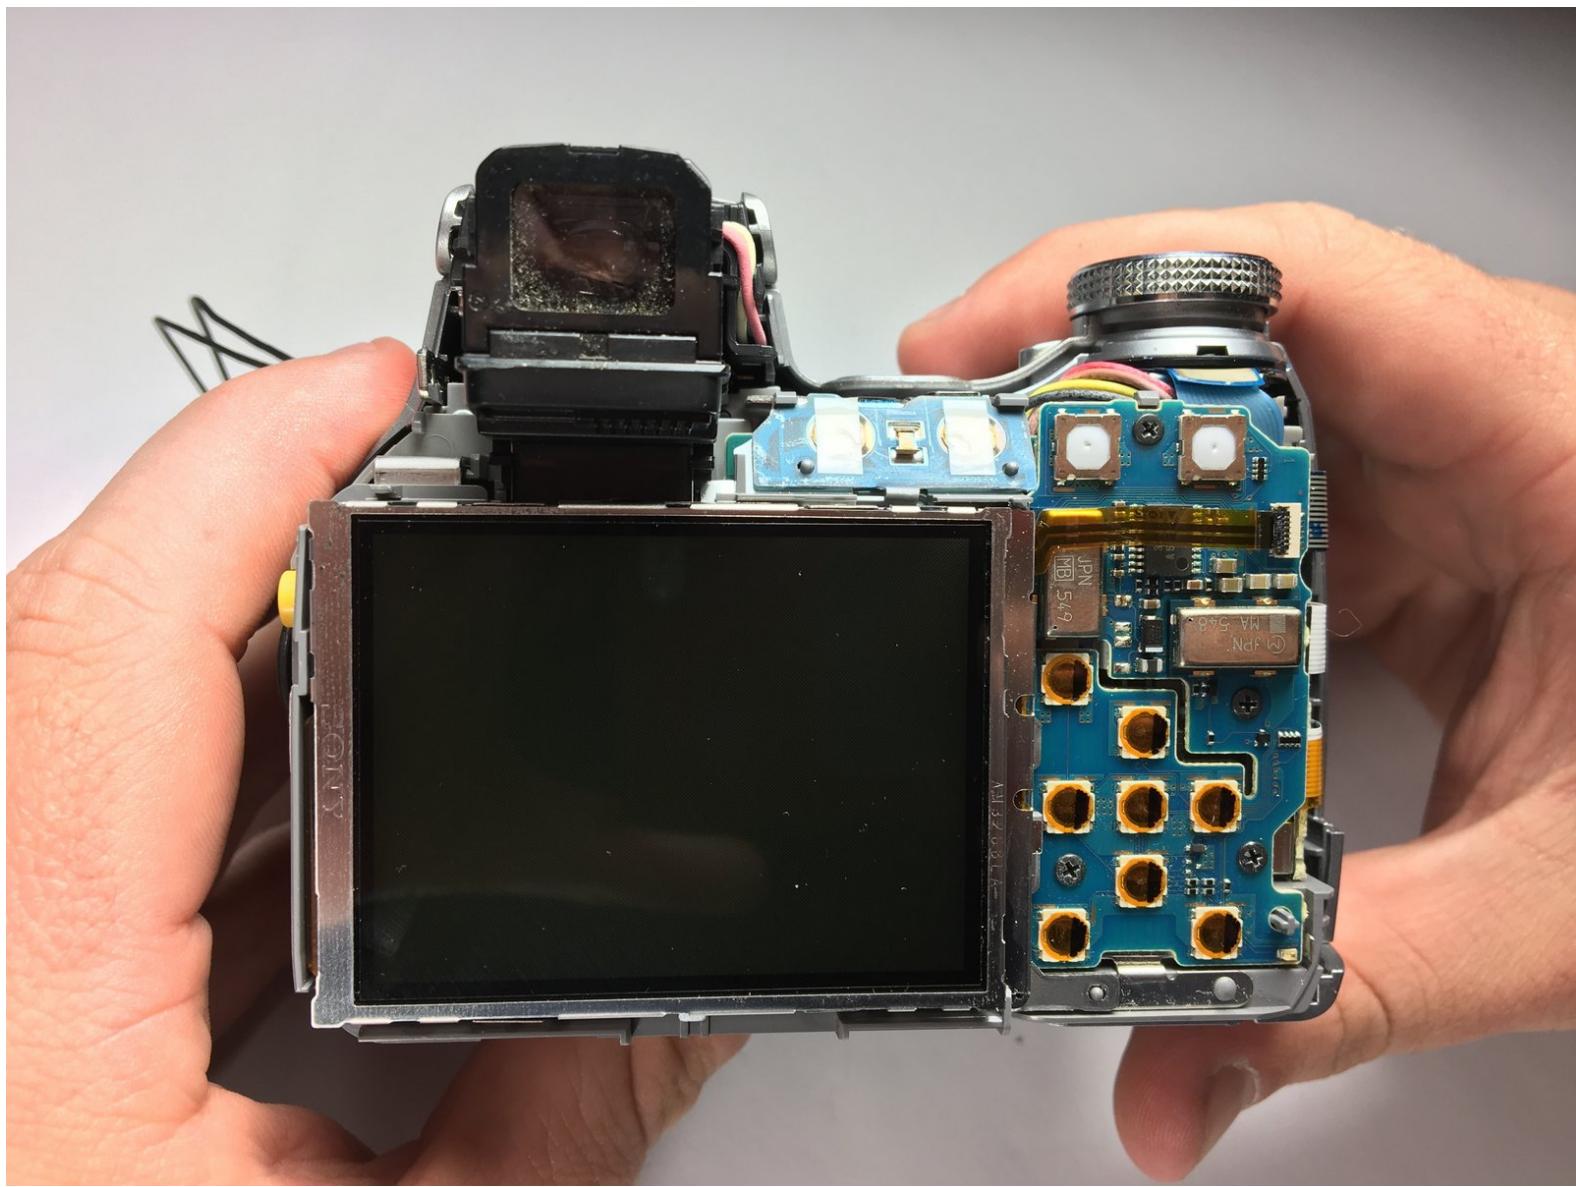


INTRODUCTION

Seeing the image before taking it is vital to taking long-lasting quality pictures. This guide will show you how to properly remove the existing LCD screen.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Back Panel

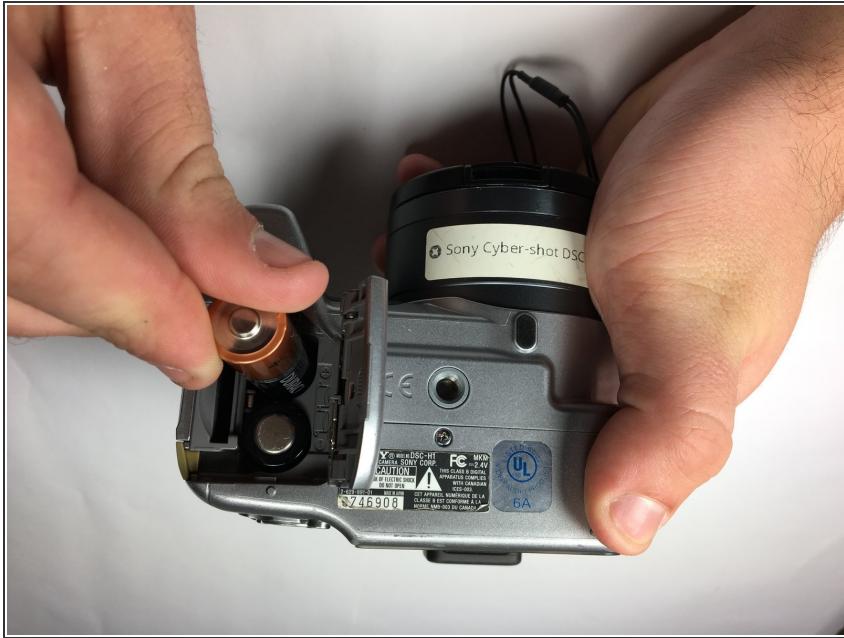

- Power down the camera and remove the batteries.

Step 2



- Using a Phillips #0 screwdriver, remove all of the screws from the back panel casing.
 - There are six 5.22mm long, 3.00mm head diameter screws total.
 - The left side is not shown but there should be 1 screw on that side.


Step 3



- Remove the back casing.

(i) The casing itself is sturdy so don't be afraid to remove it forcefully.


Step 4 — LCD Screen

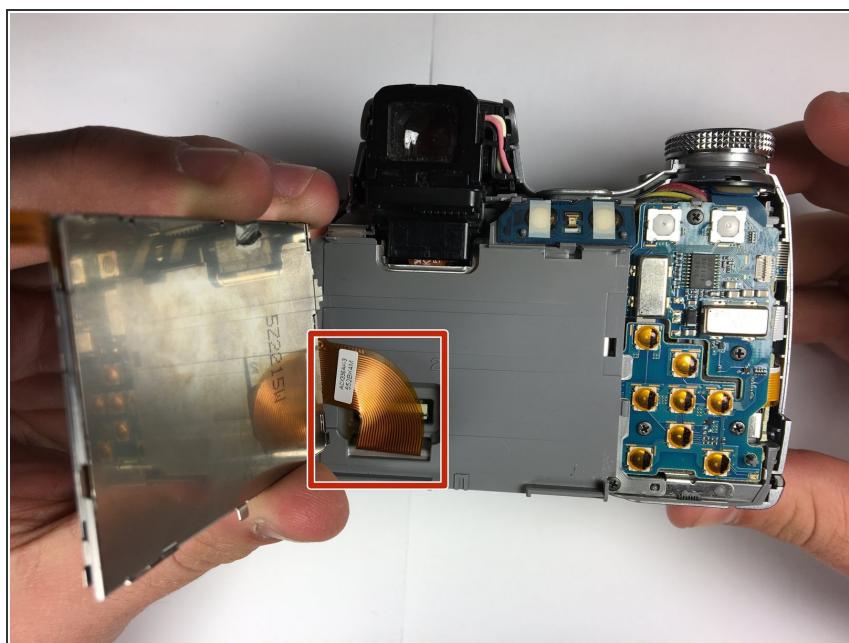

- Take a hold of the right side of the LCD screen and lift it towards the left.

(i) The screen is held firm and will require a bit of force to ease it from its housing.

Step 5

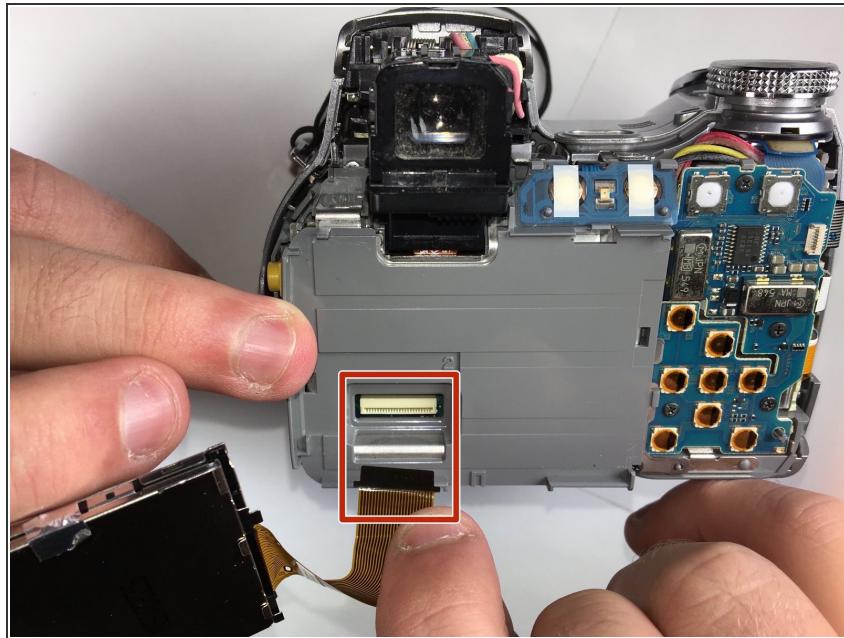

- Unplug the large conductive tape attached to the screen.
- Remove the LCD from the device.

To reassemble your device, follow these instructions in reverse order.