



Sony Cyber-Shot DSC-H1 Shutter Button Replacement

The shutter button is the button you press to take a photo. If the button needs replacement, here are the steps how.

Written By: Charlie Pugeda



This document was generated on 2019-09-22 03:43:46 AM (MST).

INTRODUCTION

Use this guide to replace the shutter button of your camera. All you need is a plastic opening tool to remove the shutter button from your device.

TOOLS:

- Spudger (1)

Step 1 — Shutter Button



- Use a spudger to get a grip on the shutter button and twist clockwise.
- When the new shutter button is laying flat over the hole, twist it counterclockwise to lock the button in.

To reassemble your device, follow these instructions in reverse order.