



# Sony Cyber-Shot DSC-H200 Battery Replacement

By following this guide you will be able to open the SD door and learn the correct way to replace the batteries.

Written By: Kolod Aljohani



This document was generated on 2019-09-22 03:44:54 AM (MST).

## INTRODUCTION

The Sony Cyber-shot DSC-H200 comes with removable AA batteries that will need to be replaced periodically. This guide will help you learn how to replace the batteries, by first opening the SD door.



## PARTS:

- Four AA batteries (1)

## Step 1 — Battery



- Push the SD Door switch toward OPEN with right thumb, while simultaneously pressing the SD Door switch away from the center of the camera with left thumb (the SD door will open).

## Step 2



- Take the four AA batteries out of the battery compartment.

To reassemble your device, follow these instructions in reverse order.