



Sony Cyber-Shot DSC-S90 Batteries Replacement

This guide will describe and depict how to replace dead or faulty batteries of the Sony Cyber-Shot DSC-S90.


Written By: Alecsander da Silva



INTRODUCTION

If you need to replace faulty batteries, this step by step sequence will provide a clear and percise explanation for the process. For this guide, you will only need two new AA batteries to replace the old faulty ones. This guide is especially straight forward containing a small amount of simple steps.

Step 1 — Batteries

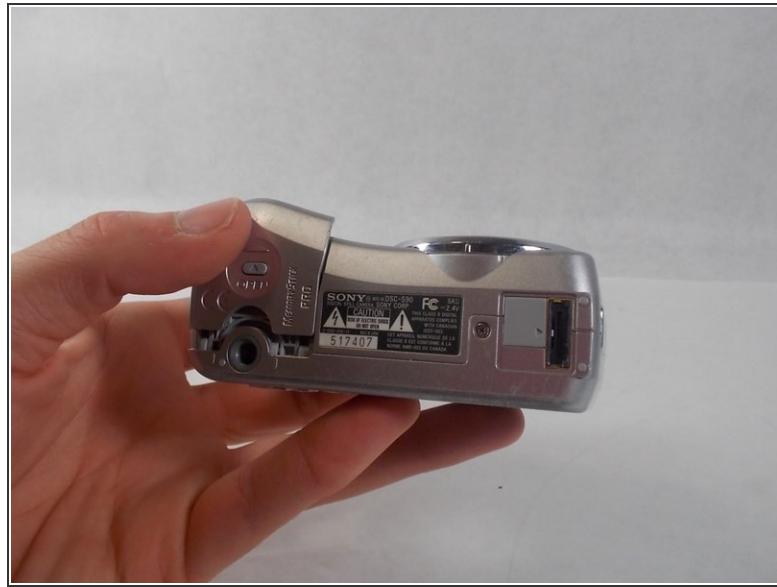

- Hold down the "open"button (gray oval with arrow pointing upwards) on the battery port door.
- While holding the button downwards, slide the door upwards to unlock and open the door.

Step 2



- Pull open the door and allow the batteries to fall out.

To reassemble your device, follow these instructions in reverse order.