



# Sony Cyber-Shot DSC-TX30 Battery Replacement

In this guide you will see a demonstration for how to change the battery of your device.

Written By: Kellen Fulkerson



## INTRODUCTION


If the battery is not charging and/or not holding a charge, or if the device has taken in water, you are going to want to remove and replace the battery. This guide will show you how to remove the battery so that it may be replaced.

## Step 1 — Battery



- Using your finger, slide the release catch to unlock the battery/memory card cover.

## Step 2

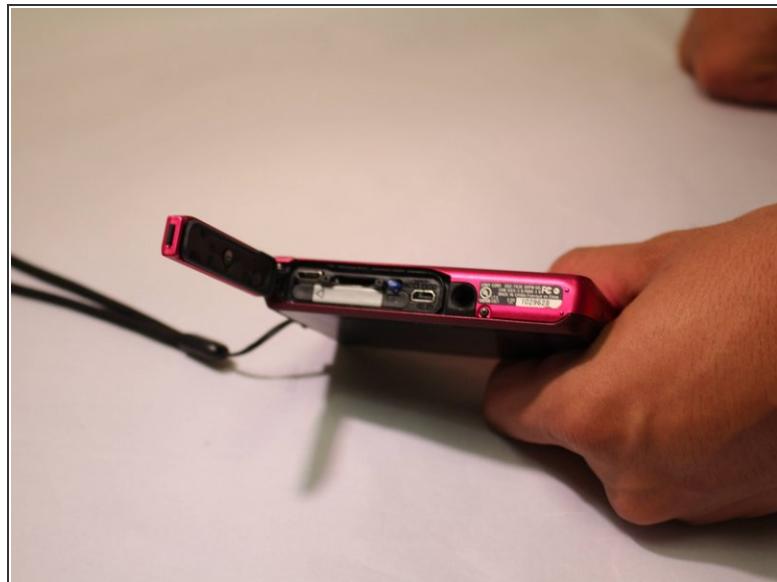

- Open the battery/memory card door.

## Step 3



- Push the battery eject lever to free the battery.

## Step 4



- Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.