




Sony Cyber-Shot DSC-W830 LCD Replacement

This guide will show you the correct way to break the camera down and remove the LCD from the mother board.

Written By: Addyson Salalila

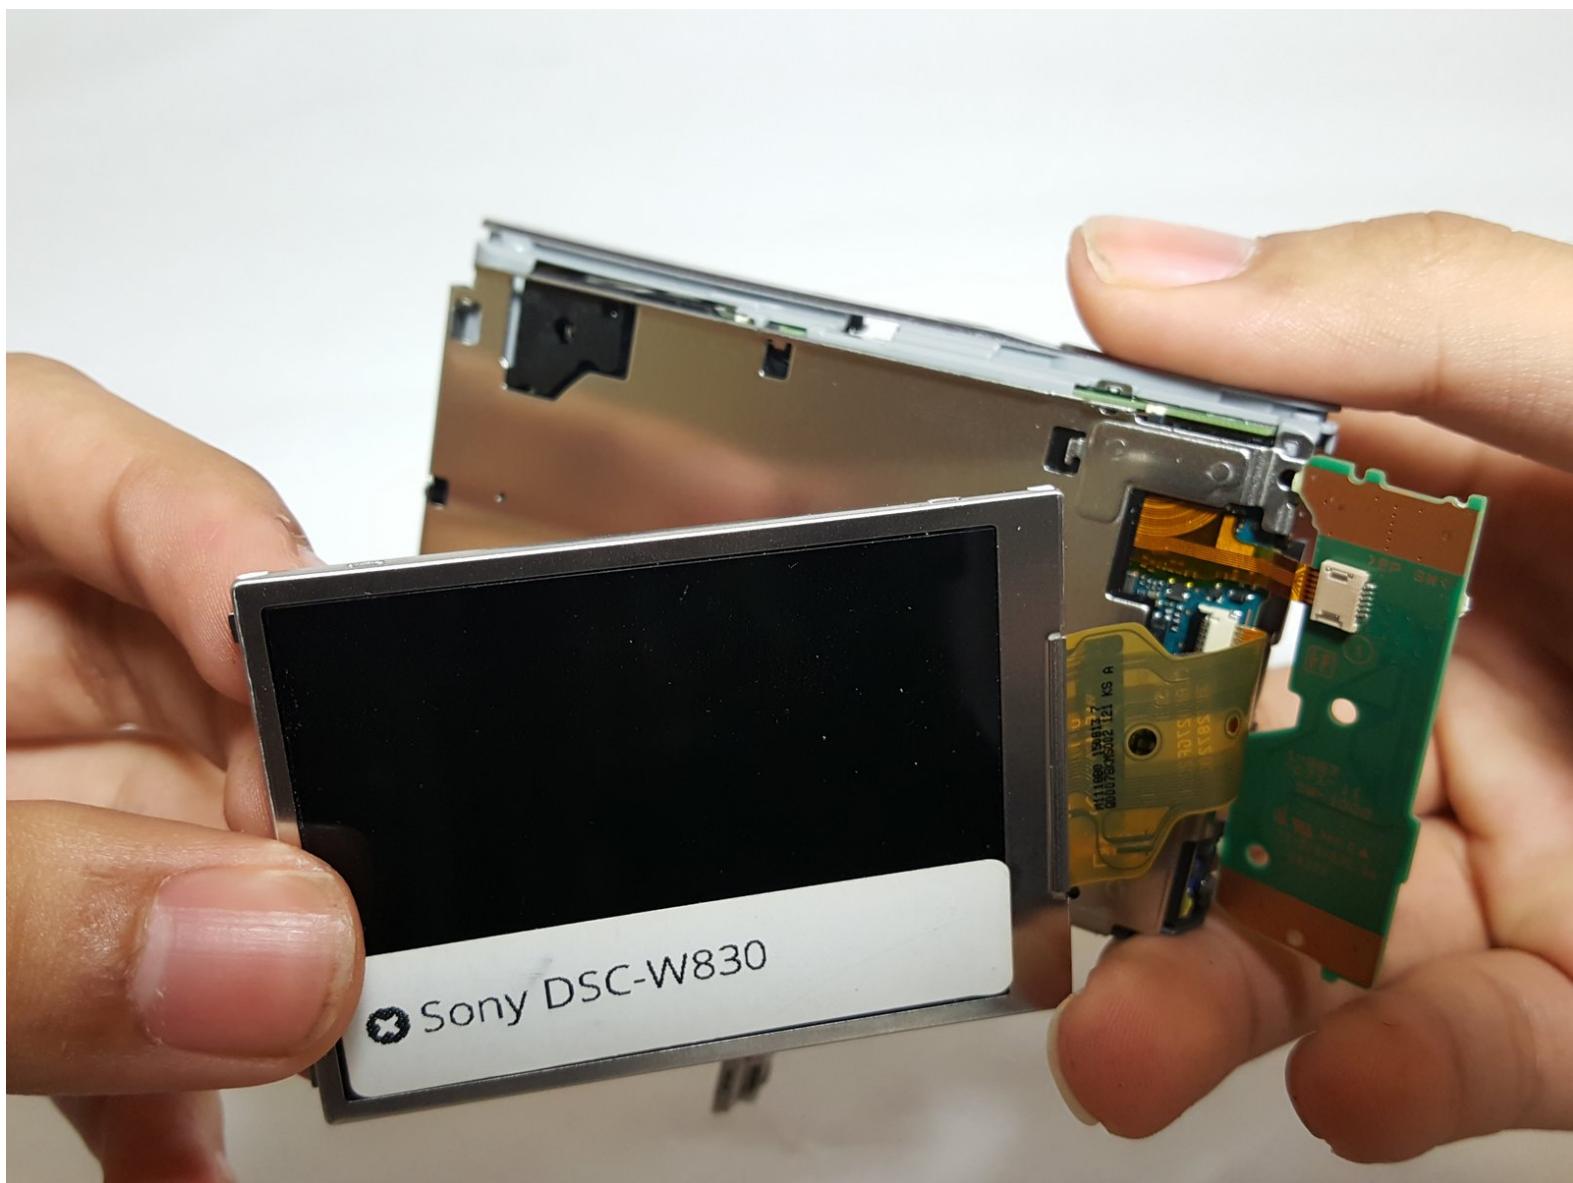

INTRODUCTION

This will show you how to disassemble the camera and show you how to safely and successfully remove the LCD.

TOOLS:

- [Phillips #000 Screwdriver \(6\)](#)

Screws

- [Heavy-Duty Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery




- Slide the lock at the bottom of the camera to "Open".
- *(i)* The door to the battery pack is spring loaded.

Step 2



- Slide the blue clip up and away from the battery.

Step 3

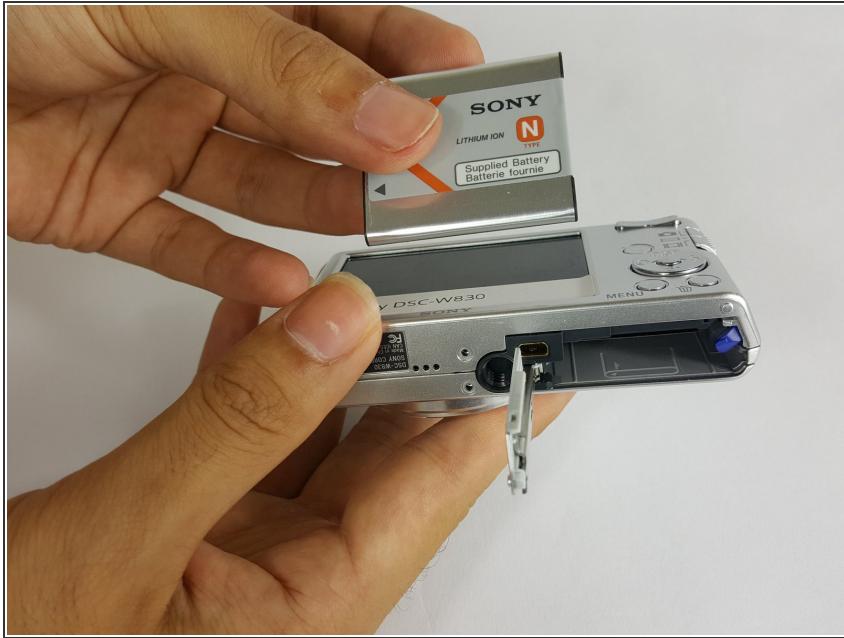

- Remove the battery.

Step 4 — Front and Back Panel




- Remove the six 3.5mm Phillips #000 screws.
- Rotate the lock away from the camera.

Step 5




- Pry the device open with the plastic opening tool.
- There are two clips that help prevent the front panel from separating.

Step 6

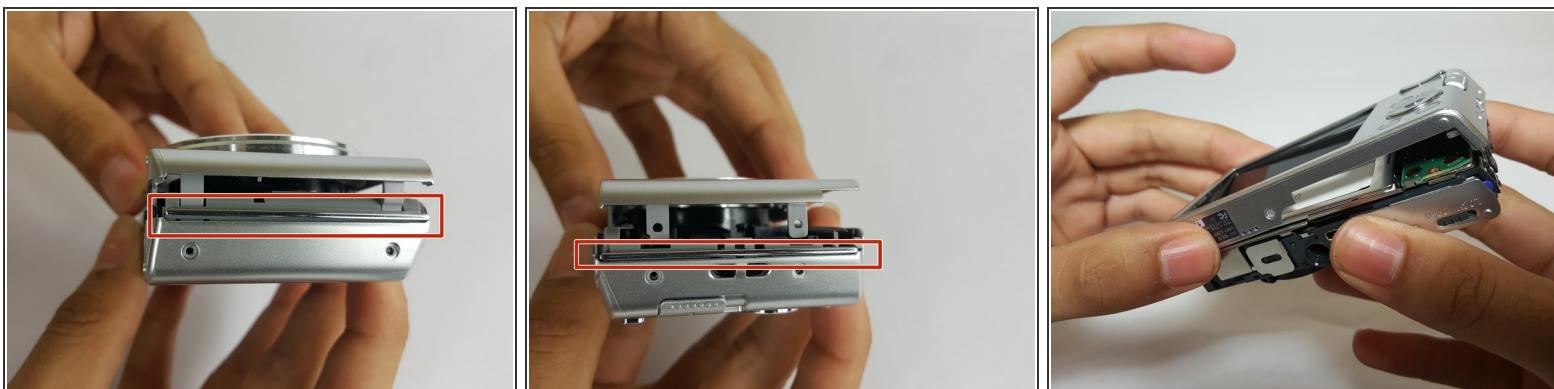


- Remove the two plastic spacers between the front and the back panels.
- The spacers may fall out when removing the panels.
- Carefully remove the back panel.

Step 7 — Button Board

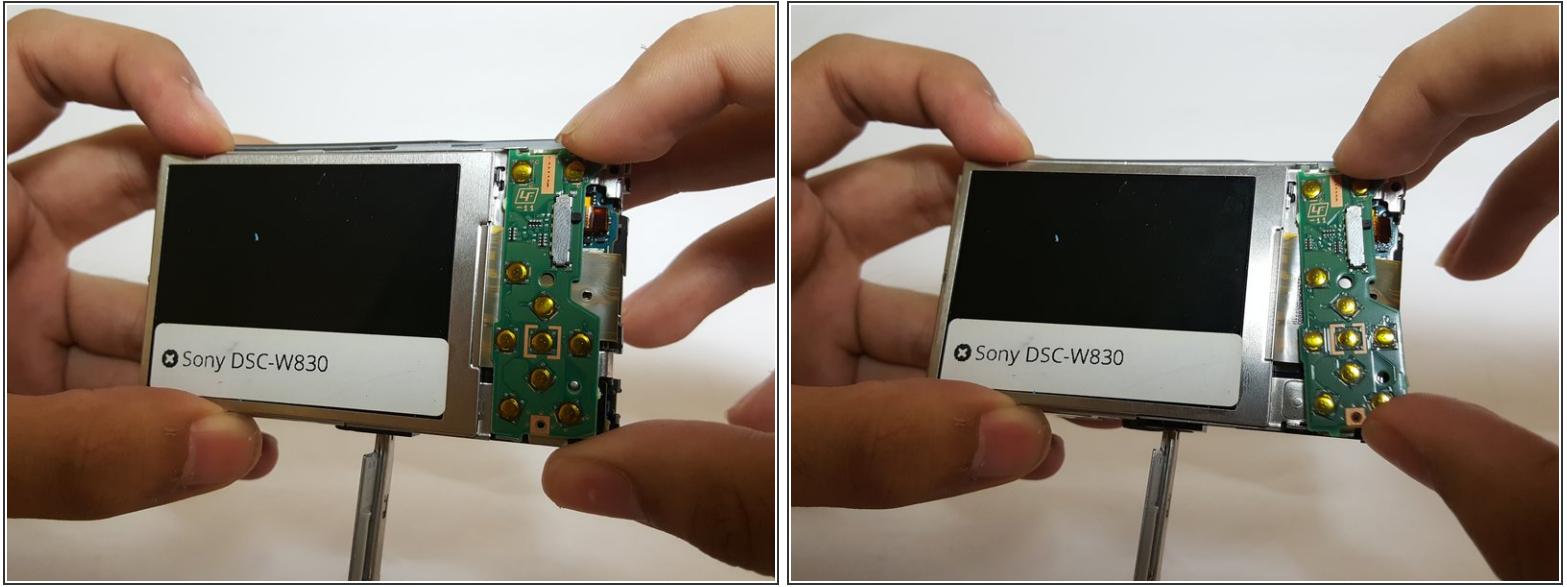


- Gently release the button board from the clips.
- ⓘ Be careful when lifting the button board; the ribbon cable will still be attached.

Step 8

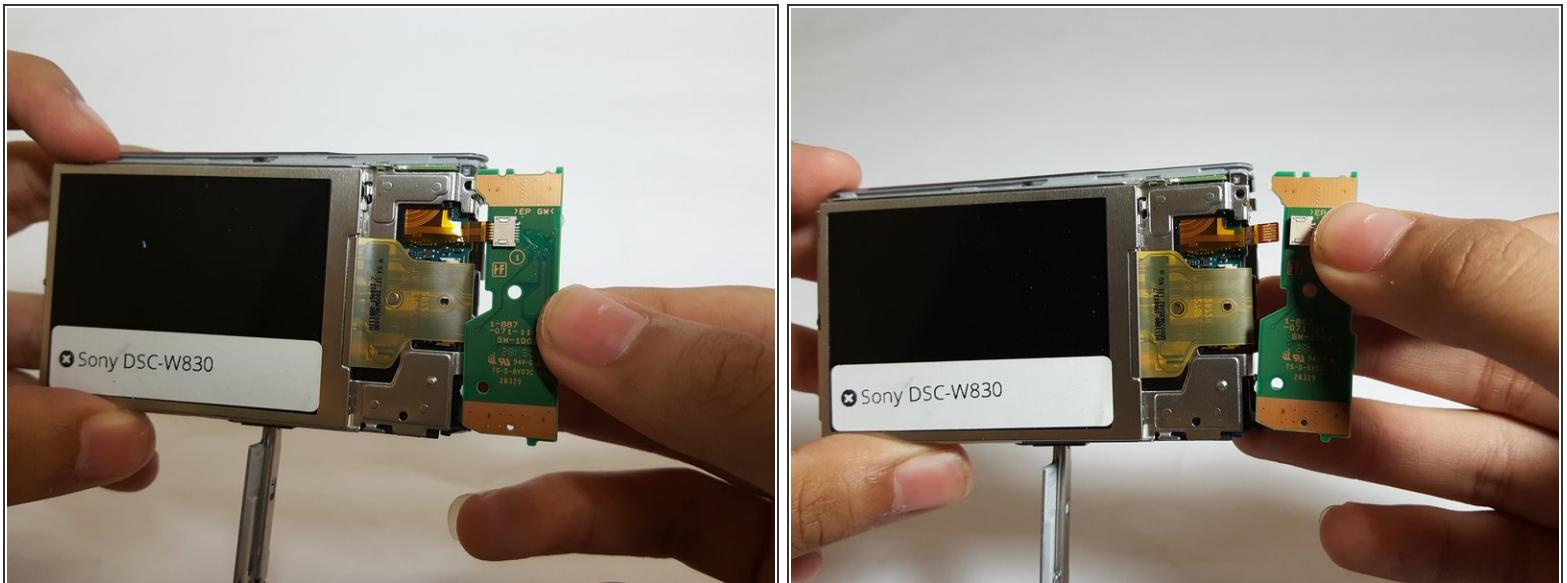



- Disconnect the no-fuss ribbon cable by gently pulling it out of the button board.

Step 9 — LCD

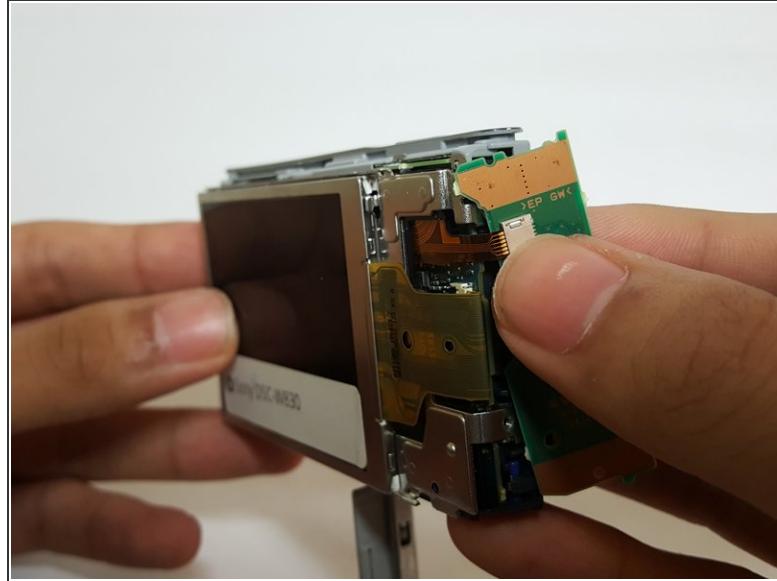

- Push the bottom right corner of the LCD screen out and slide it to the right to release it from the clips.
- Be careful when lifting the LCD screen; the ribbon cable will still be attached.

Step 10

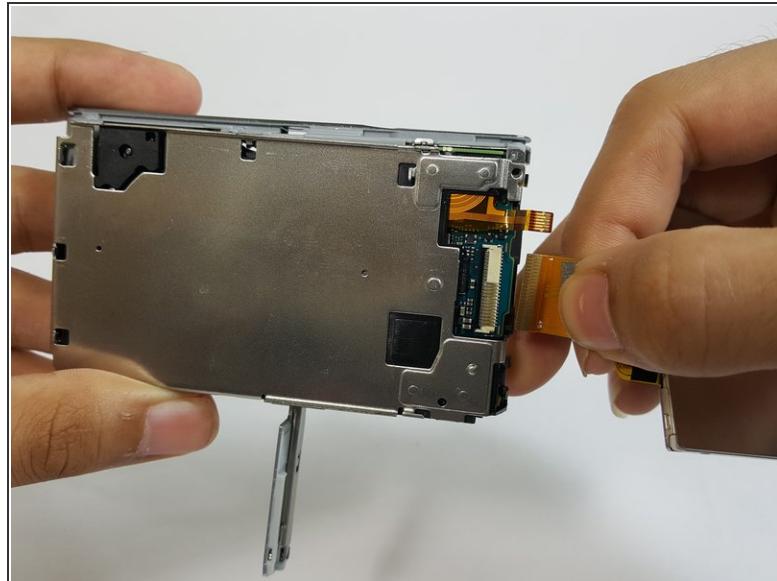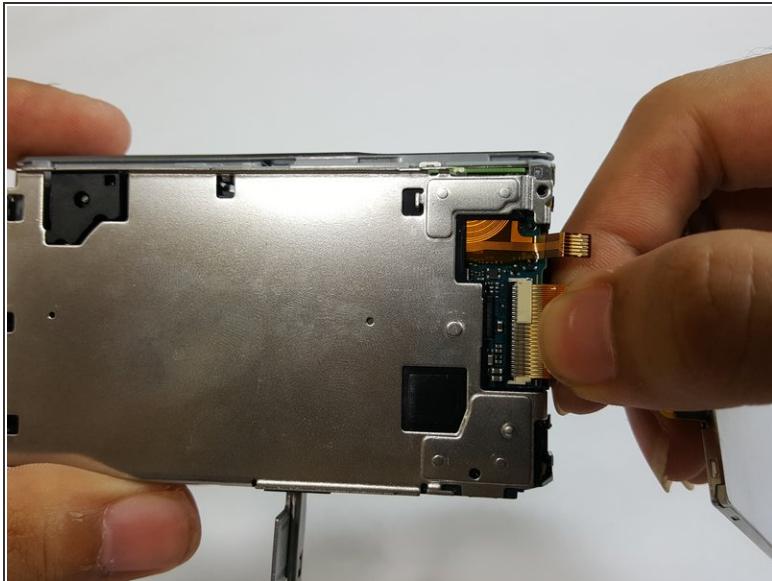

- Grasp the no-fuss ribbon cable and gently pull it out from the motherboard.

To reassemble your device, follow these instructions in reverse order.