


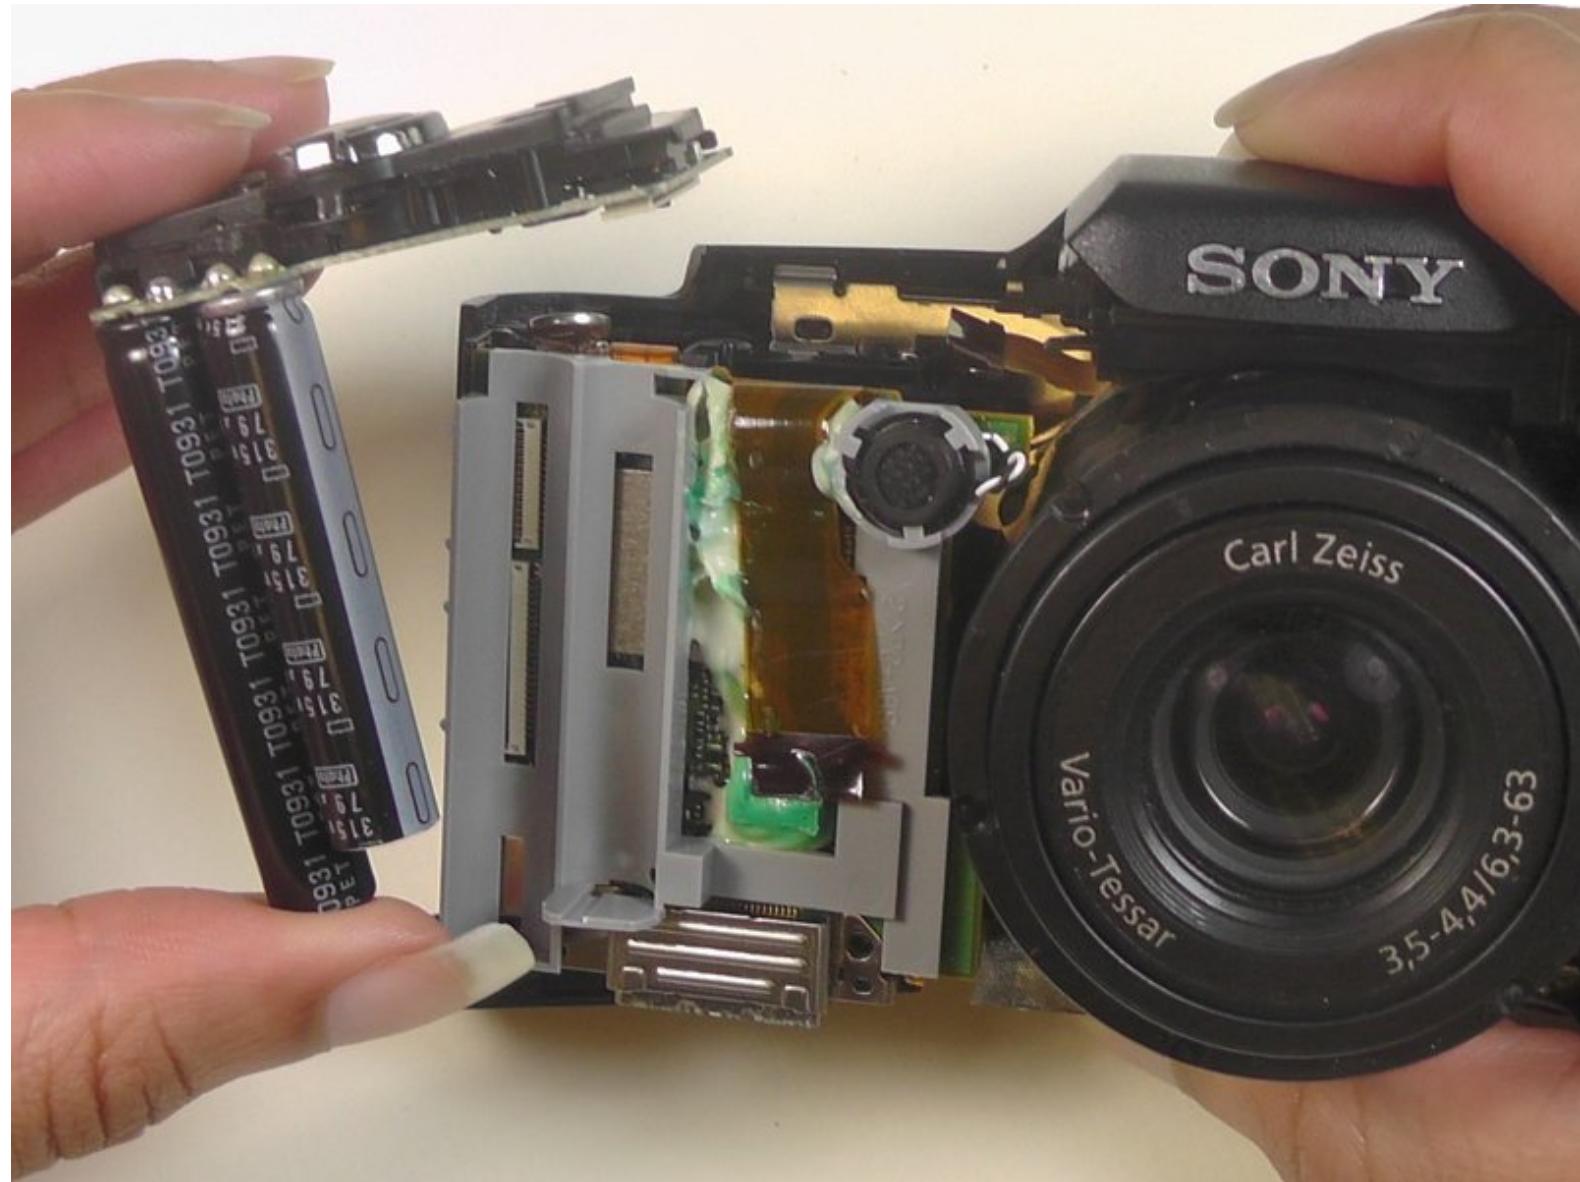

Sony Cyber-shot DSC-H20 Capacitor Assembly Replacement

The following guide will aid in the removal and replacement of the capacitor assembly of your Sony Cyber-shot DSC-H20.

Written By: Reuben Martinez



This document was generated on 2019-09-22 03:43:52 AM (MST).

 **TOOLS:**

- Essential Electronics Toolkit (1)

Step 1 — Capacitor Assembly



- Slide open the cover and remove the battery and the Memory Stick Duo.
- Return the battery cover to its closed position.

Step 2



- Remove all three screws from the bottom of the camera.

Step 3



- Remove the screws on the left and right sides of the camera.

Step 4




- Place the camera upside down with the battery port positioned upward.
- Slide open the battery port.

Step 5



- Pry the front cover of the camera off with the plastic opening tool.

Step 6

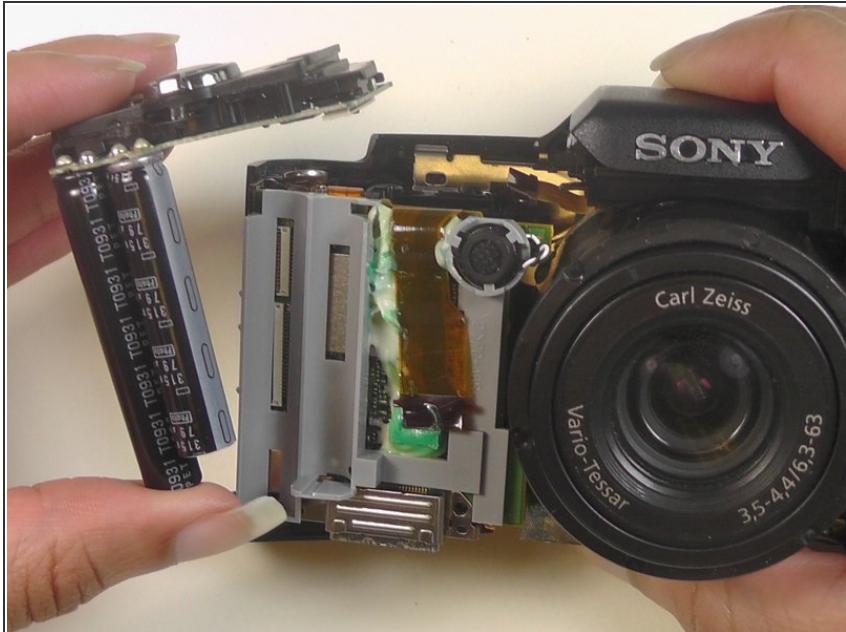

- Remove the power shutter unit.

⚠ Caution: Touching the capacitor wires may cause serious injury. Use a [capacitor discharge probe](#) to safely rid the capacitors of dangerous charges.

To reassemble your device, follow these instructions in reverse order.