



# Sony Cyber-shot DSC-H20 Front Cover Replacement

Remove and replace the front cover of your Sony Cyber-shot DSC-H20 camera.

Written By: Randal Ackett



 **TOOLS:**

- Essential Electronics Toolkit (1)

## Step 1 — Front Cover



- Slide open the battery cover and remove the battery and the Memory Stick Duo.
- Return the battery cover to its closed position.

## Step 2



- Remove all three screws from the bottom of the camera.

## Step 3



- Remove the screws on the left and right sides of the camera.

## Step 4



- Press down on the flash cover to raise the flash.
- Remove both screws that hold the flash cover to the body of the camera.

## Step 5



- Place the camera upside down with the battery port positioned upward.
- Slide open the battery port.

## Step 6



- Pry the front cover of the camera off with the plastic opening tool.

To reassemble your device, follow these instructions in reverse order.