



# Sony Cyber-shot DSC-H300 Flash Replacement

This guide will be helpful in order to replace the flash on the Sony Cyber-shot DSC-H300. The flash is located on the top of the camera.

Written By: Nassr Al Mandhari



This document was generated on 2019-09-18 02:55:51 PM (MST).

## INTRODUCTION

This is a step by step guide showing exactly how to replace the flash on the camera. The flash is located on the top of the camera and can be accessed by pressing the eject button on the front of the camera near the lens. If the flash isn't extending when taking photos please check out our troubleshooting guide.

### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Rear Case



- Remove the 6mm Phillips #000 screws.

## Step 2

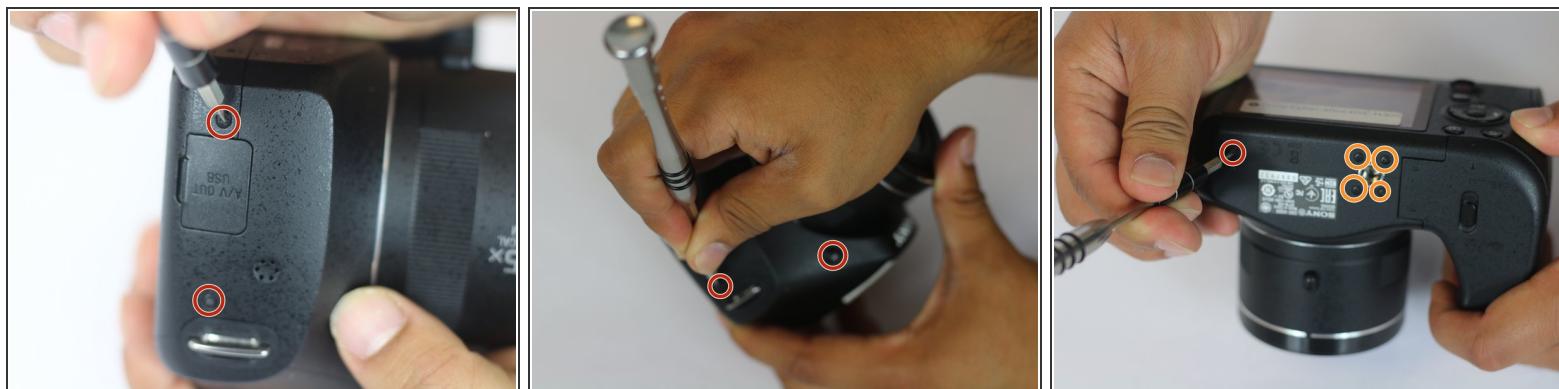

- Remove the five 6mm Phillips #000 screws.
- Remove the four 3mm Phillips #000 screws.

## Step 3




- Use the flat end of a plastic spudger to pry apart the rear cover from the body of the camera.

## Step 4 — Screen





- Remove the two 6mm Phillips #000 screws.

## Step 5

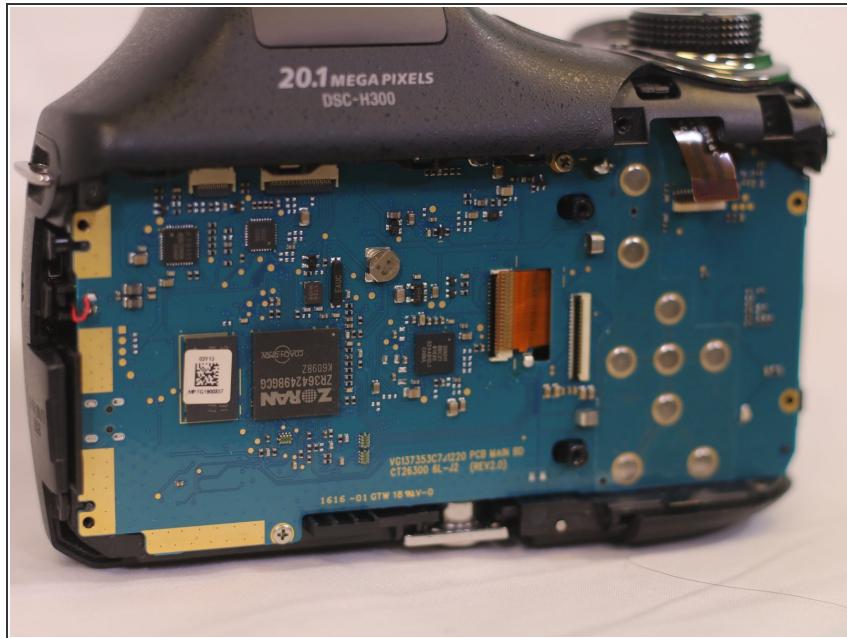



- The screen will be loose so remove it.

## Step 6 — Flash

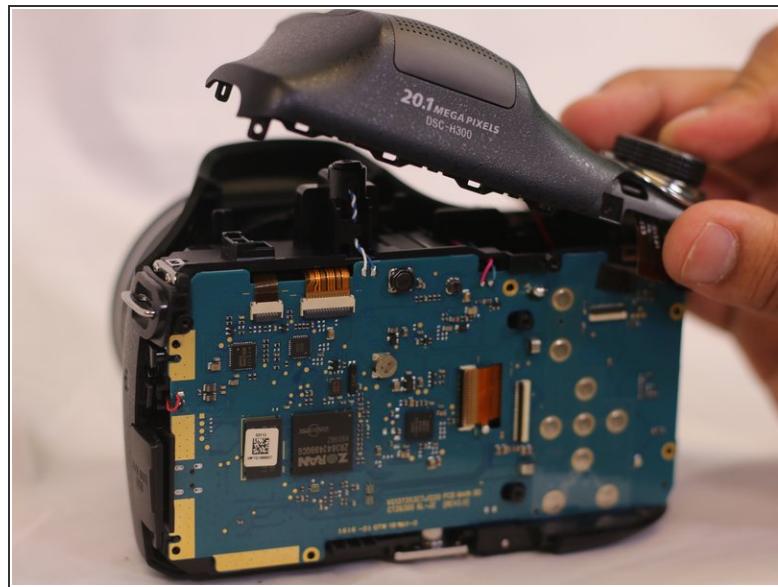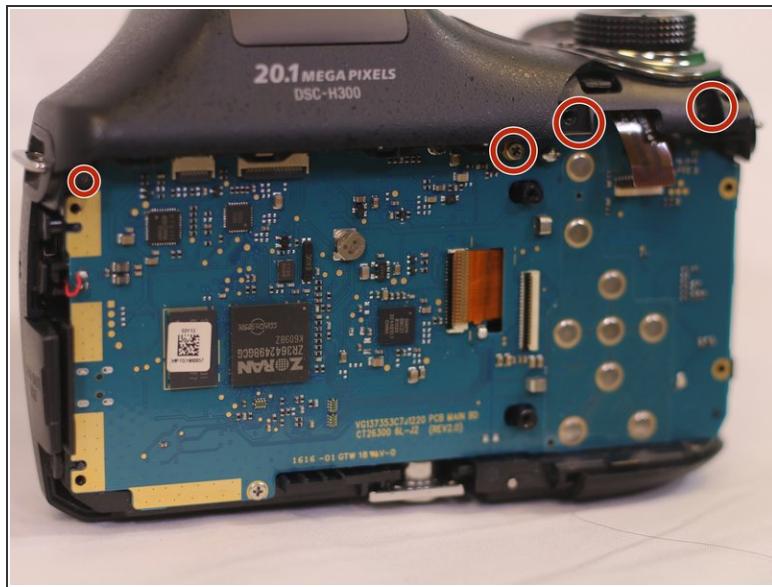


- Remove the four 6mm Phillips #000 screws from the upper case of the camera.
- Remove the upper case.

## Step 7

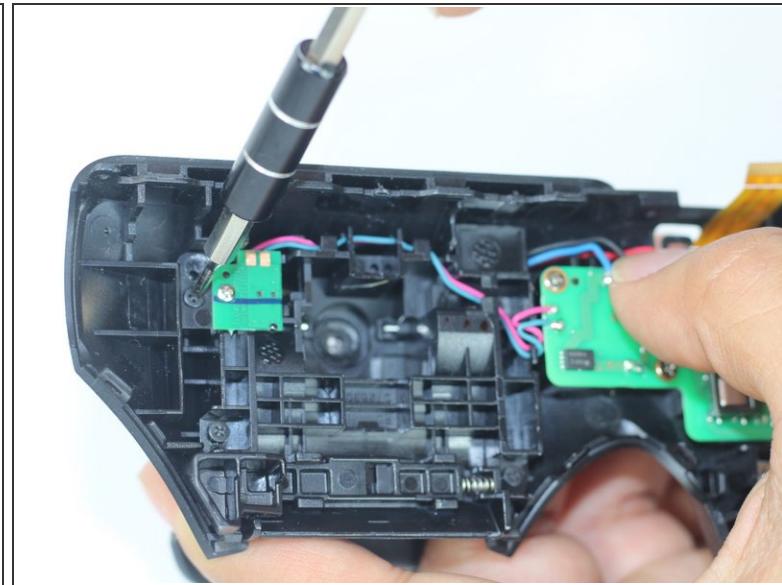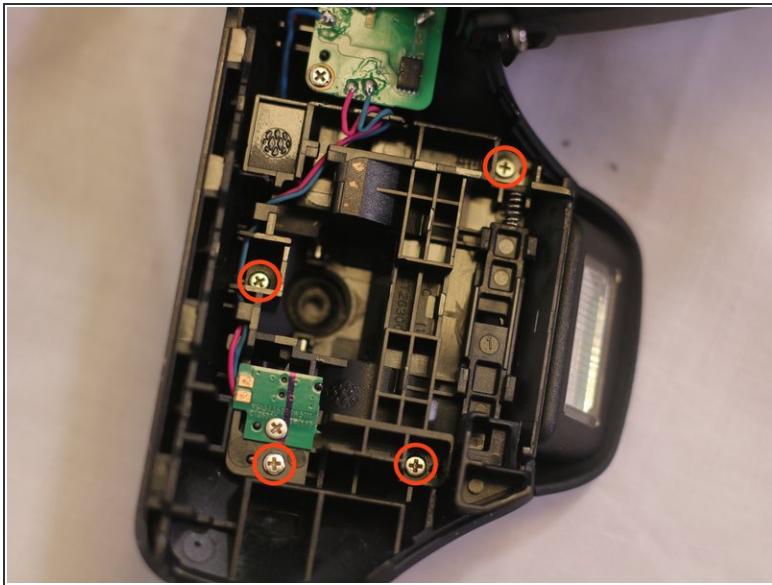

- Remove the four 6mm Phillips #000 screws from the bottom of the case.

## Step 8

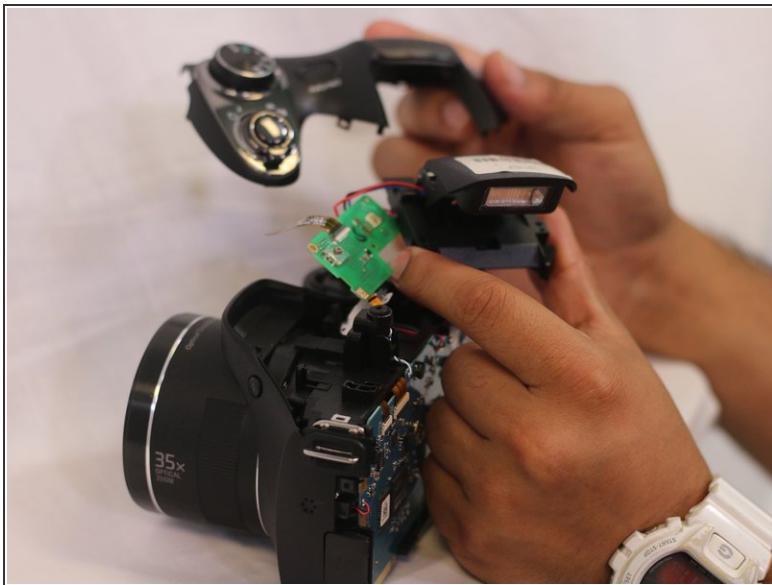

- Slide the flash out and away from the camera to remove.

To reassemble your device, follow these instructions in reverse order.