



# Sony Cyber-shot DSC-H300 Screen Replacement

This guide will help the user replace the screen on the rear of the Sony Cyber-shot DSC-H300. It is located on the backside of the camera, opposite the lens

Written By: Zachary Meyer



This document was generated on 2019-09-22 03:46:29 AM (MST).

## INTRODUCTION

This guide will teach you how to take off the screen on the Sony Cyber-shot DSC-H300.

### TOOLS:

- [Spudger](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Rear Case



- Remove the 6mm Phillips #000 screws.

## Step 2



- Remove the five 6mm Phillips #000 screws.
- Remove the four 3mm Phillips #000 screws.

## Step 3




- Use the flat end of a plastic spudger to pry apart the rear cover from the body of the camera.

## Step 4 — Screen



- Remove the two 6mm Phillips #000 screws.

## Step 5

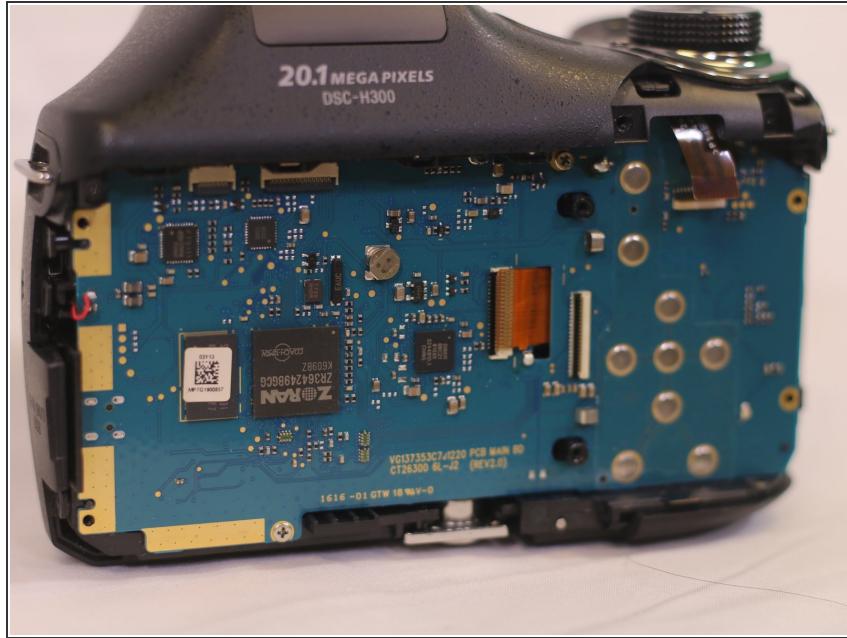

- The screen will be loose so remove it.

To reassemble your device, follow these instructions in reverse order.