



Sony Cyber-shot DSC-H300 Strap Replacement

This guide will show how to replace the strap attached to the Sony Cyber-shot DSC-H300. The strap is attached to both sides of the camera.


Written By: Zachary Meyer



INTRODUCTION

This guide will show a step by step process to replace the strap which is tied down on both sides of the camera. The replacement of the straps is a easy process to complete if the steps provided are followed completely.

Step 1 — Strap

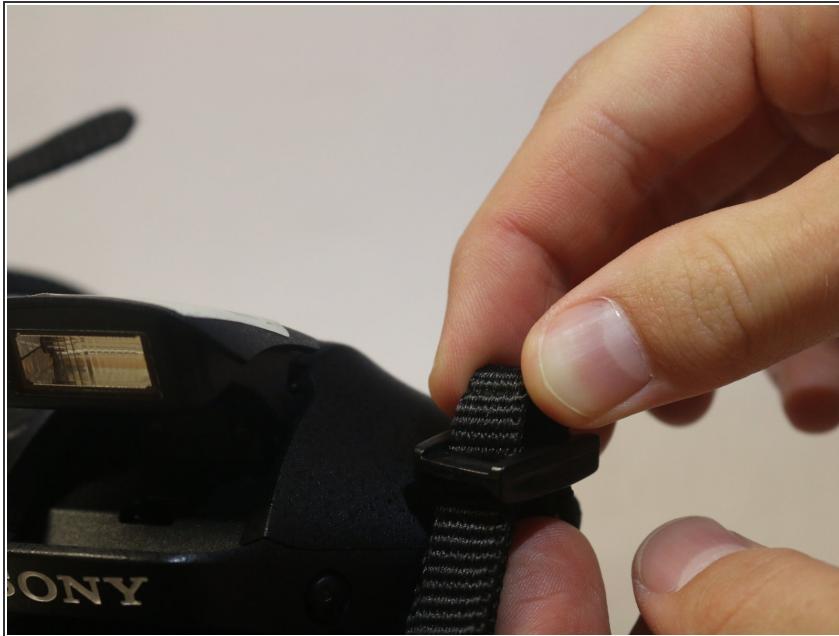

- Pull the strap through the strap adjuster.

Step 2



- Pull the strap out of the strap adjuster.

Step 3



- Pull the strap through the piece of metal that keeps the strap tied down.

Repeat steps 1-3 to remove the strap on the opposite side. To reassemble your device, follow these instructions in reverse order.