




# Sony Cyber-shot DSC-H55 LCD Screen Replacement

This guide will display instructions on how to replace the Sony Cyber-shot DSC-H55 LCD screen.

Written By: Jazmin Young

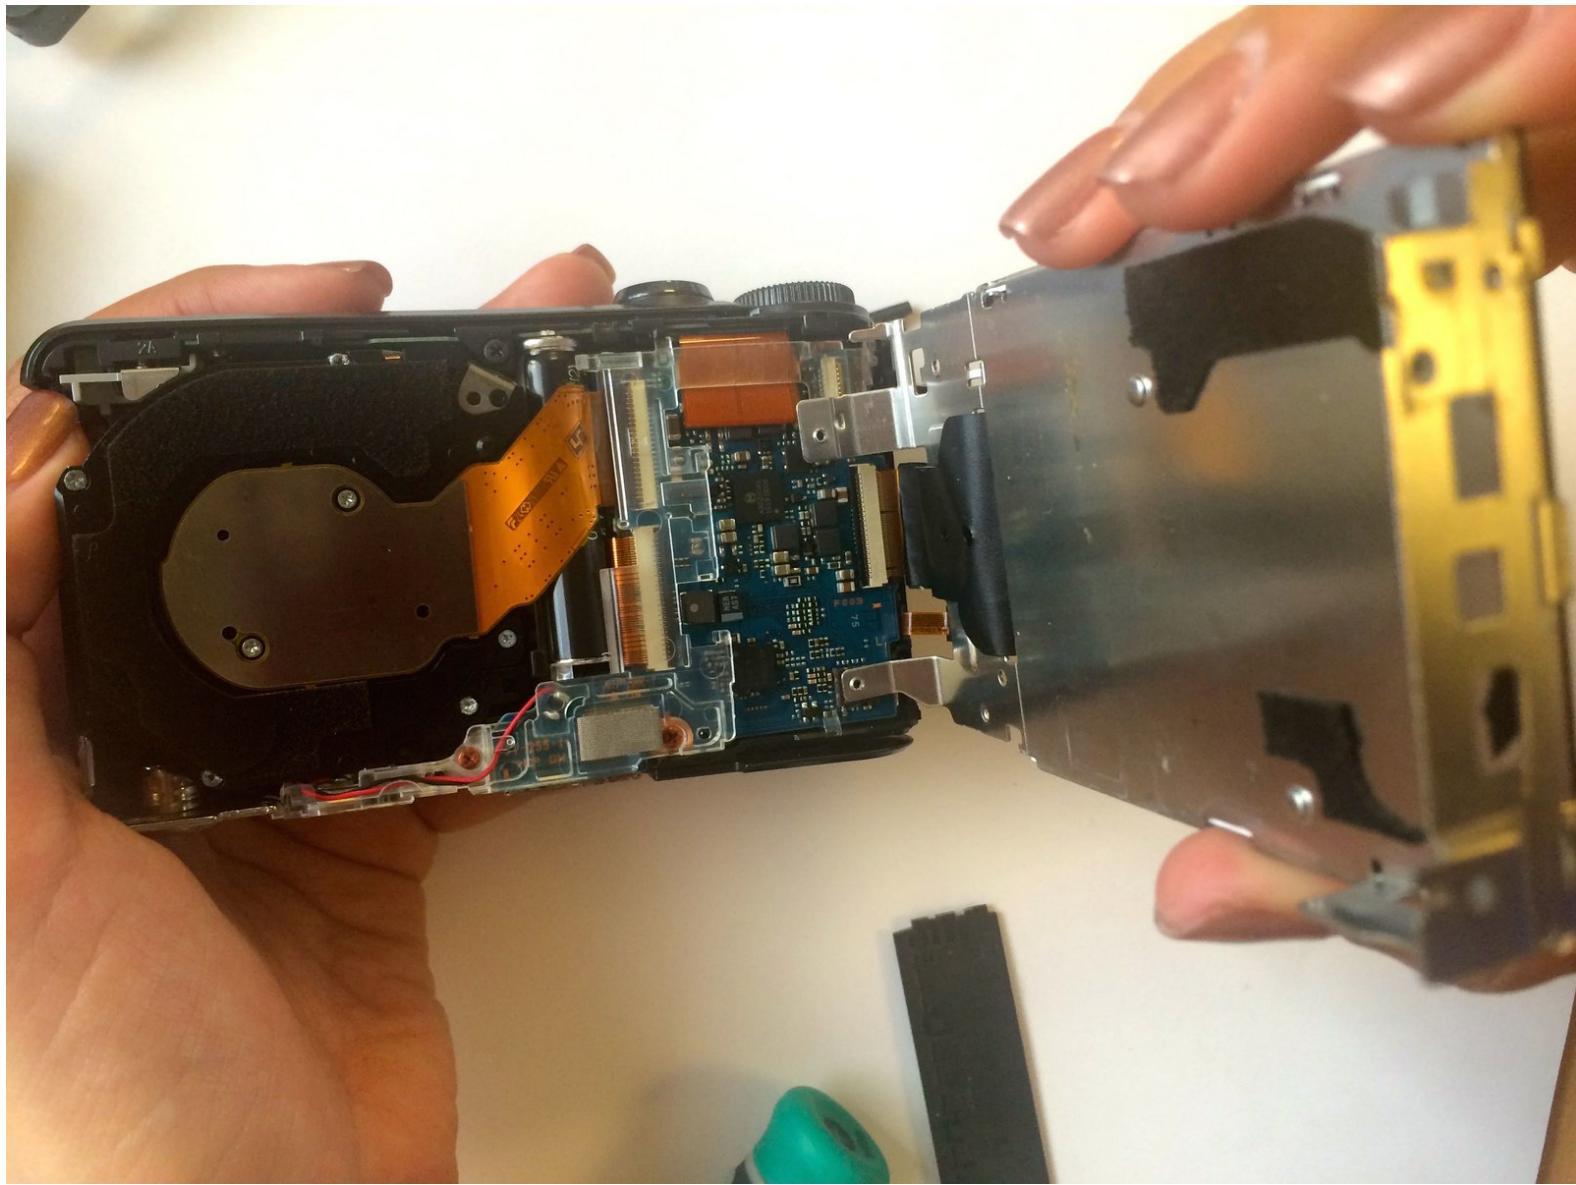

## INTRODUCTION

This Sony Cyber-shot DSC-H55 guide will show you how to remove all the necessary pieces in order to reach and disconnect the LCD screen and replace it.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Removing Screws



- Use the Phillips #00 screwdriver to remove the two screws located on the right side of the camera.

## Step 2 — Removing Bottom Piece



- Use the Phillips #00 screwdriver to remove the three screws on the bottom of the camera.
- Use the plastic opening tool to lift the cover containing the patent information off.

## Step 3 — Removing Left Side Piece



- Place the plastic opening tool in the crack between the metal circle and the black piece on the left.
- Slide the black cover and lift to remove.

## Step 4 — Removing Newly Exposed Screws



- The first picture shows how the left side of the camera looks once we remove the side piece.
- Use the Phillips #00 screwdriver to remove the two screws on this left side.
- Flip your camera to the right side where we removed the first two screws.
- Use the plastic opening tool into the crack and lift in order to loosen that side of the shell. Loosening one side makes removing the entire shell easier.

## Step 5 — Removing Back Shell




- Once the side is loose, apply a small amount of force to remove the shell.
- Remove one side and then the other to avoid breaking any piece of the camera.
- Keep the battery compartment open to make this step easier.

## Step 6 — Removing the Motherboard




- Removing the outer shell will expose the motherboard (the green chip).
- Carefully grab the motherboard and flip it over.
- Locate the ribbon wire protruding from the motherboard. Grip the wire as close to the white square as possible and slightly pull it to disconnect it from the wire.

## Step 7 — Detaching Metal around LCD Screen

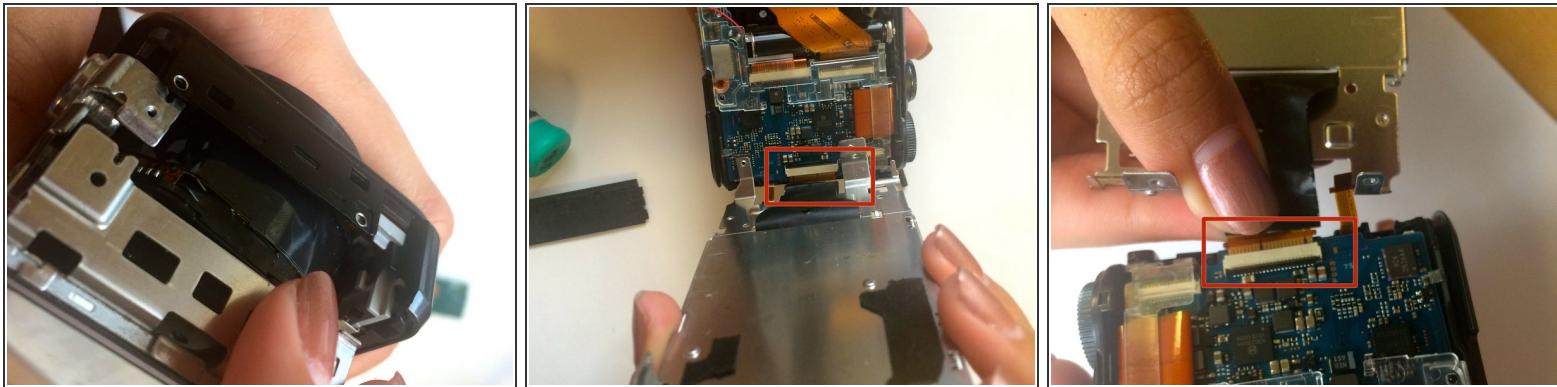

- Remove the LCD Screen to separate the metal frame connecting the screen to the camera.
- Gently pull the metal frame away, keeping in mind that the right end of the screen is attached by a ribbon wire.
- Slowly remove the metal frame until it fully pops off.

## Step 8 — Detaching Ribbon Wires

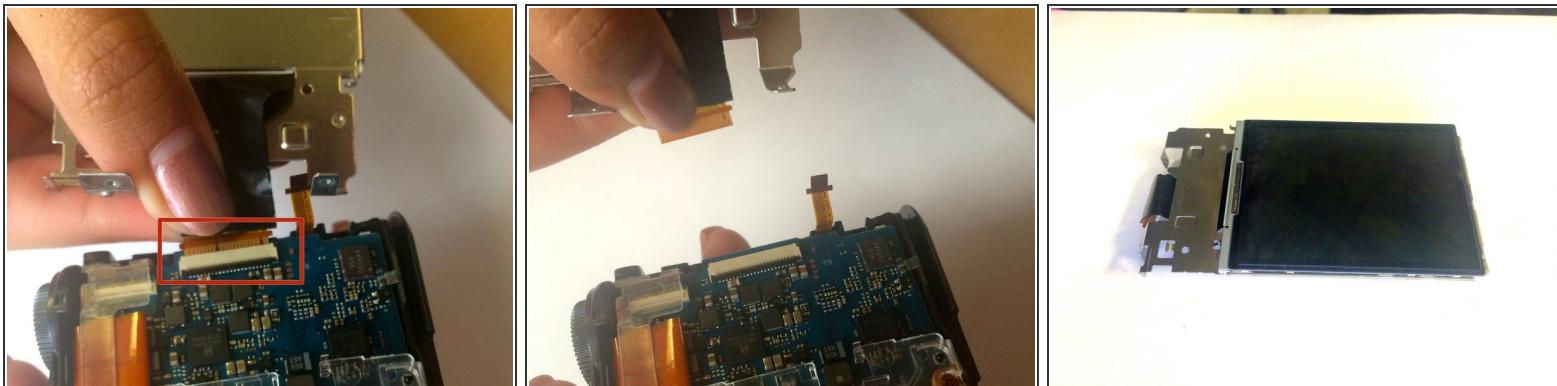

- Flip the metal screen to be facing down. There will be a small black clip on the white connector that will allow the ribbon wire to be removed.
- Carefully lift the black clip and slide the ribbon out in order to remove the LCD screen.

To reassemble your device, follow these instructions in reverse order.