




# Sony Cyber-shot DSC-HX1 Battery Replacement

Use this guide to remove and replace a standard battery from the Sony Cyber-shot DSC-HX1.

Written By: Brianna Greenlaw

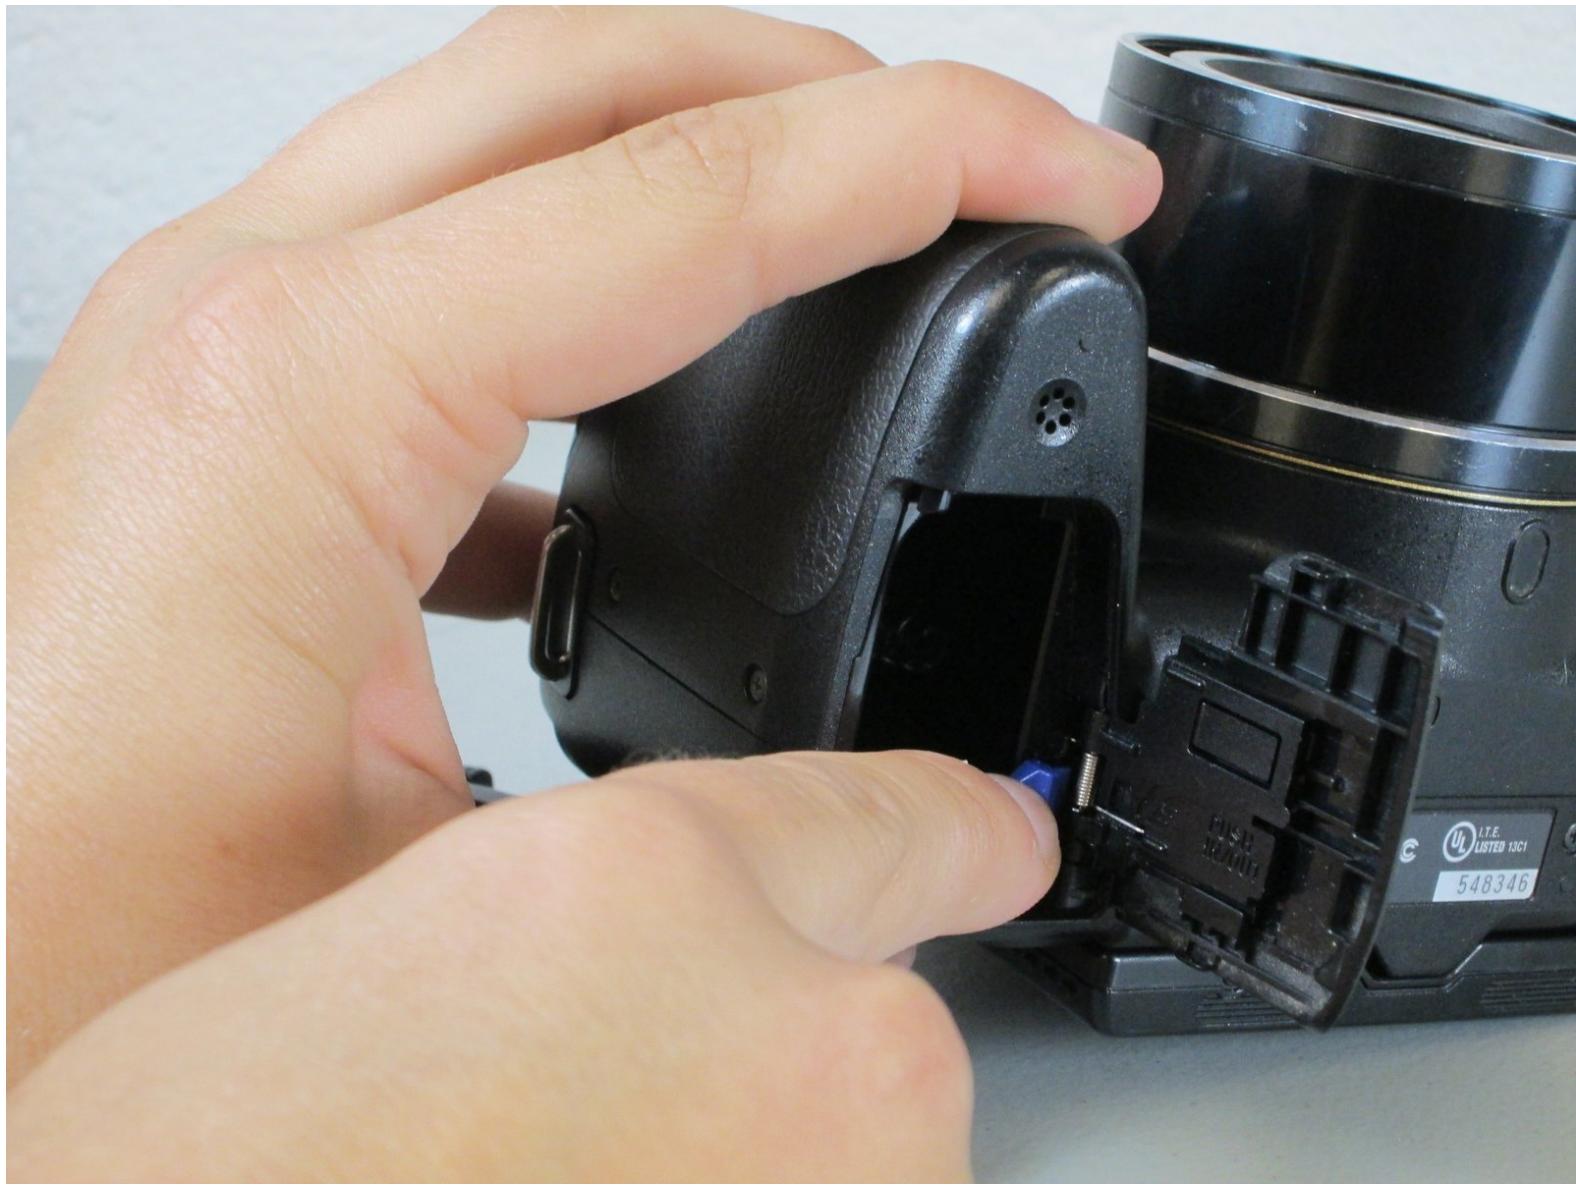

## INTRODUCTION

This guide gives a simple step-by-step process for removing and/or replacing the battery. Battery removal is required for most other repairs of this device.

## Step 1 — Battery



**⚠** Make sure the surface you place the screen on is clean of debris and dust. Otherwise you risk scratching your screen.

- Place the camera with the bottom facing you and the lens facing up.

## Step 2



- Push down and away from the camera to the left on the indicated indentation in the battery cover. The compartment should slide open as shown.

## Step 3



- Push the blue tab towards the camera body to the right, while simultaneously pulling out the battery.

*(i)* The battery is not shown here. However, normally the battery would be in the displayed compartment.

To reassemble your device, insert the new battery in the compartment, making sure that your battery has the correct orientation, then follow these instructions in reverse order.