



Sony Cyber-shot DSC-HX1 Button Assembly Replacement

This guide will assist you in replacing the zoom and photo button on the Sony Cyber-shot DSC-HX1.

Written By: Brianna Greenlaw



This document was generated on 2019-09-22 03:48:12 AM (MST).

INTRODUCTION

Removal and replacement of these buttons requires some previous disassembly and removal of the motherboard.

TOOLS:

- **Phillips #00 Screwdriver (1)**

Step 1 — Battery



⚠ Make sure the surface you place the screen on is clean of debris and dust. Otherwise you risk scratching your screen.

- Place the camera with the bottom facing you and the lens facing up.

Step 2



- Push down and away from the camera to the left on the indicated indentation in the battery cover. The compartment should slide open as shown.

Step 3



- Push the blue tab towards the camera body to the right, while simultaneously pulling out the battery.


(i) The battery is not shown here. However, normally the battery would be in the displayed compartment.

Step 4 — Button Assembly



- On the top of the inside the battery compartment, remove the #00 6.0 mm Phillips screw.

Step 5

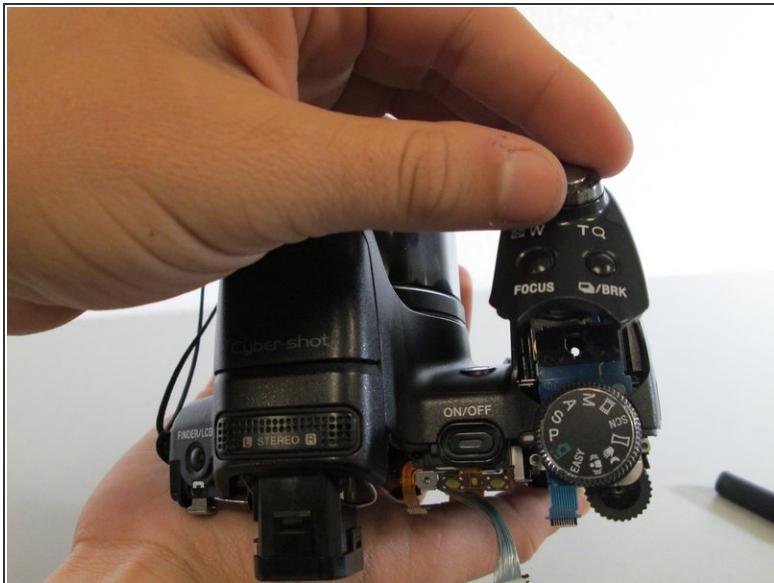

- Lift the button housing from its position on top of the camera.

To reassemble your device, follow these instructions in reverse order.