



Sony Cyber-shot DSC-HX1 LCD Screen Replacement

This guide will instruct you how to remove and replace the LCD display screen on the back of the Sony Cyber-shot DSC-HX1.

Written By: Brianna Greenlaw



This document was generated on 2019-09-22 03:48:22 AM (MST).

INTRODUCTION

Replacement of this component will involve the disassembly of the screen's enclosure and careful disconnection of its cable.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — LCD Screen



- Extend the LCD screen away from the camera to access the screws on the back of its housing.

Step 2



- Unscrew the three #00 2.0 mm Phillips screws on the back of the casing.

Step 3




- Place the camera with the lens down.
- Tilt the screen upwards to see the screw on the bottom of the housing.
- Unscrew this #00 4.0 mm Phillips screw.

Step 4



- Pry the casing apart using your plastic opening tool. Begin by prying at the hole where you removed the screw and continue along the seam.

Step 5

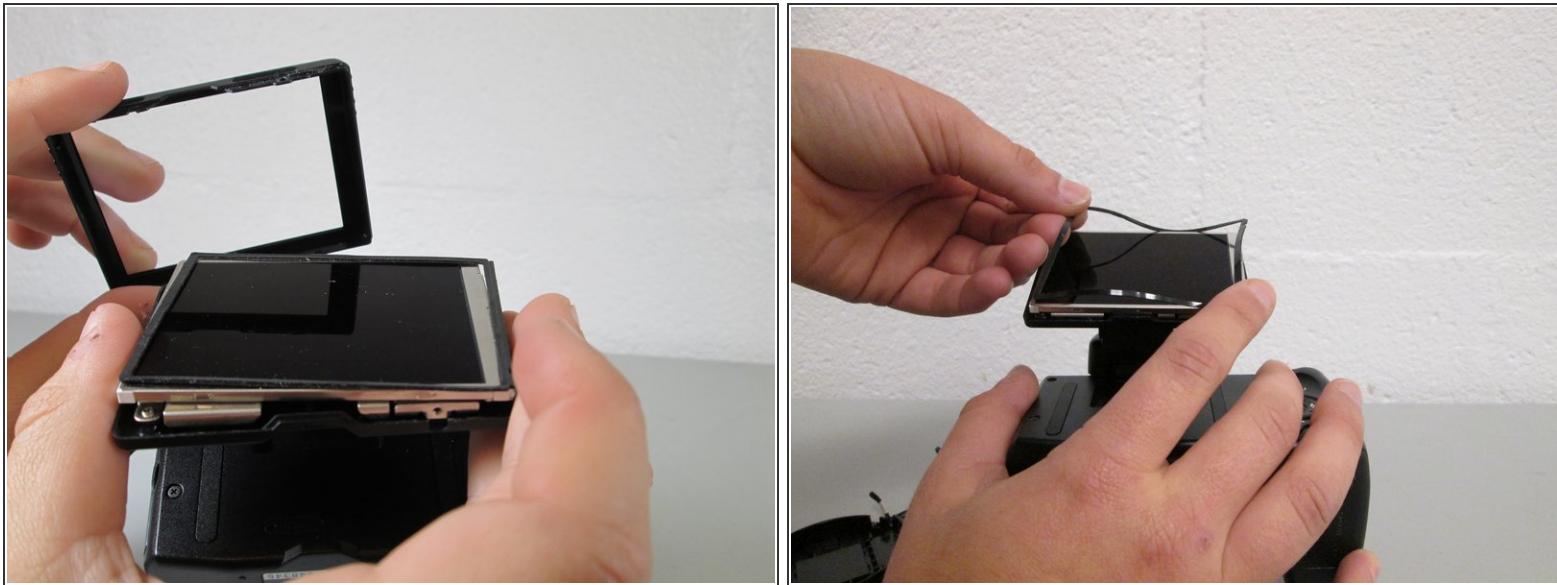

- Lift the transparent section of the plastic housing off.
- Lift the rubber screen bumper off of the screen.

Step 6



- Pull up on the screen to reveal the data attachment cable.
- Carefully pull the LCD screen away from enclosure to remove the cable and screen completely.

To reassemble your device, follow these instructions in reverse order.