



# Sony Cyber-shot DSC-HX100V Battery Replacement

This guide will show how to replace the battery.

Written By: Clarra



## INTRODUCTION

If your camera's battery will not charge, this guide will show you how to replace the battery in three easy steps.

## Step 1 — Battery



- Turn off the camera by pressing the ON/OFF button.

**⚠** If the battery remains on during battery replacement, data could be lost.

## Step 2



- Flip the camera so that the lens is facing down.
- Use your thumb to slide the battery panel open.
- Lift your thumb to reveal the battery compartment.

## Step 3



- Replace the battery.

To reassemble your device, follow these instructions in reverse order.