


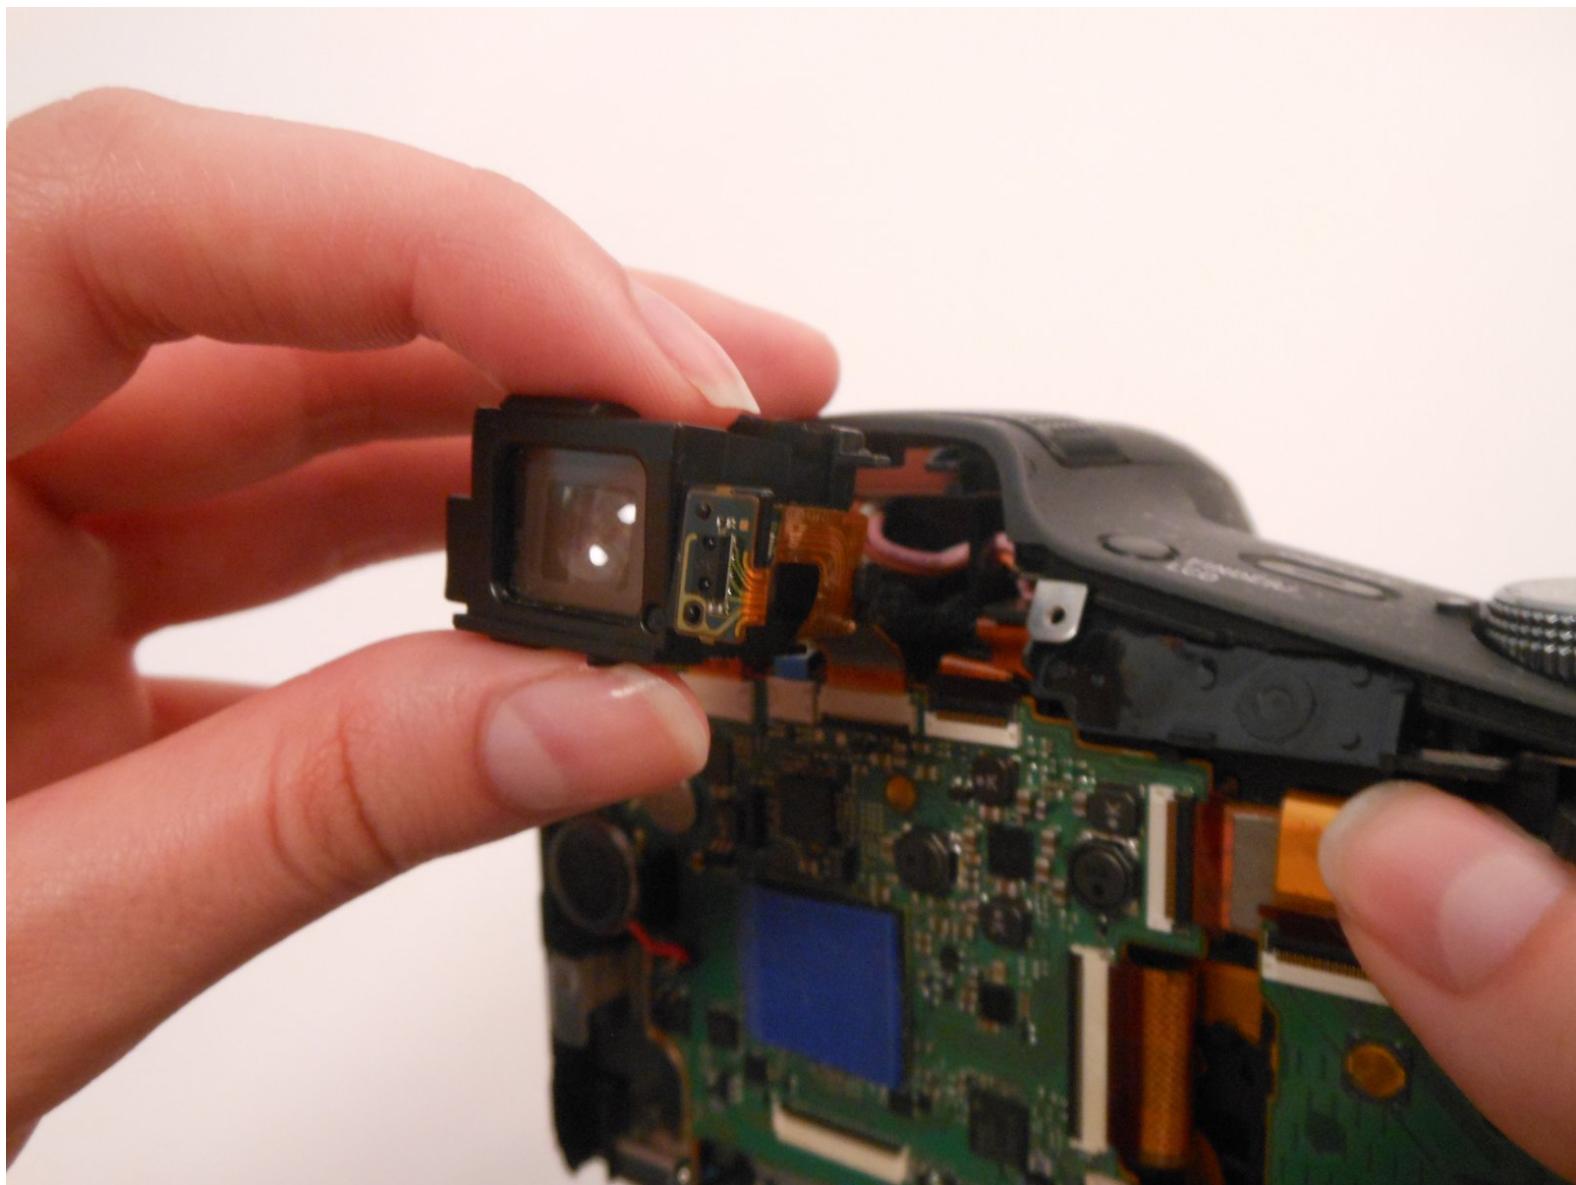

# Sony Cyber-shot DSC-HX100V Viewfinder Replacement

This guide will provide 6 easy-to-follow steps that will display how to replace the viewfinder of a Sony Cyber-shot HX100V.

Written By: DaQuawn



This document was generated on 2019-09-22 03:49:30 AM (MST).

## INTRODUCTION

If you have a faulty viewfinder and would like to know how to replace it yourself, this guide will show you how to do just that. By following these 6 simple steps, you will have your camera repaired within a few minutes and you will also save a couple of bucks.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Viewfinder



- **Make sure camera is turned off.**
- Press the ON/Off button to turn off the camera.

 **WARNING:** Data may be lost if the camera remains on.

## Step 2



 Use the Phillips screwdriver size #00 to remove the 1.59mm #00 screws.

- Remove 2 screws from the side of the camera.
- Remove 4 screws on the bottom of the camera.
- Remove 1 screw next to the eyepiece.

## Step 3




- Flip the screen back to reveal 2 hidden screws.
- Remove the two 1.59mm #00 screws on the left with the Phillips #00 screwdriver.

## Step 4




- Pull the back panel of the camera upward.
- *(i)* Use a spudger to help pry open the back panel.

## Step 5

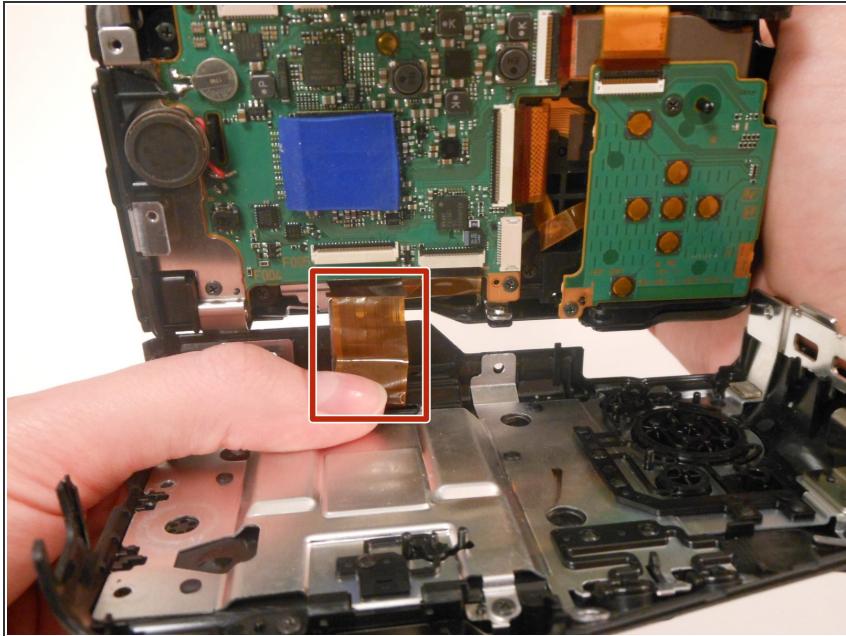

- Open the back panel to view the inside of the camera.
- If the orange ribbon cable disconnects from its designated port, do not panic. The cable is easy to reinsert.

## Step 6

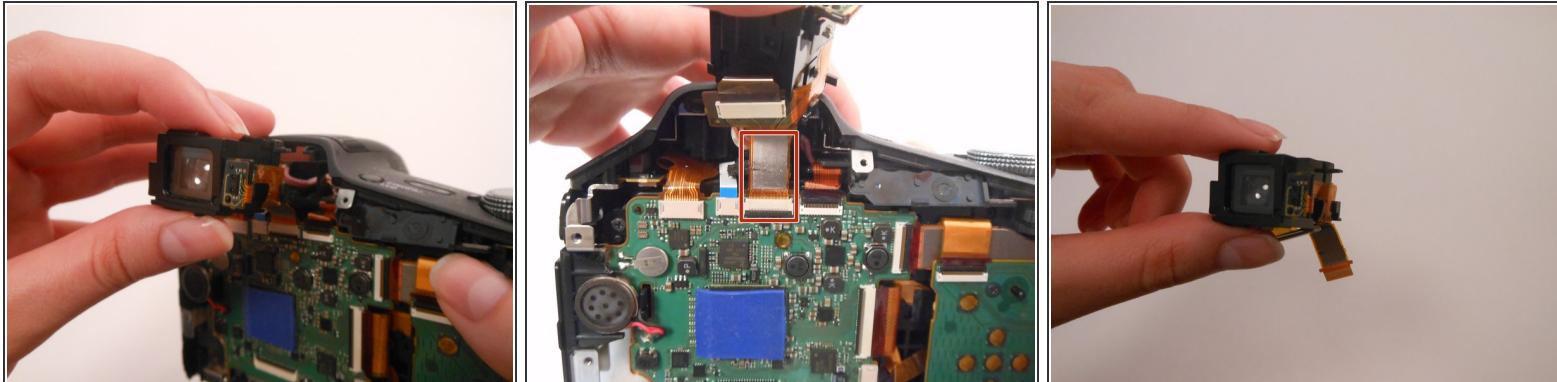

- Carefully pull out the the eyepiece.
- Detach the orange ribbon cable that connects it to the green panel by carefully pulling outwards.

To reassemble your device, follow these instructions in reverse order.