




Sony Cyber-shot DSC-HX300 Motherboard Replacement

This guide will show how to replace the motherboard.

Written By: Elizabeth Surface

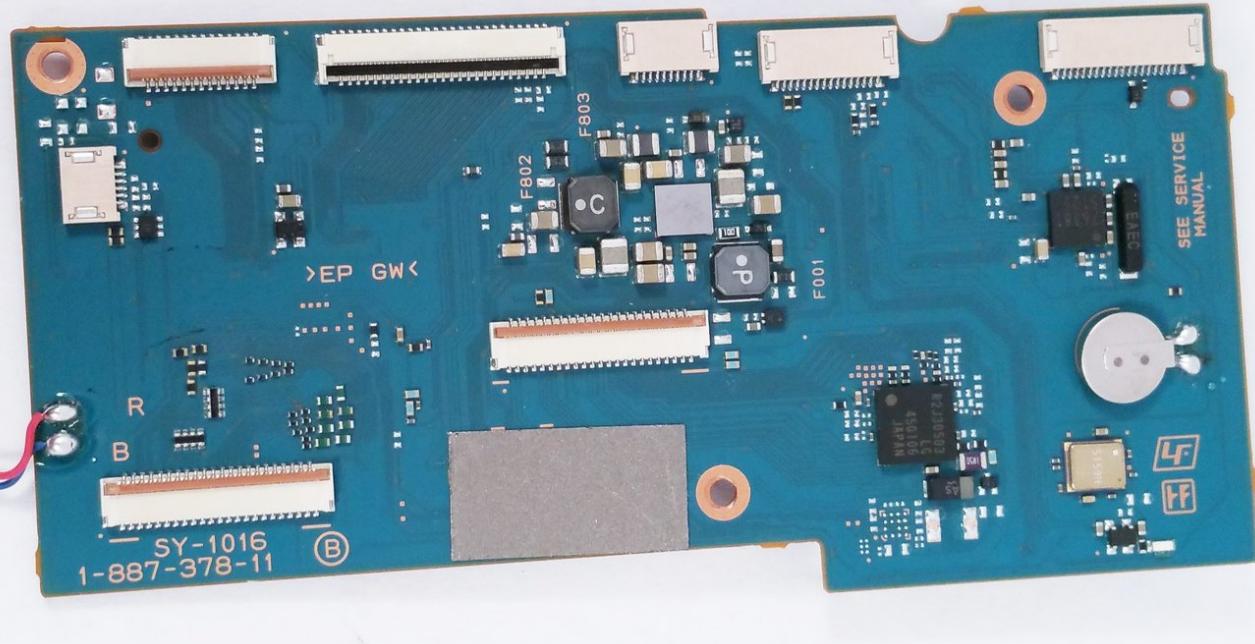

INTRODUCTION

If the Sony Cyber-shot DSC-HX300 is failing to power, while it has a full battery and the LCD screen works, then it is possible that the motherboard has gone out and needs to be replaced.

TOOLS:

- Small Phillips Head Screwdriver (1)
- iFixit Opening Tools (1)
- Magnetic Project Mat (1)

Step 1 — Battery



! Make sure the camera is powered off

- Turn the camera upside down. This is a view of the bottom of the camera.

Step 2



- Push battery cover away from the camera.

Step 3



- Push the blue tab that secures the battery. The battery will then spring out.

Step 4



- Remove the battery.

Step 5 — Motherboard



 Make sure to remove the battery before disassembly to prevent electrocution.


- Remove the 3 (4 cm) Phillips head screws located on the back of the camera.
- Remove the 2 (4 cm) Phillips head screws on the right side of the camera.
- Turn the camera upside down to remove the remaining the 3 (4 cm) Phillips head screws holding the plastic camera housing together.

Step 6




- Using a plastic opening tool, separate the plastic camera housing.

Step 7

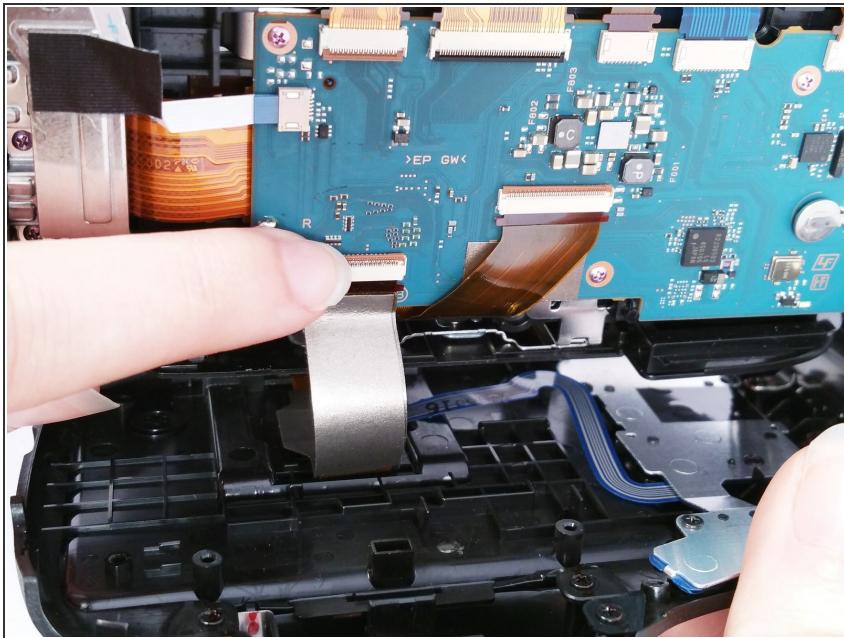



- Disconnect the ribbon wire attaching the screen to the camera.

Step 8

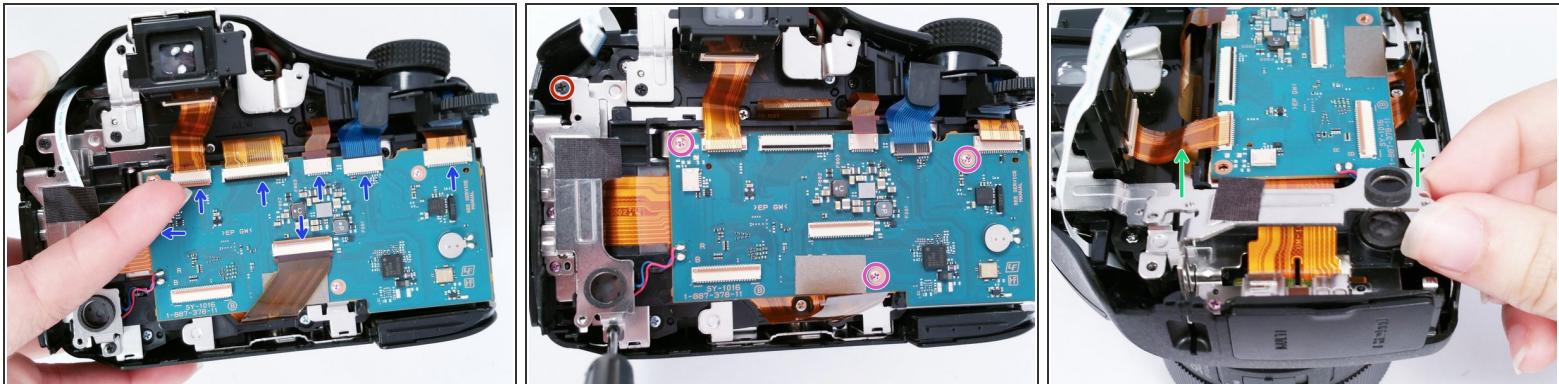

- Carefully remove the 7 ribbon wires connected to the mother board.
- Remove the 2 (5 cm) Phillips head screws on the speaker mounting bracket.
- Remove the 3 (4 cm) Phillips head screws that secure the motherboard to the camera.
- Lift up on the speaker mounting bracket to remove it.

Step 9

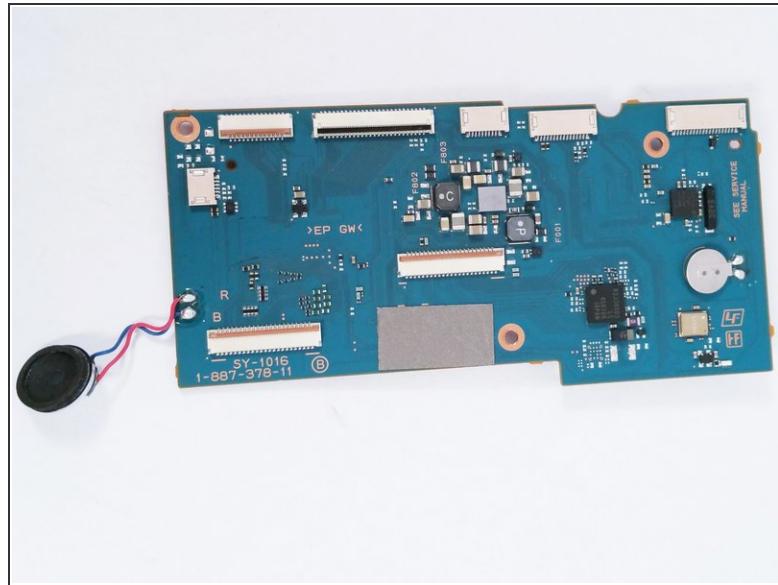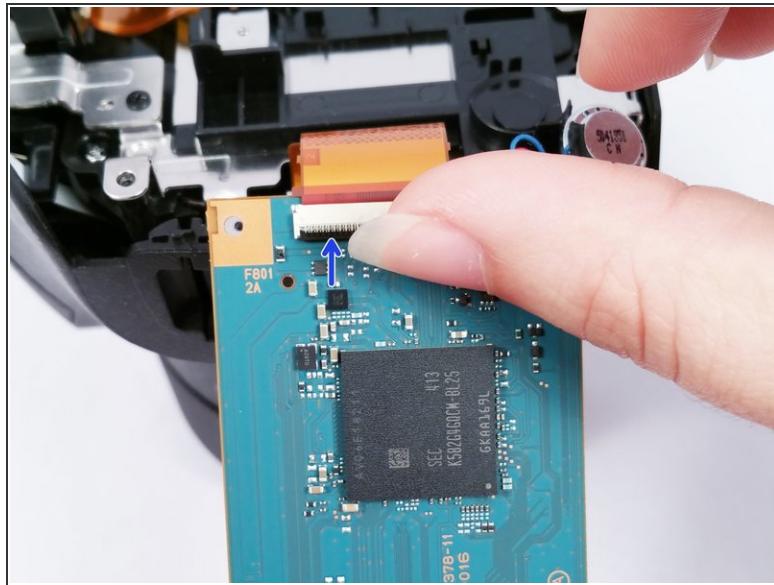

- Carefully disconnect the ribbon wire connecting the HDMI port to the Motherboard.
- Once the Motherboard is removed the replacement can be installed.

To reassemble your device, follow these instructions in reverse order.