




# Sony Cyber-shot DSC-HX300 View Finder Replacement

This guide will help to replace the view finder.

Written By: Elizabeth Surface

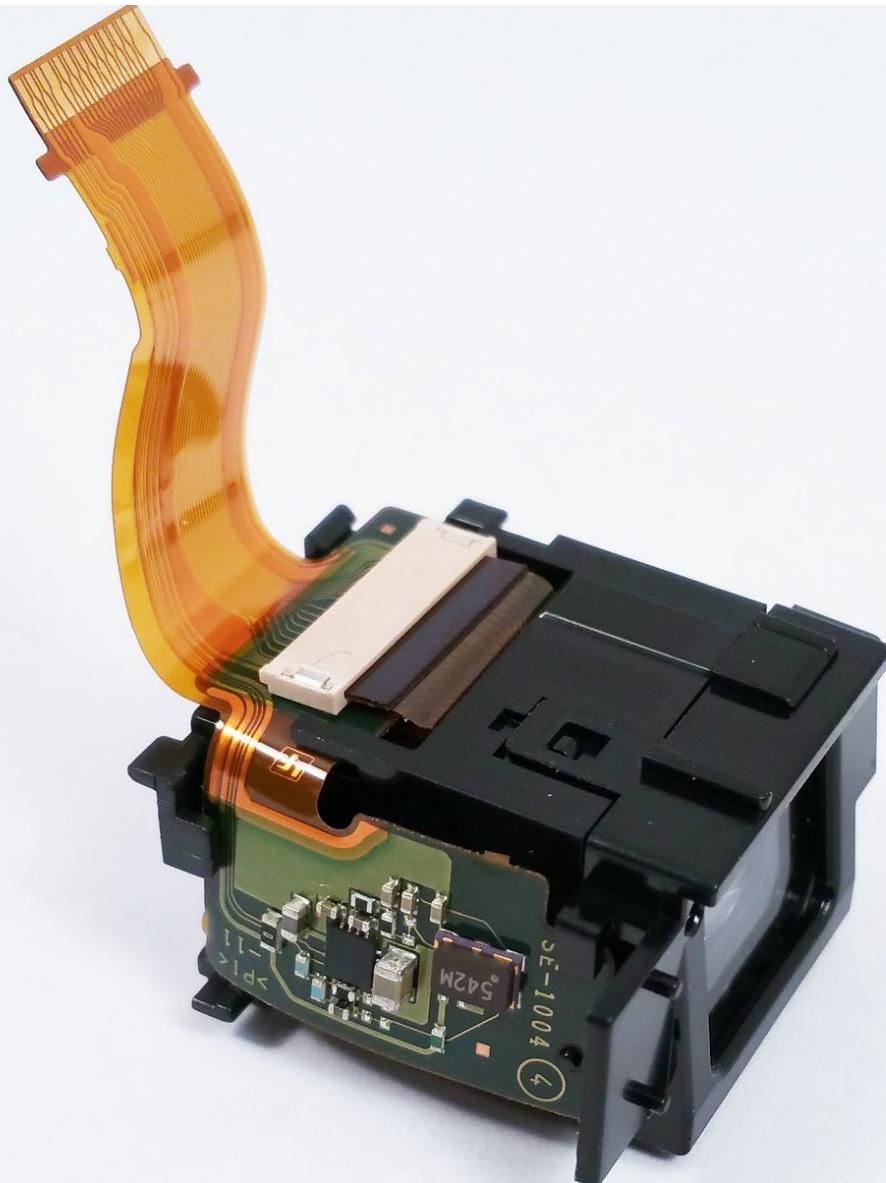

## INTRODUCTION

Is the View Finder not working even after the LCD/Finder button has been pressed? Then the View Finder may need replacing.

### TOOLS:

- Small Phillips Head Screwdriver (1)
- iFixit Opening Tools (1)
- Magnetic Project Mat (1)

## Step 1 — Battery



! Make sure the camera is powered off

- Turn the camera upside down. This is a view of the bottom of the camera.

## Step 2



- Push battery cover away from the camera.

## Step 3



- Push the blue tab that secures the battery. The battery will then spring out.

## Step 4



- Remove the battery.

## Step 5 — View Finder



 Make sure to remove the battery before disassembly to prevent electrocution.


- Remove the 3 (4 cm) Phillips head screws holding the plastic camera housing together. They are located on the back of the camera.
- Remove the 2 (4 cm) Phillips head screws on the right side of the camera.
- Turn the camera upside down and remove the remaining 3 (4 cm) Phillips head screws holding the plastic housing together.

## Step 6





- Using a plastic opening tool, separate the plastic camera housing.

## Step 7

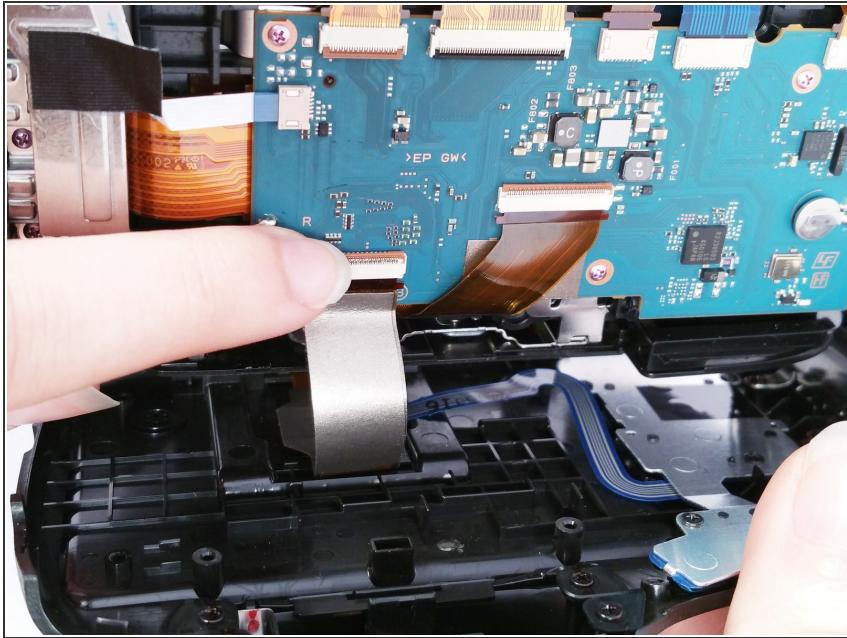



- Disconnect the ribbon wire attaching the screen to the camera.

## Step 8

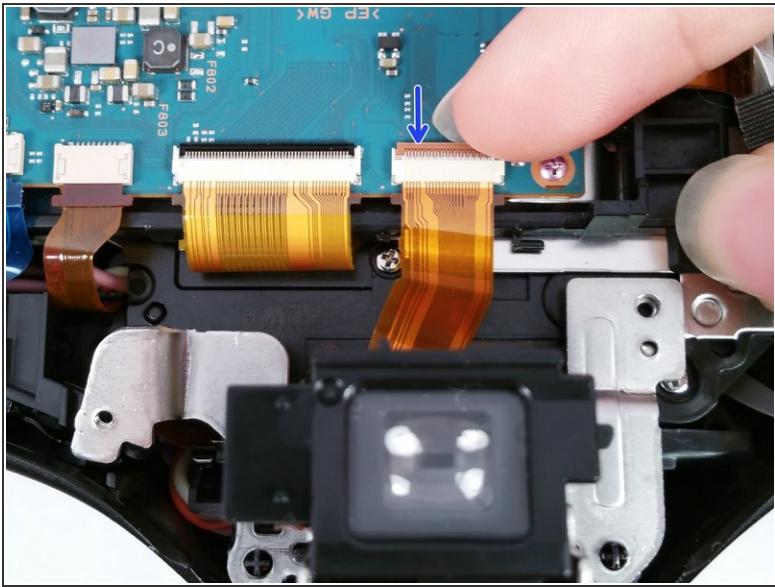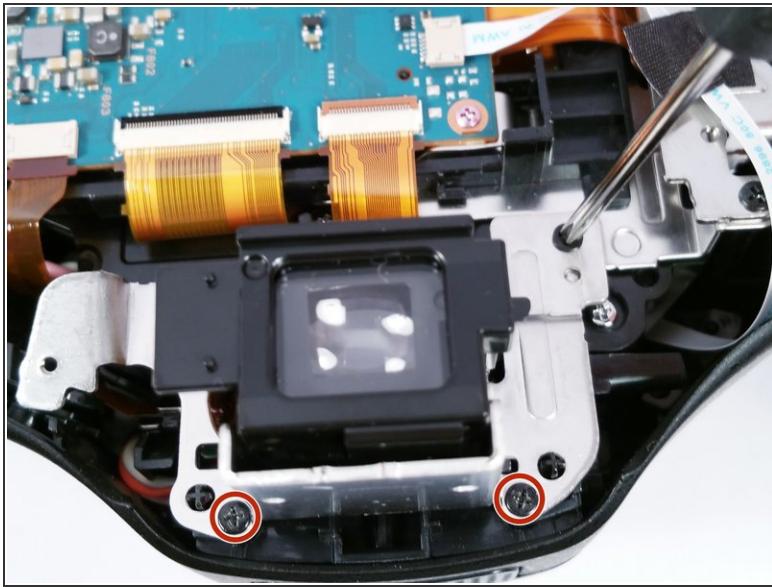

- Remove the 1 (2 cm) Phillips head screw
- Remove the 2 (5 cm) Phillips head screws that mount the View Finder to the camera.
- Carefully disconnect the ribbon wire that connects the View Finder to the Motherboard.

## Step 9

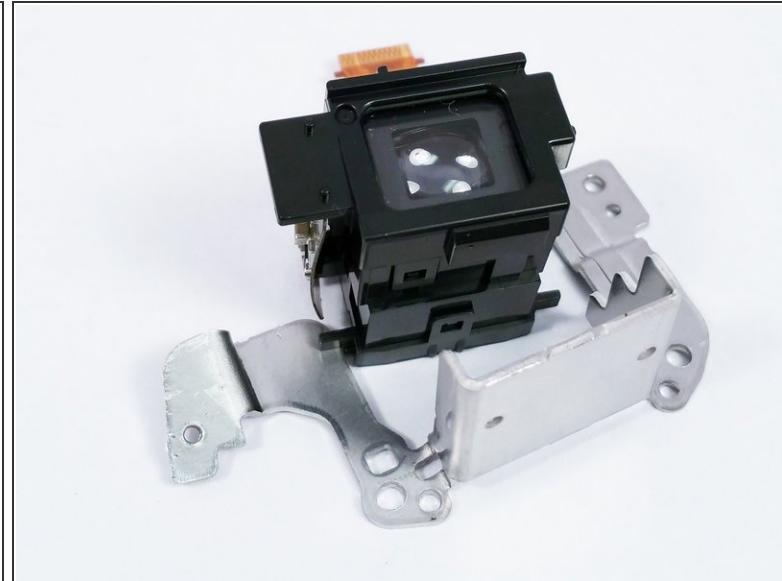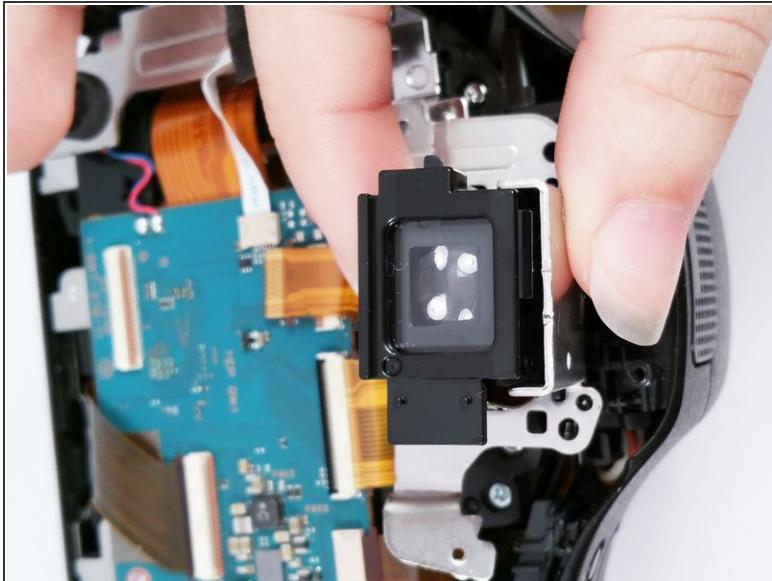

- Gently pull the plastic View Finder off of the metal mounting bracket.

## Step 10



- The replacement View Finder can now be installed.

To reassemble your device, follow these instructions in reverse order.