



Sony Cyber-shot DSC-HX80 Battery Replacement

How to replace a Sony Cyber-shot DSC-HX80 battery.

Written By: Gordon Jones



INTRODUCTION

A failed battery is perhaps the most common problem encountered with a modern point and shoot camera. This guide provides detailed steps for the replacement of a battery in a Sony DSC-HX80



PARTS:

- [Replacement Battery \(1\)](#)

Step 1 — Battery



- Before disassembling any part of the camera, turn off power by pressing down on the ON/OFF button. The ON/OFF button is located on top of the camera.

Step 2



- Open compartment located at the bottom of the camera. Slide the LOCK/OPEN switch to the OPEN side.
- Locate the small blue tab on the side. Pull it in direction away from battery. Remove battery and set aside.

To reassemble your device, follow these instructions in reverse order.