



# Sony Cyber-shot DSC-HX80 LCD Screen Replacement

How to replace a Sony Cyber-shot DSC-HX80 LCD screen.

Written By: Gordon Jones



## INTRODUCTION

In the event of a damaged LCD screen, the only option may be for you to replace it. The following guide will take you step by step through the process.

### TOOLS:

- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — LCD Screen




- Before disassembling any part of the camera, turn off the power by pressing down on the ON/OFF button. The ON/OFF button is located on top of the camera.

## Step 2



- Open the compartment located at the bottom of the camera. Slide the LOCK/OPEN switch to the OPEN side. Locate the small blue tab on the side. Pull it in direction away from battery. Remove the battery and set it aside.

## Step 3

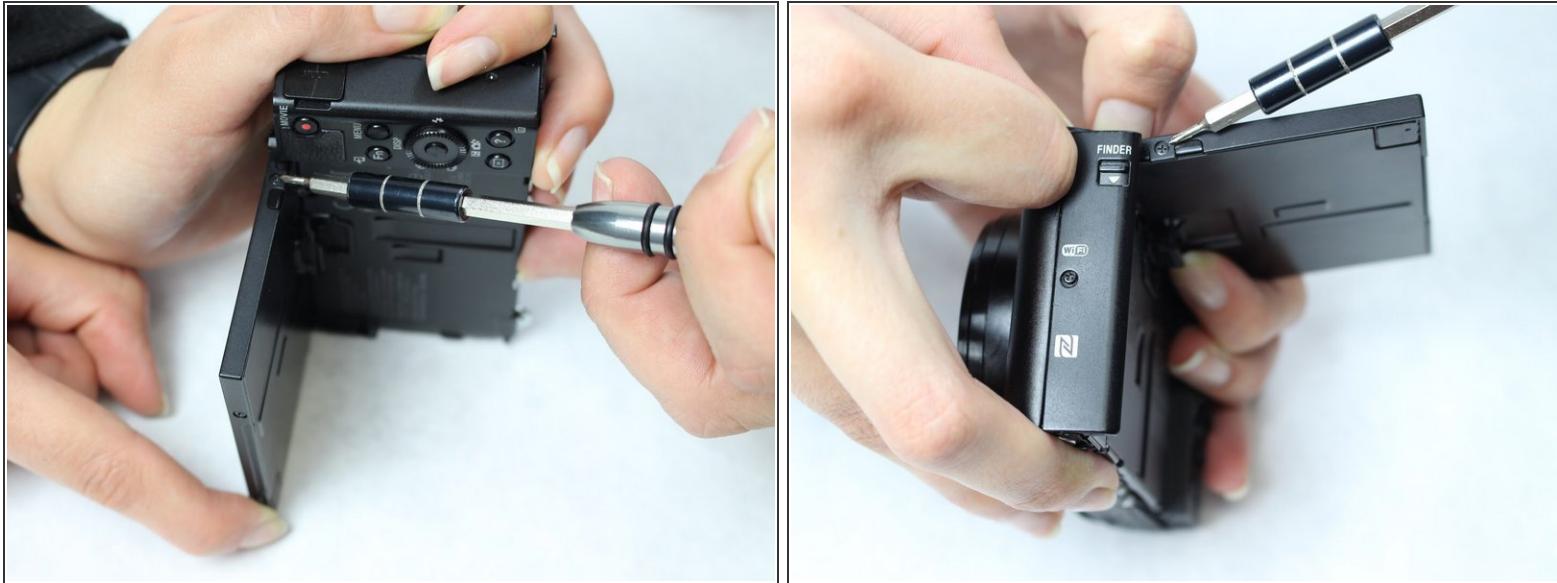

- Flip LCD screen upwards.
- Use the PH000 Phillips head screwdriver to remove the two 0.3 mm Phillips black screws located on the sides of the LCD screen. Place screws on magnetic mat or plastic bag.


## Step 4



- Use the PH000 Phillips head screwdriver to remove the two additional 0.3 mm black Phillips screws located on the top edge of the LCD screen. Place screws on magnetic mat or plastic bag.

This document was generated on 2019-09-22 03:53:24 AM (MST).

## Step 5

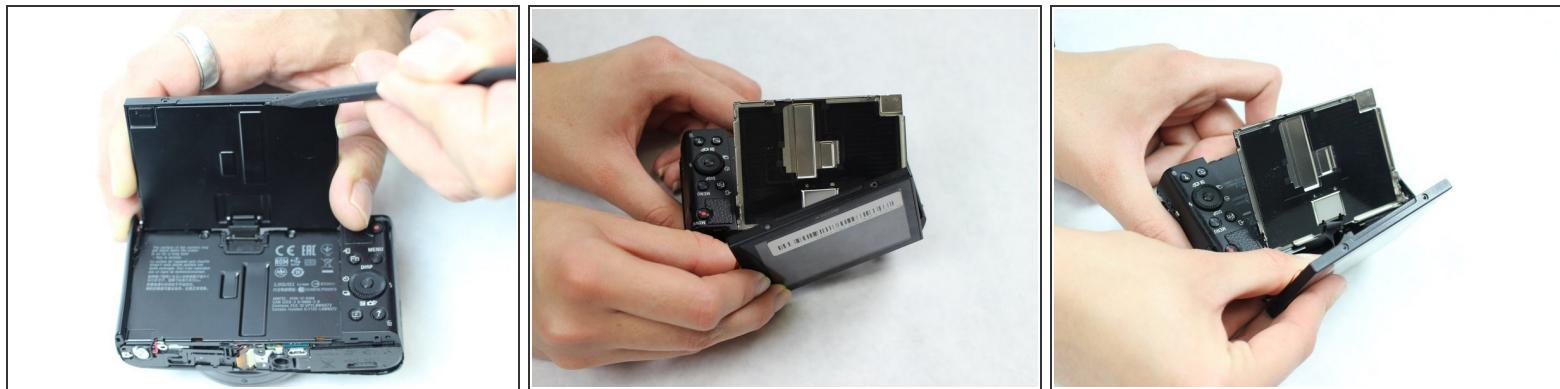

- Use a nylon spudger to gently remove the damaged LCD screen off the camera.
- Replace LCD screen with new one.

To reassemble your device, follow these instructions in reverse order.