



Sony Cyber-shot DSC-P100 LCD Screen Replacement

This is a step-by-step guide to disassembling the LCD screen in the Sony Cyber-shot camera.

Written By: Katie McCraw



 **TOOLS:**

- [Heavy-Duty Spudger \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

Step 1 — Back Casing



- It is necessary to first locate the appropriate screws in order to disassemble the back casing.


Step 2



- Remove the found screws with a small screwdriver.

(i) It is important to put the small screws in a safe location in order to reassemble the casing.

Step 3

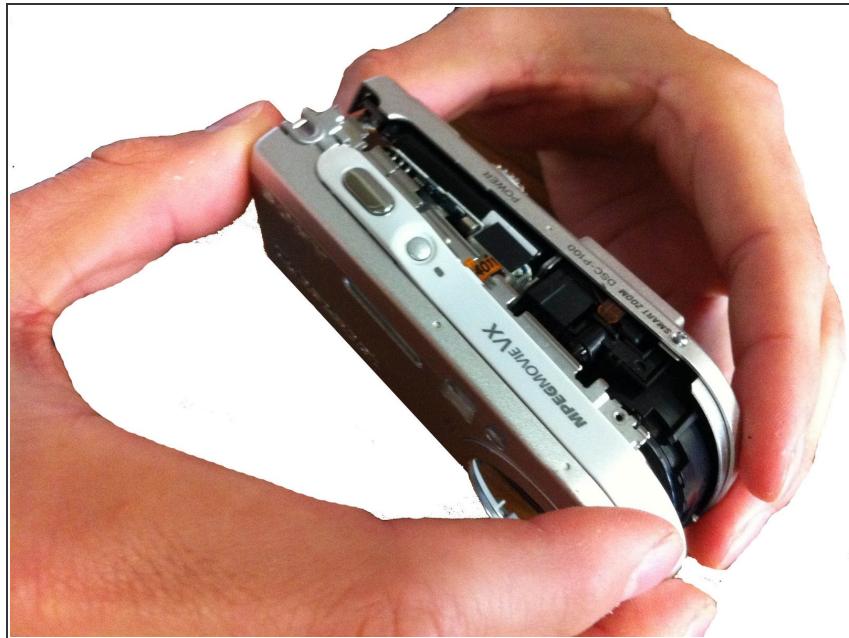

- Carefully pull the back casing away from the camera.

Step 4




- The back casing is now removed from the camera.

Step 5 — LCD Screen




- Using a pry tool, gently pry the top right corner of the LCD screen up. Pry the screen until the four tabs release the screen from its current position.

Step 6

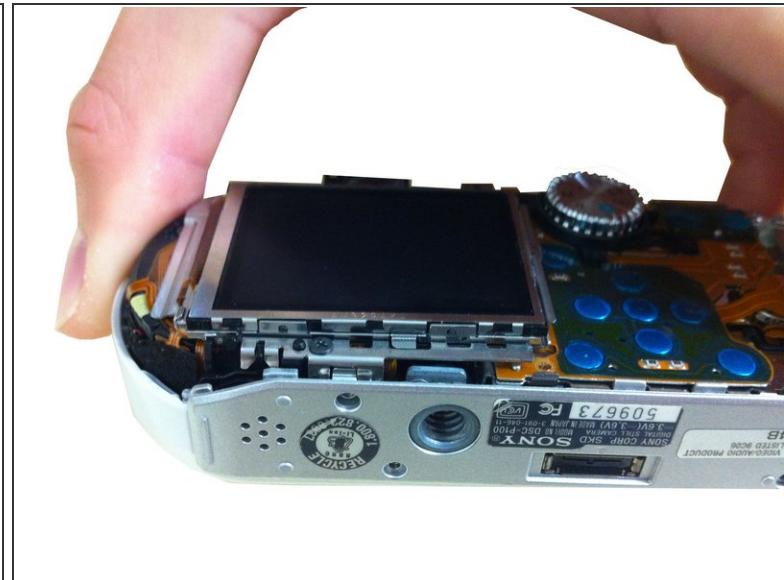

- Push the metal tab on the right side of the screen until the plate underneath the LCD screen is released.

Step 7

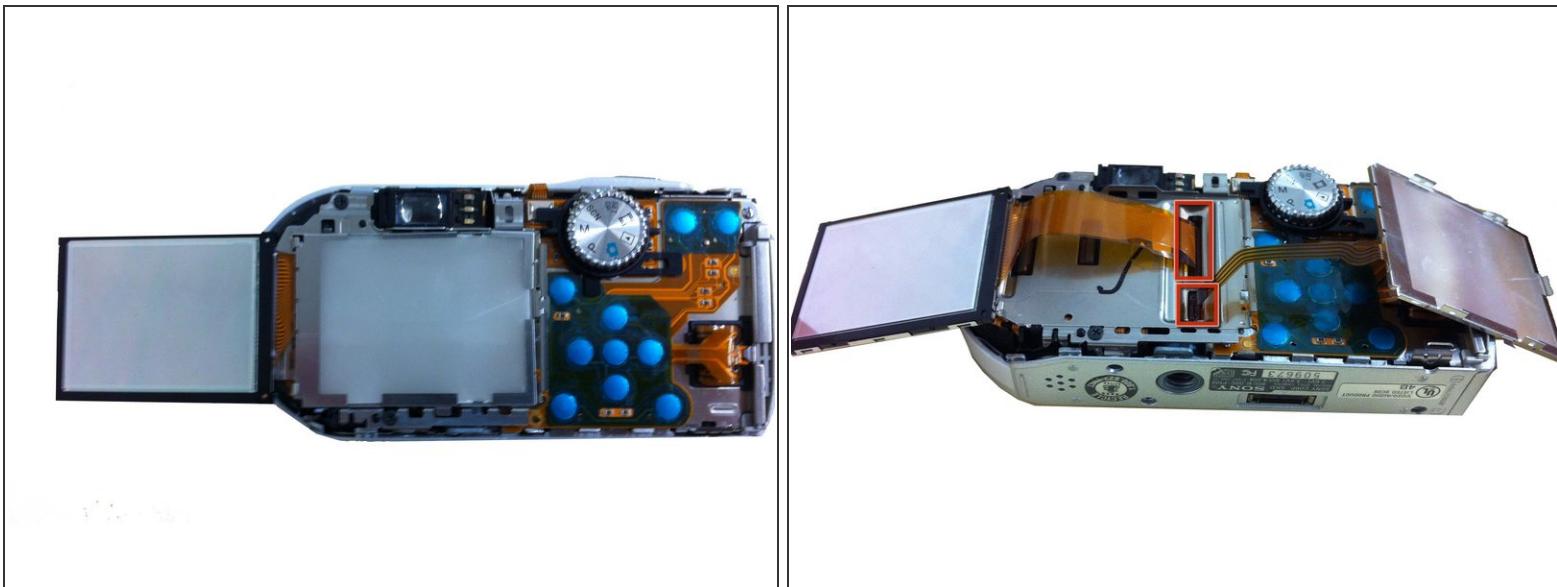

- Unfold the LCD screen and the plate underneath.
- Now the traces holding the screen and plate in place are visible.

Step 8



- Remove the LCD screen plate by gently pulling upward on the trace until the screen is removed from the camera.

To reassemble your device, follow these instructions in reverse order.