



Sony Cyber-shot DSC-P9 Battery Replacement

Remove the battery before working on the camera.

Written By: Jenna Crawford



This document was generated on 2019-09-22 03:17:00 AM (MST).

Step 1 — Battery



- Slide the battery latch down the side of the camera with your hands.
- The latch will automatically pop open.

Step 2



- Unlatch the clip over the battery.
- The battery will partially pop out.

Step 3



- Remove the battery from the camera.

To reassemble your device, follow these instructions in reverse order.