



# Sony Cyber-shot DSC-T500 Battery Replacement

How to replace a Sony Cyber-shot DSC-T500 battery.

Written By: Daniel Surgenor



## INTRODUCTION

By following this simple 2 step guide, you will be able to access the battery, remove it, and replace it.

## Step 1 — Battery



- On the bottom of your camera, slide the gray lock in the direction of the pointed arrow. This will open the battery hatch.

## Step 2



- On the inside of the battery compartment, there is a small blue lever. Push this lever back to release the battery.

To reassemble your device, follow these instructions in reverse order.