




Sony Cyber-shot DSC-T9 Memory Card Replacement

This guide provides instructions to install a memory card into the Sony Cyber-shot DSC-T9 camera.

Written By: Stephannie Allen

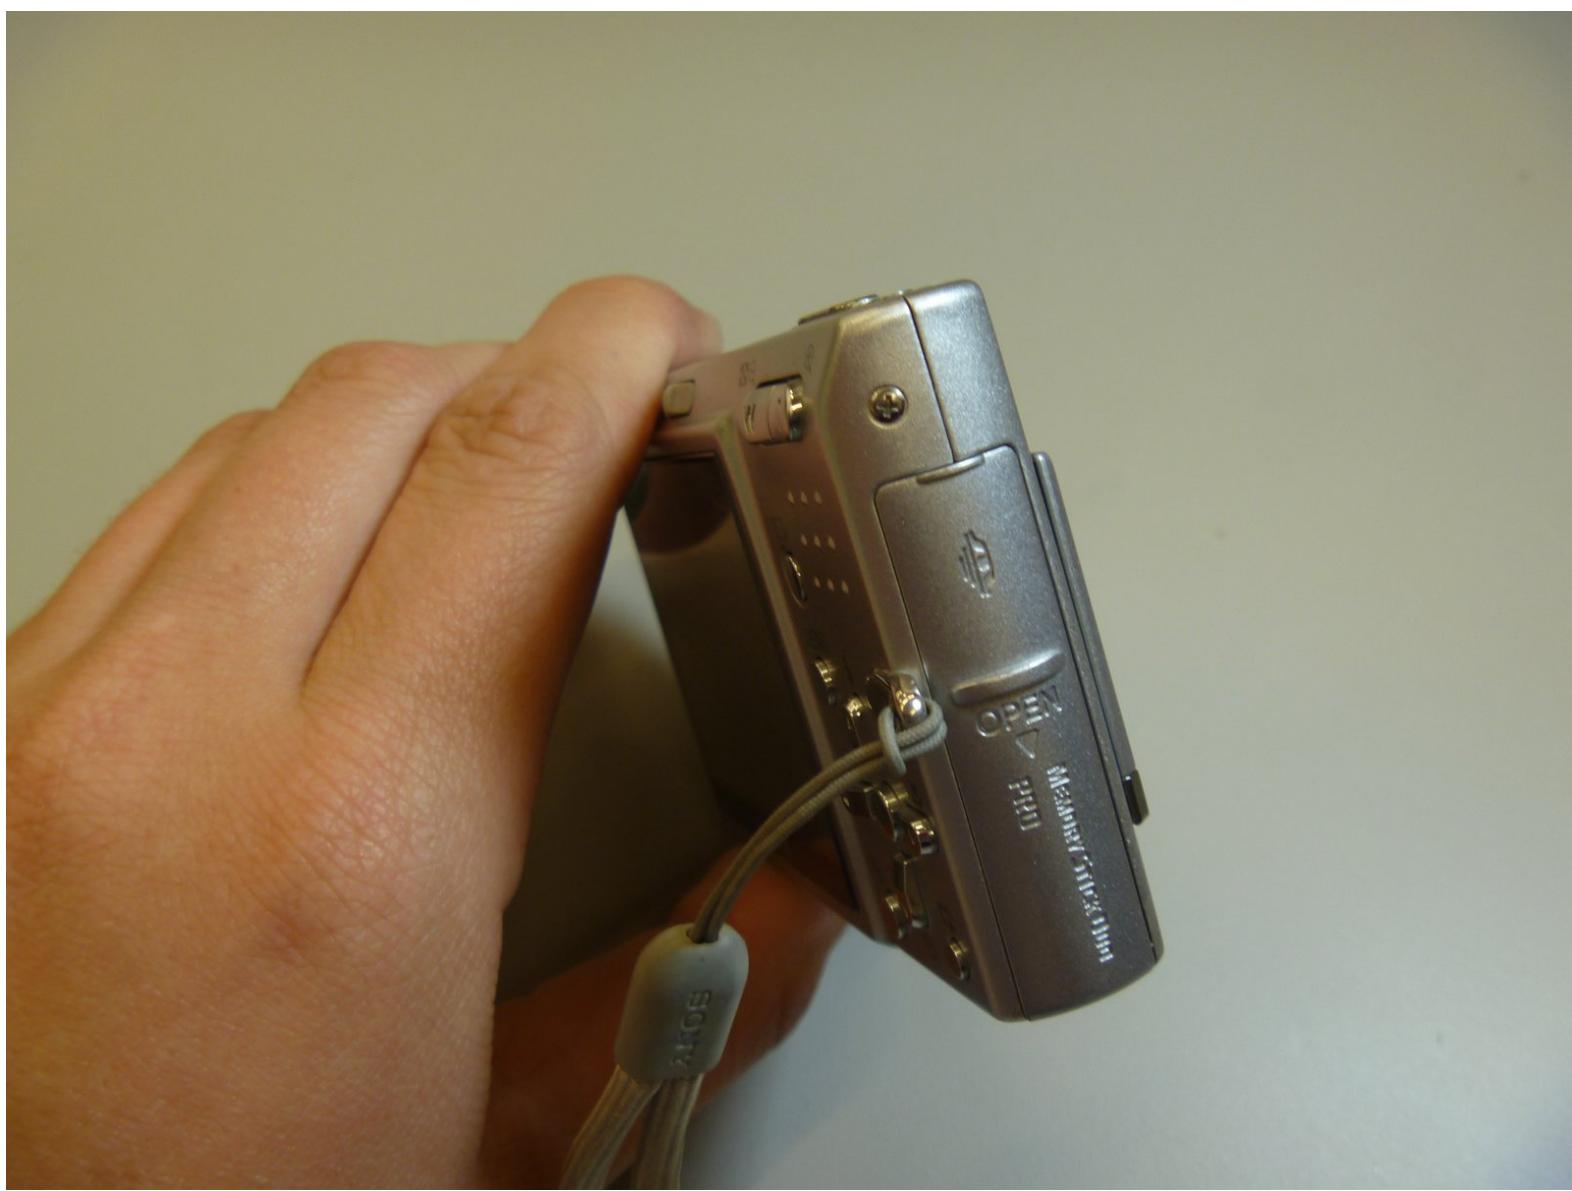

This document was generated on 2019-09-22 03:22:19 AM (MST).

INTRODUCTION


The memory card port is located with the battery port. This guides helps the reader to install a new memory card, needed to store pictures taken.

Step 1 — Memory Card



- The memory card cover is located on the right side of the camera.
- Slide the cover to expose the memory card slot

Step 2

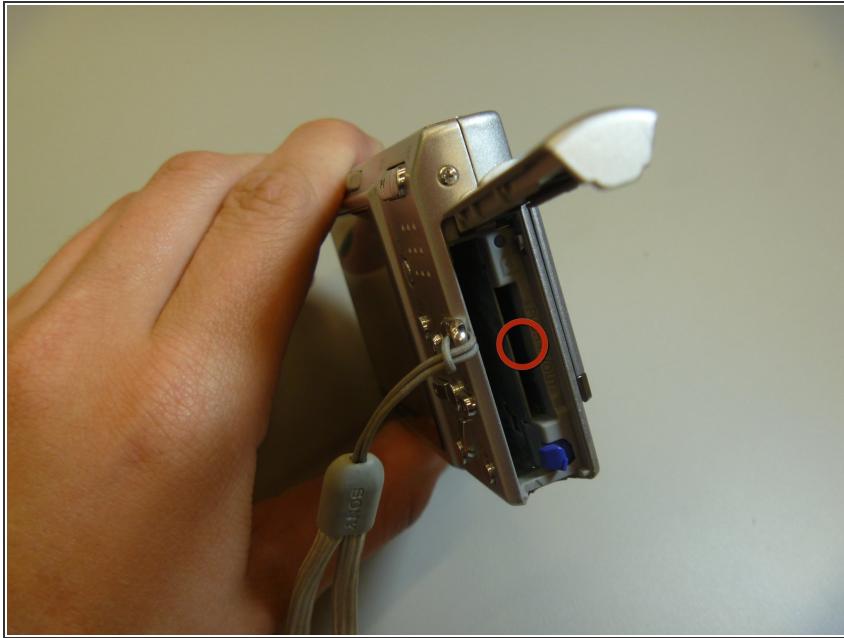

- Ensure that the memory card lines up properly with the slot in the camera.
- Slide memory card in.
- Slide cover closed.

(i) Memory card not shown

To remove the memory card, follow these instructions in reverse order.