



Sony Cyber-shot DSC-TX55 Front Case Replacement

Written By: Megan East



 **TOOLS:**

- **Phillips #00 Screwdriver (1)**

Step 1 — Front Case




- Using the Phillips #00 Screwdriver, remove all of the 0.3 cm screws from both left and right panels.

Step 2



- Gently remove the back cover.

Step 3

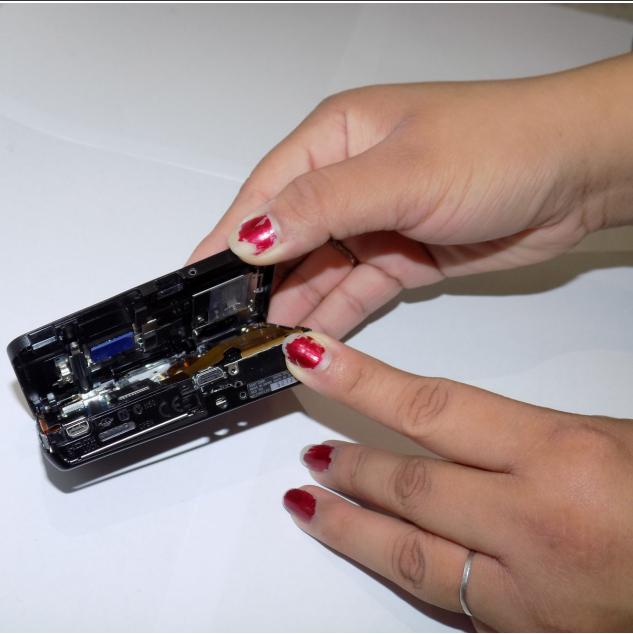

- ⓘ You may need to use some force to remove the front case due to it being stiff.

Step 4



- Follow the steps in reverse order with the new front case to complete the replacement.

To reassemble your device, follow these instructions in reverse order.