



Sony Cyber-shot DSC-TX55 LCD Screen Replacement

This guide will teach you how to properly replace the LCD screen on your device.

Written By: Megan East



 **TOOLS:**

- **Phillips #00 Screwdriver (1)**

Step 1 — LCD Screen



- Slide open the battery cover in the direction that the arrows on device are pointing.
- Flip the blue battery lock to eject the battery.
- Remove the battery from the device.

Step 2



- Using your Phillips #00 screwdriver, remove all four 0.3 cm screws that are located on both ends, as well as the bottom of your Cyber-Shot.

i Make sure that your screws are placed on a flat, still surface so they do not roll away.

Step 3




- Gently pull away the back end of the camera where the LCD screen is located.
- Remove the metal frame that is located around the LCD screen.

Step 4



- Remove the front cover.

Step 5

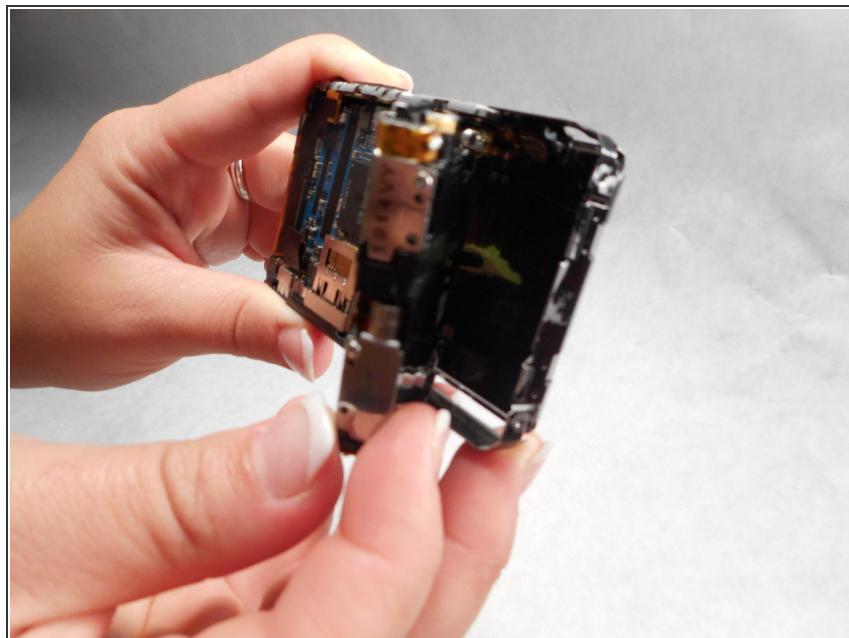

- Gently remove the lens from the device.


(i) The lens will hang on by the orange strips, be careful not to tug on the lens.

Step 6



- Gently slide the LCD screen using very light pressure to the right until it pops open.

Step 7

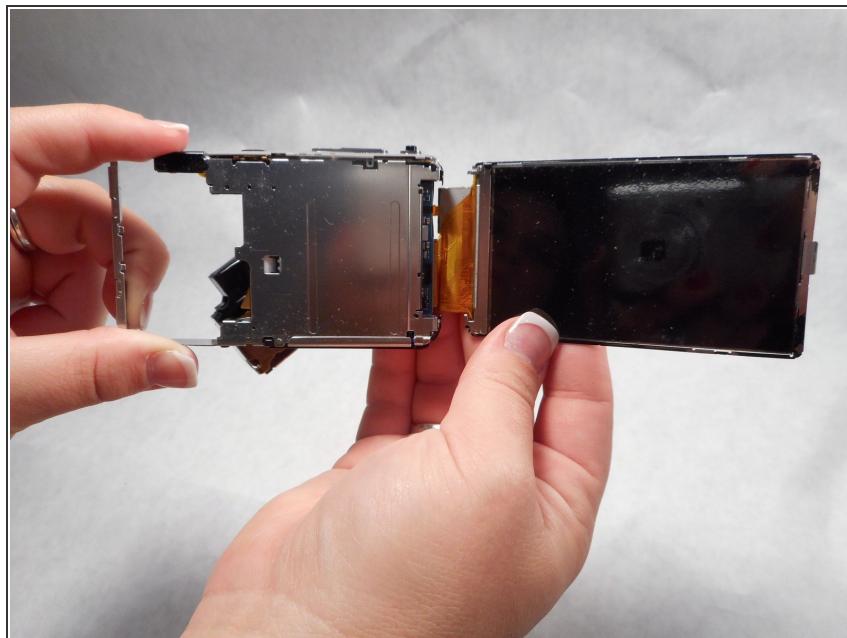

- The LCD screen will open to the right.
- Remove the orange tab from the device.

To reassemble your device, follow these instructions in reverse order.