



Sony Cyber-shot DSC-TX7 Battery Replacement

Follow this guide to replace the battery for the Sony Cyber-shot DSC-TX7.

Written By: Kyle Yarusso



INTRODUCTION

This guide will teach the user how to replace the battery.



PARTS:

- [Lithium-ion NP-BN1 3.6V battery \(1\)](#)

Step 1 — Battery



- The battery compartment is located on the bottom of camera.
- Move the slider from the 'lock' position to the 'open' position.

Step 2



(i) Battery not shown.

- Pull battery from compartment.
- Insert newly charged battery into compartment, as shown in diagram (located in compartment).
- Shut compartment door.
- Move the slider back to the 'lock' position.