




Sony Cyber-shot DSC-W230 Battery Replacement

This guide explains how to replace your camera's battery.

Written By: Alex

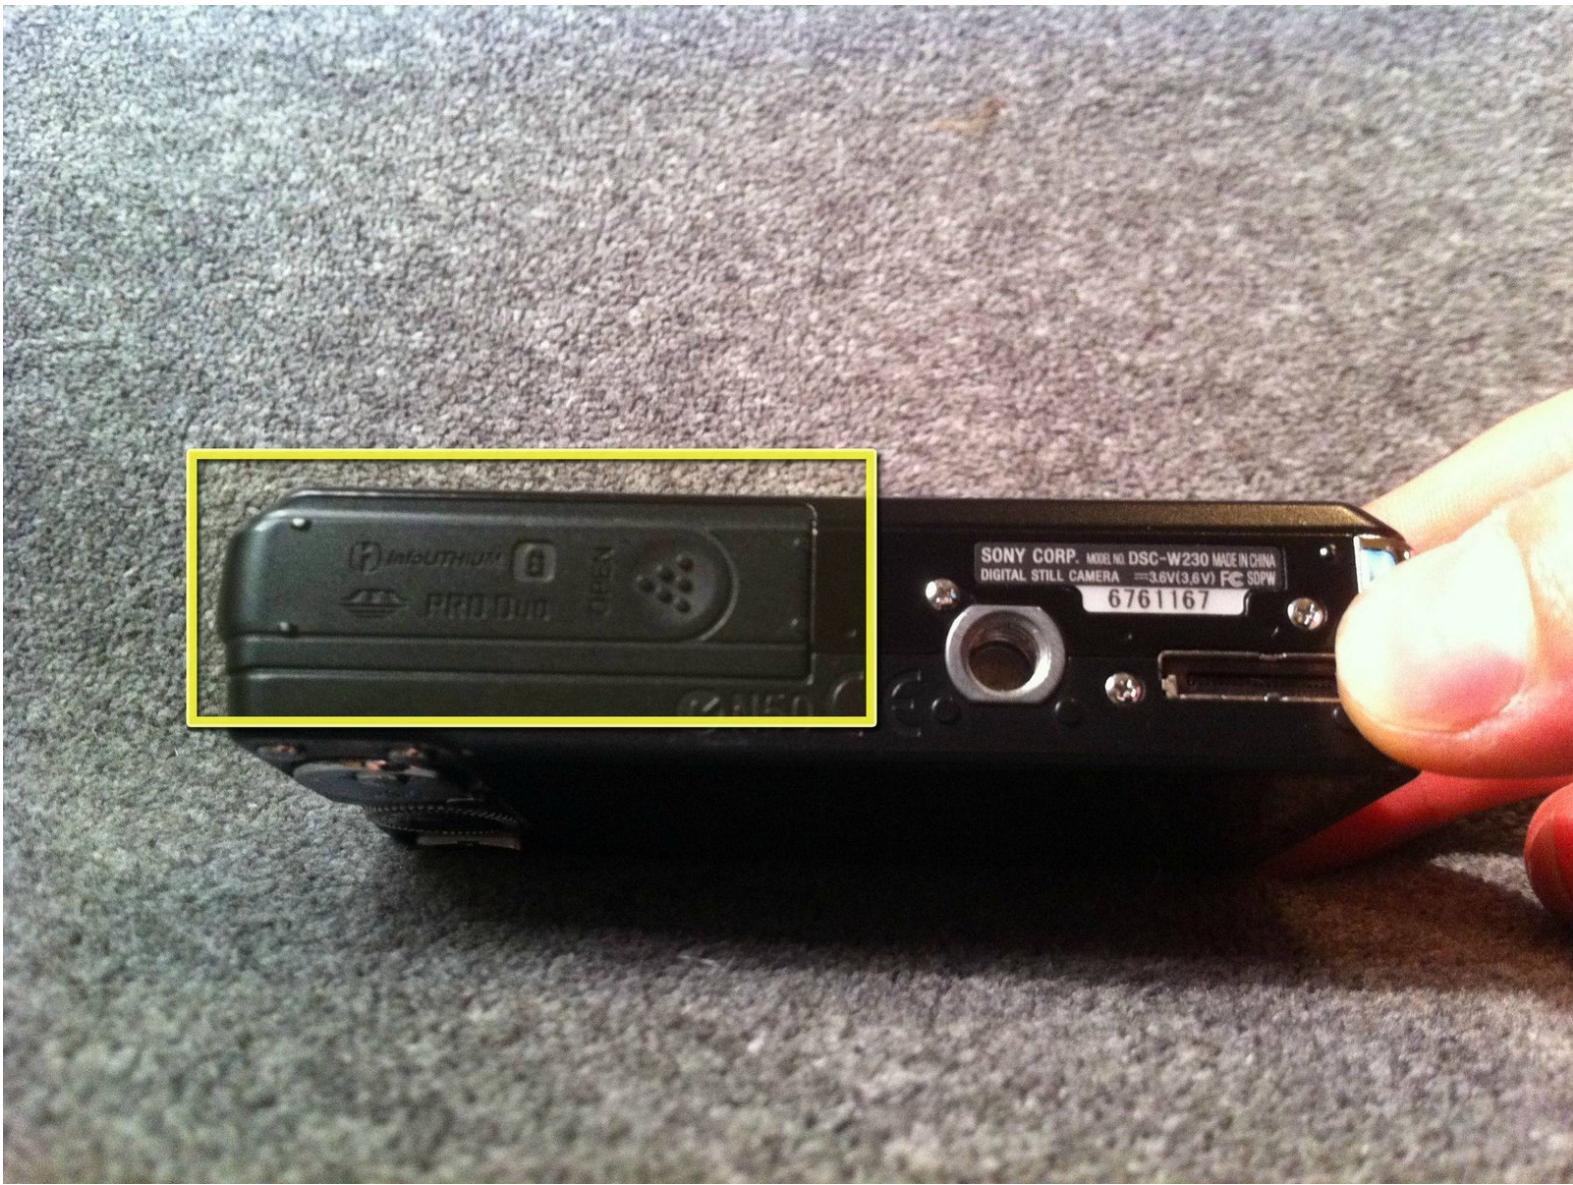

Step 1 — Battery



- Turn the camera face down. Locate the battery cover on the left side of the bottom of the camera.
- Pull up on the far left side of the battery cover towards yourself to open it.
- Locate the small blue tab in the bottom left corner and turn it clockwise to release the battery from its compartment.
- You are now ready to remove and replace your battery.

To reassemble your device, follow these instructions in reverse order.