




Sony Cyber-shot DSC-W5 LCD Screen Replacement

Written By: Thomas

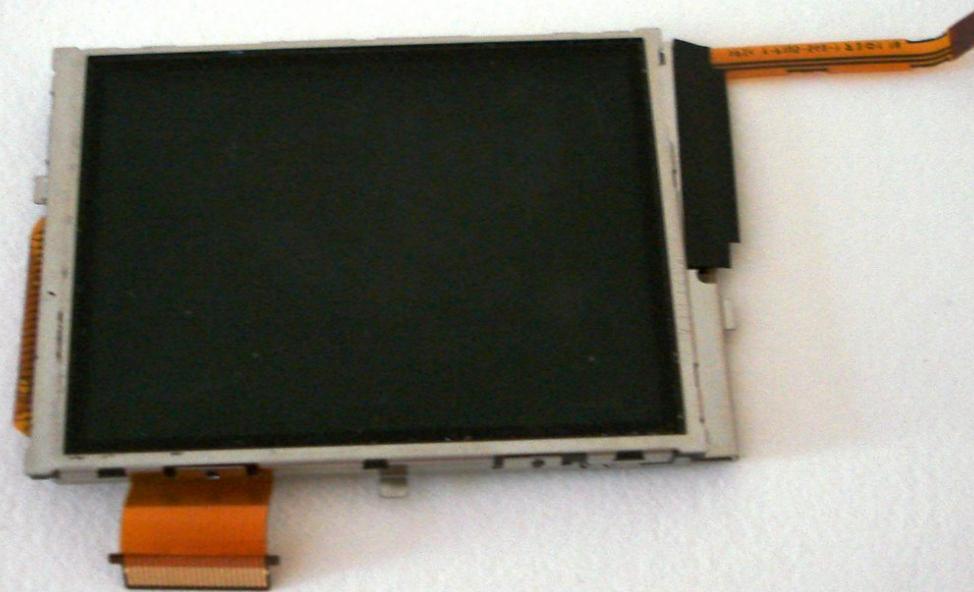


INTRODUCTION

This guide will show you how to access the LCD screen in order to repair or replace the screen.

TOOLS:



- [Phillips #00 Screwdriver](#) (1)
- [Paper Clip](#) (1)

Step 1 — Back Cover

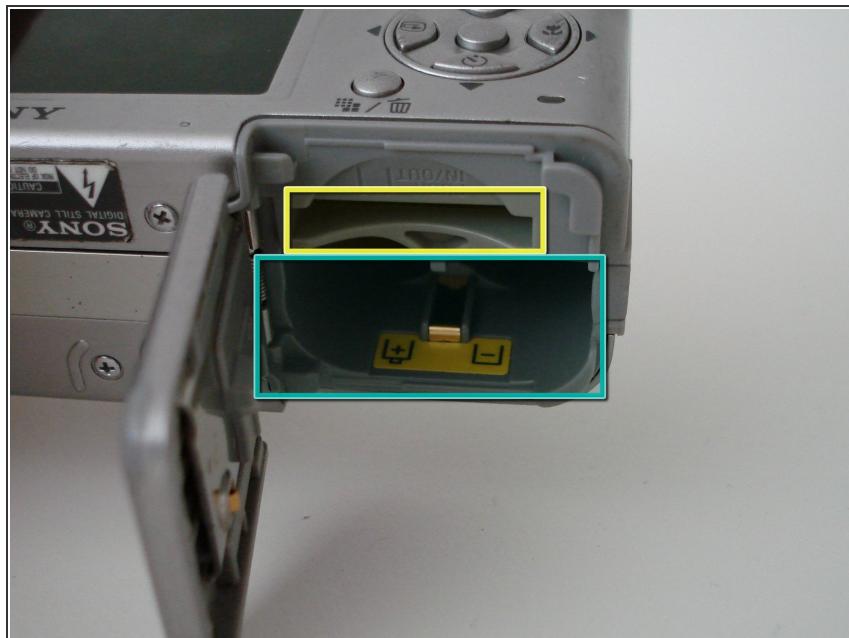

- Remove Memory Stick Pro from the card reader slot on the bottom of the camera.
- Remove both batteries.

Step 2

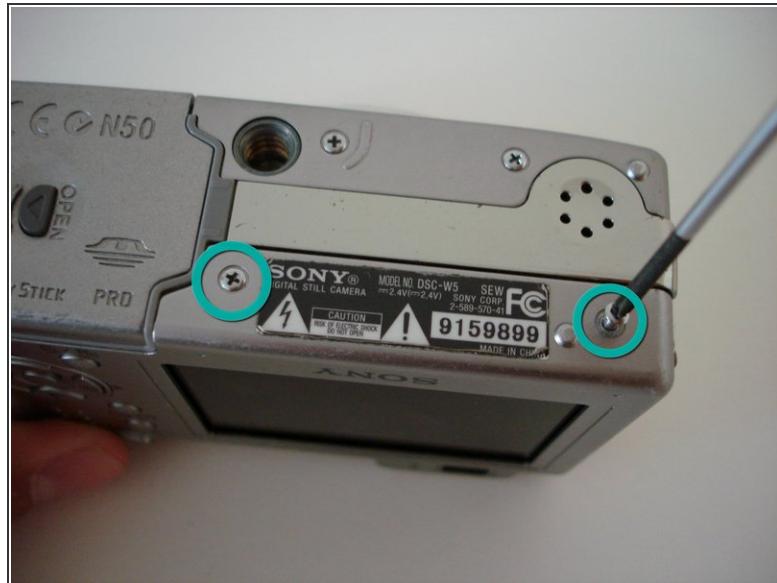
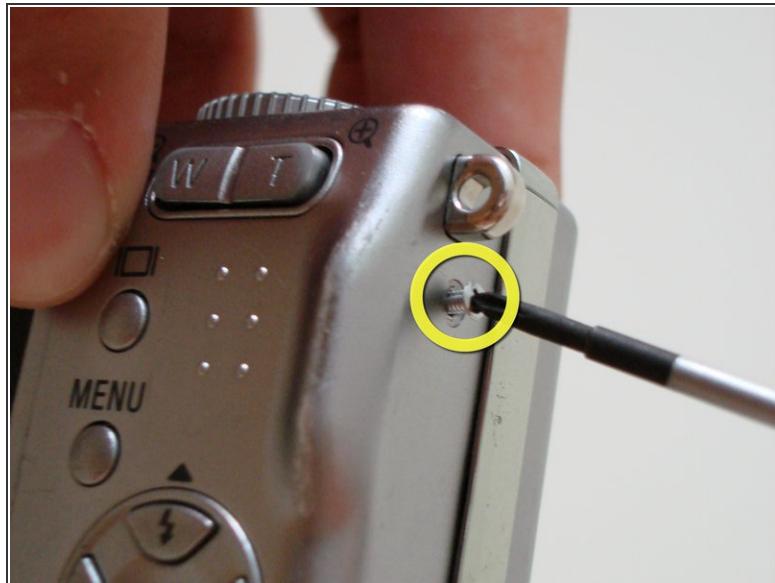


- Remove the single visible screw from both sides of the camera.
- Remove the two screws that are adjacent to the warning label, which is on the underside of the camera.

i Do **NOT** remove all four screws from the bottom.

This document was generated on 2019-09-18 10:23:45 AM (MST).


Step 3

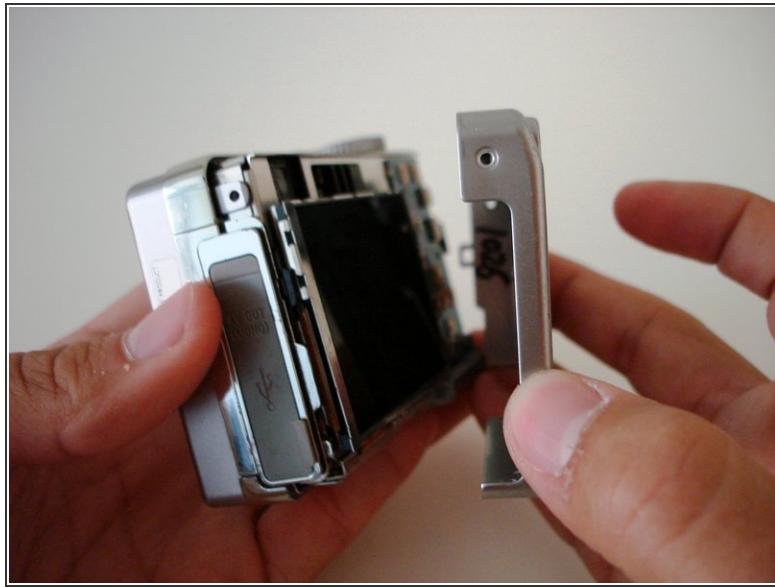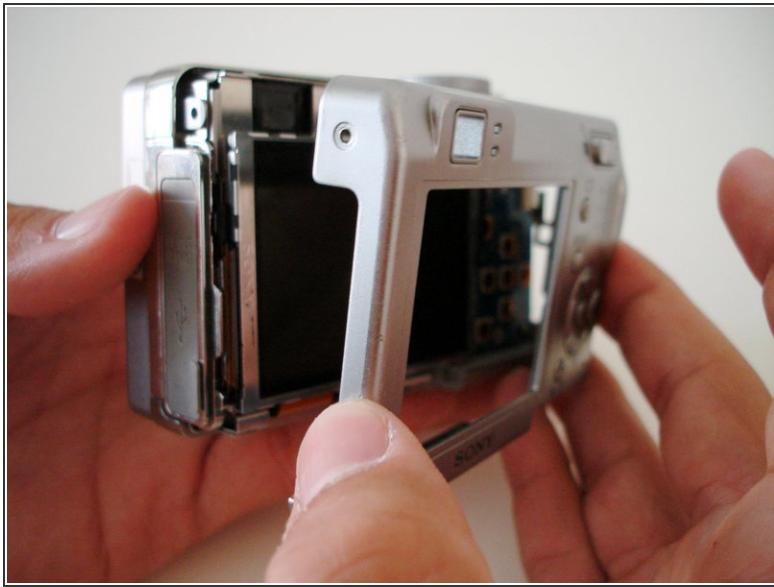

- Gently remove the back cover from the camera.


(i) The first time the case is removed, it will be stiff. Be patient and gently rock the cover back and forth until it slides free.

Step 4 — LCD Screen

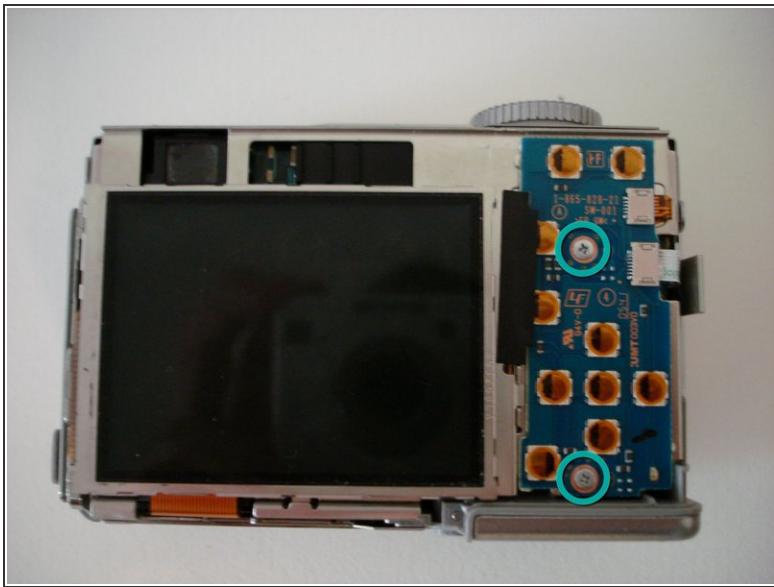


- Remove the two screws holding the circuit board down.

Step 5

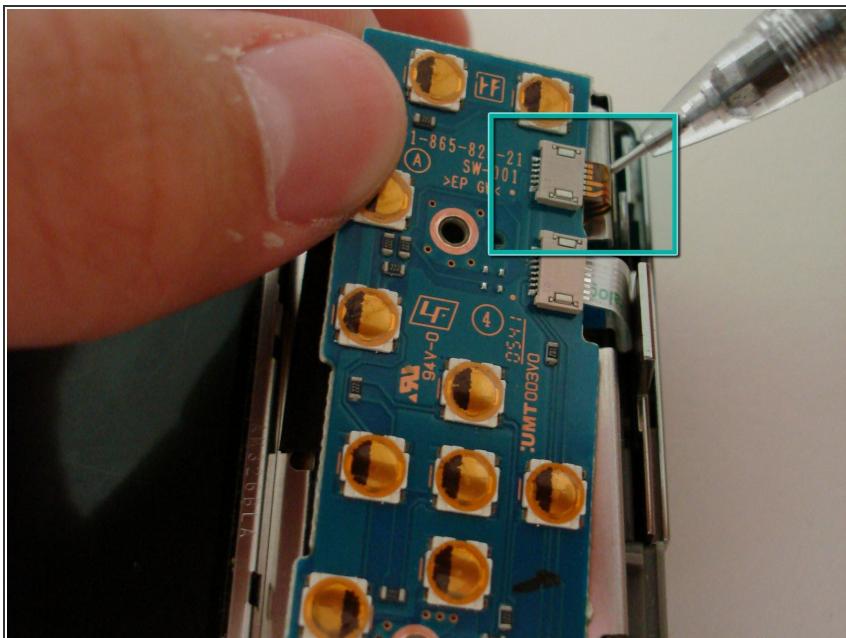

- Detach the orange cable from the board.
- *(i)* Use a thin object, like a paperclip, to gently pry the cable off the connector.

Step 6

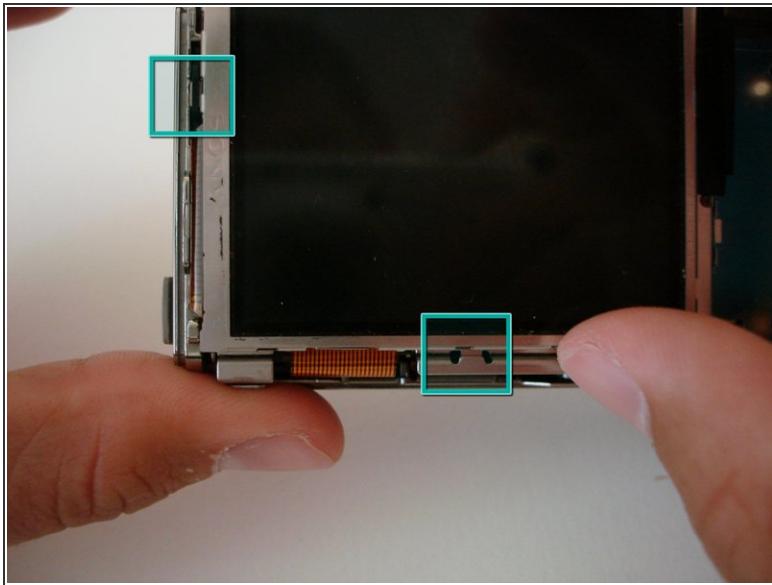

- The LCD screen sits in two slots; one on the bottom, and one on the left edge.
- Slide LCD screen from the two slots.

⚠ Do not attempt to completely remove the screen, as it is still attached to the camera.

Step 7



- To remove the LCD screen, detach the orange cable from the board.
- If needed, replace the LCD screen.

To reassemble your device, follow these instructions in reverse order.