



Sony Cyber-shot DSC-W570 Case Cover Replacement

Replace front and back cover.

Written By: Zizheng Su



INTRODUCTION

Outline what you are going to teach someone how to do.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Case Cover



- There are total 6 Phillip-head screws with the size of 2.93 mm on the outside of the camera.
- To open the case, first gently remove the 2 screws at the bottom of the camera.
-  Make sure the battery compartment door is in lock position.

Step 2



- Turn the camera sideways, remove the two screws located on the left side of the camera.

Step 3



- Then remove the last two screws on the right side of the camera.

Step 4



- To remove the front cover, use a plastic opening tool gently pry the top cover.
- Then gently lift the cover off.

Step 5



- The front cover should now be detached from the camera.

Step 6



- To remove the back case cover from the body.
- First use a plastic opening tool gently pry along the side of the camera.
- Then slowly and gently lift the cover off.

Step 7



- The back cover should now be detached from the camera.

To reassemble your device, follow these instructions in reverse order.