


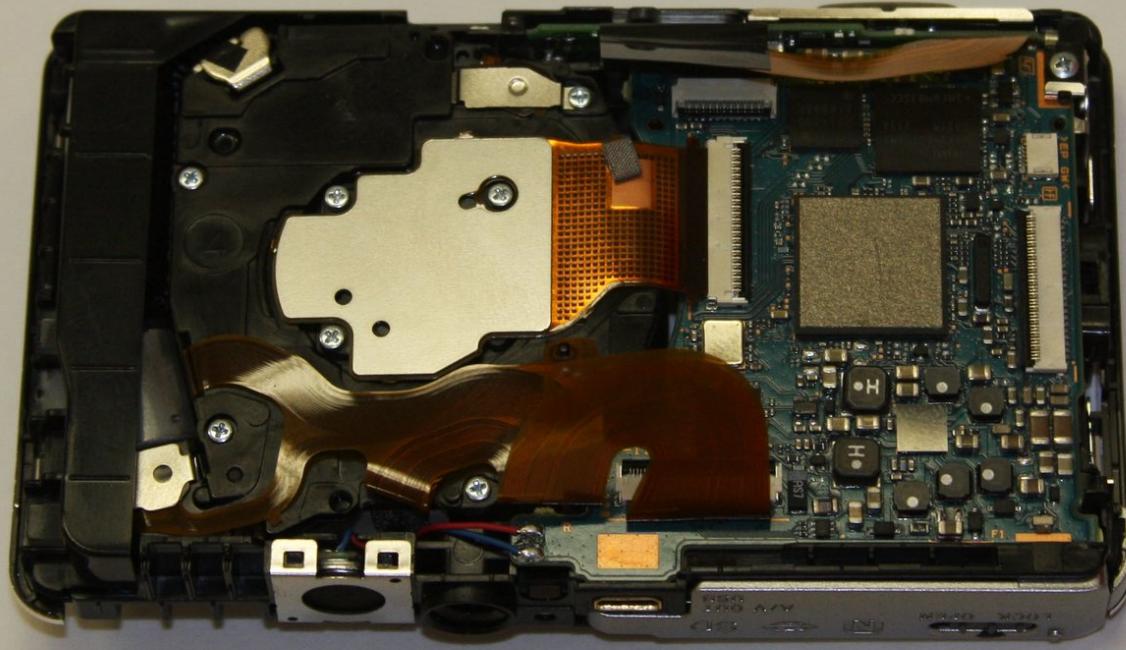

Sony Cyber-shot DSC-W690 Motherboard Replacement

This guide will show you how to remove and replace the motherboard.


Written By: Will Norris



 **TOOLS:**


- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Battery

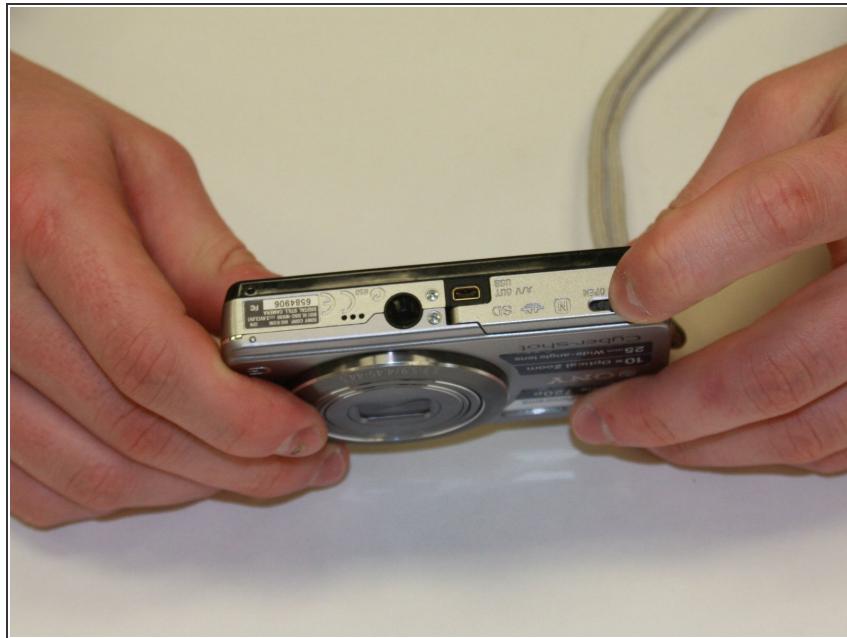


- Open the battery door.

Step 2

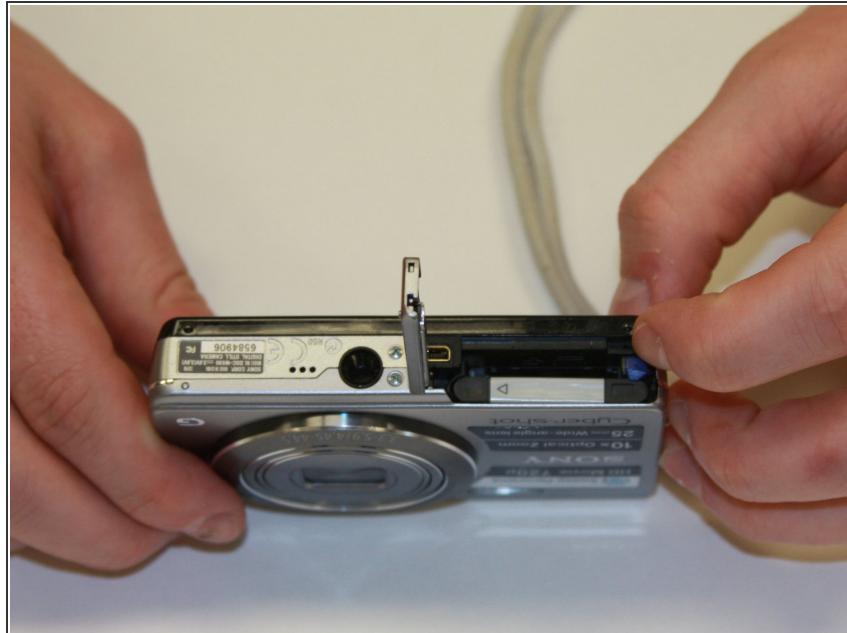


- Open the battery lock to release the battery.

Step 3

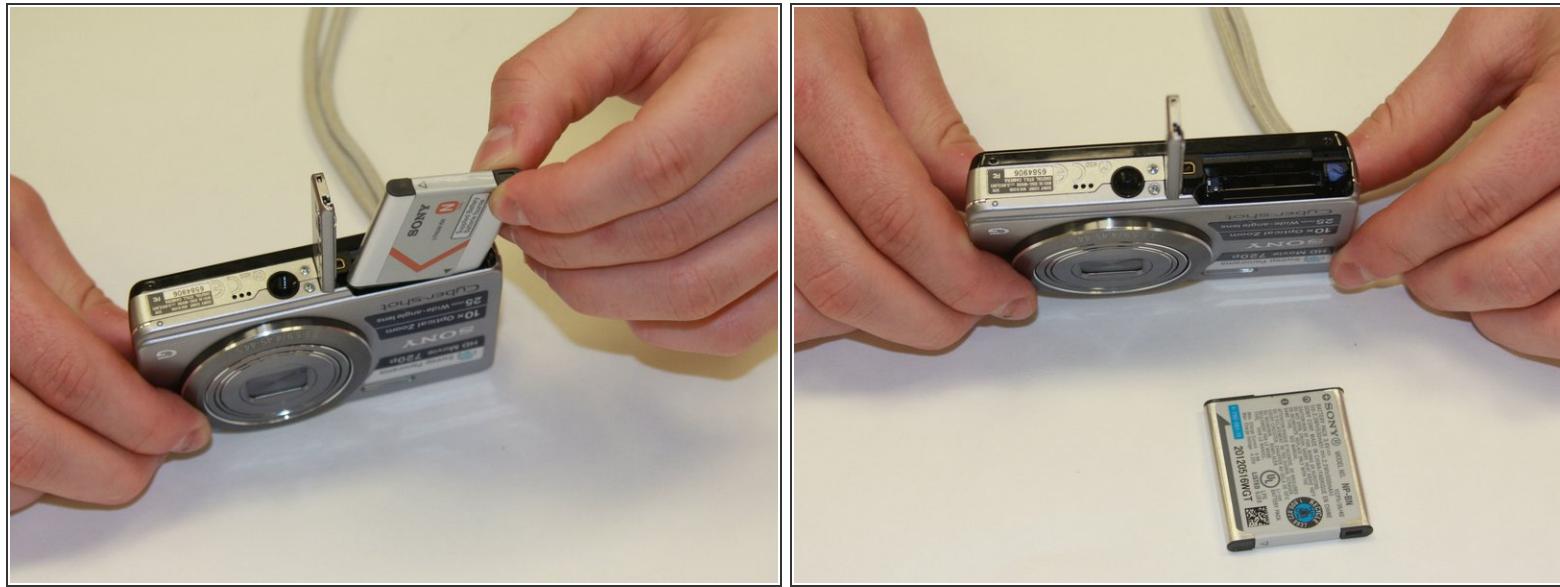


- Remove the battery.

Step 4 — Front and Back Case

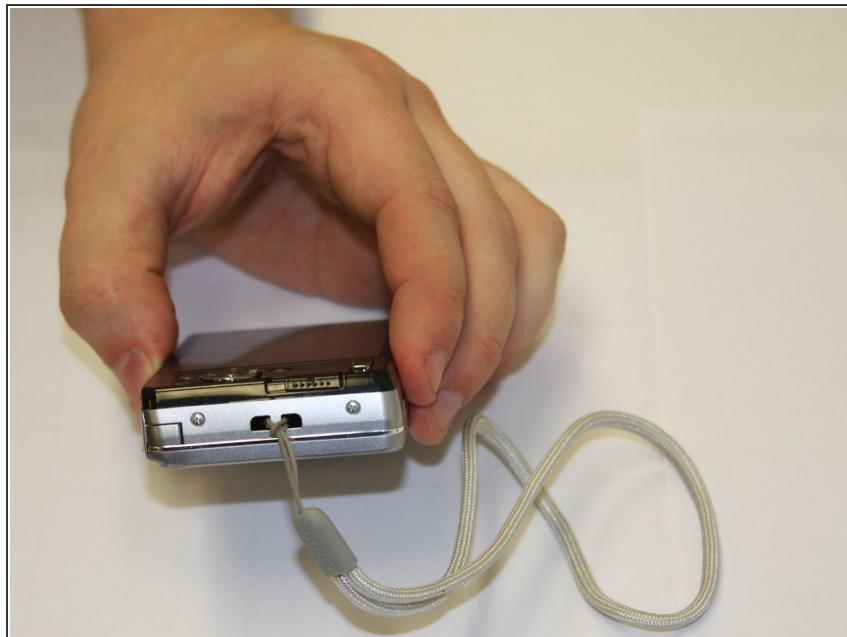


- Remove the wrist strap

Step 5

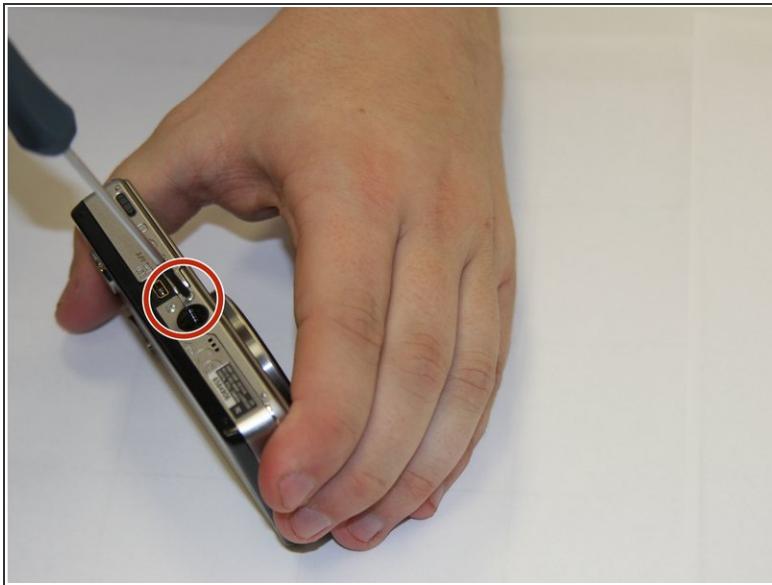


- Remove all 6 3mm outside screws

Step 6

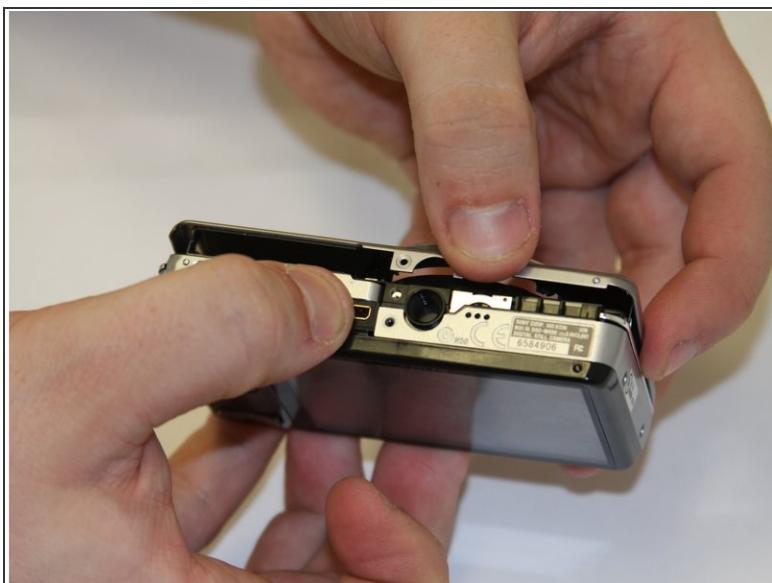

- Carefully pry the case apart.

Step 7 — Motherboard

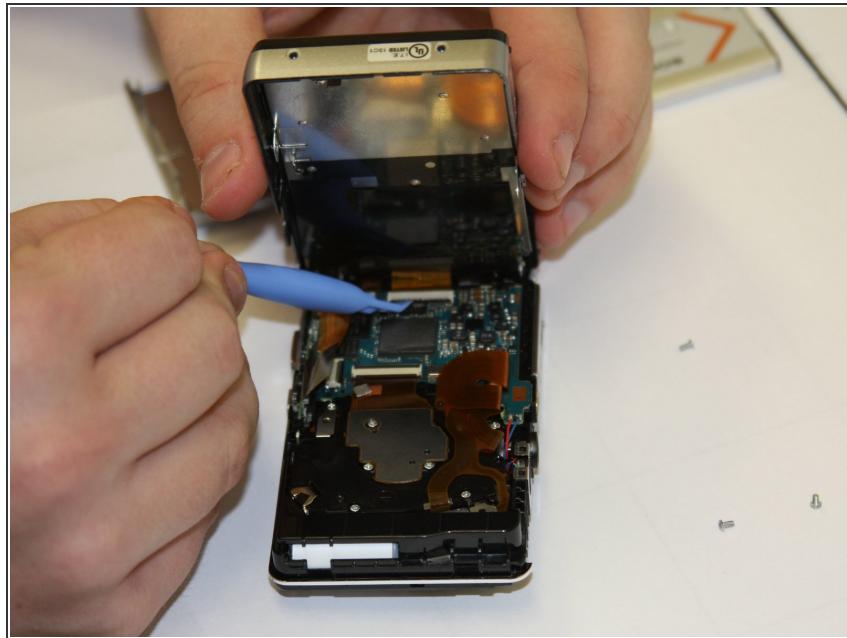

- Carefully remove and replace the motherboard.

To reassemble your device, follow these instructions in reverse order.